


D-826K

SERVICE MANUAL

US Model

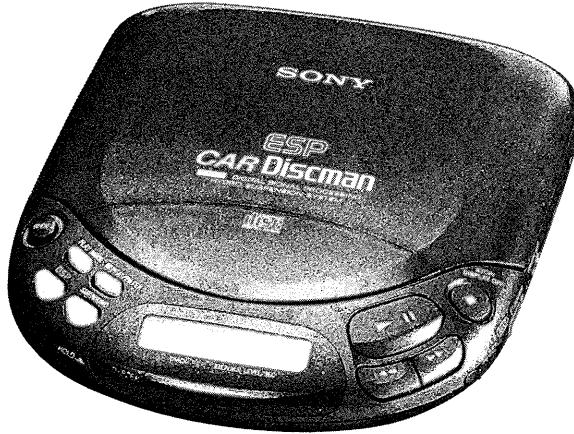

Model Name Using Similar Mechanism	D-828K
Optical Device Name	KSM-331AAN (S)
Optical Pick-Up Name	KSS-331A

SPECIFICATIONS

System	Compact disc digital audio system	Dimensions	Approx. 138 x 31.5 x 159.0 mm (5½ x 1¼ x 6⅔ in.) (w/h/d)
Laser diode properties	Material: GaAlAs Wavelength: $\lambda=780$ nm Emission duration: Continuous Laser output: Less than 44.6 μW (This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.)	Mass	incl. projecting parts and controls Approx. 310 g (11 oz.) not incl. rechargeable battery
Error correction	Sony Super Strategy Cross Interleave Reed Solomon Code	Supplied accessories	AC power adaptor (1) Velcro tapes (2) Connecting cord (phono plug x 2 ↔ stereo miniplug) (1) Car battery cord (1) Spare fuse (1) Spiral tube (1) Car connecting pack (1)
D-A conversion	1-bit quartz time-axis control		
Frequency response	20 – 20,000 Hz -3dB (measured by EIAJ CP-307)		
Output (at 4.5 V input level)	Line output (stereo minijack) Output level 0.65 V rms at 50 kilohms Load impedance over 10 kilohms Headphones (stereo minijack) 4 mW + 4 mW at 16 Ω		Design and specifications subject to change without notice.
General	Supplied:		
Power requirements	• DC IN 4.5V jack accepts the Sony AC power adaptor for use on 120 V AC, 60 Hz. • DC IN 4.5 V jack accepts the car battery cord for use on car battery. Not supplied: • DC 2.4 V rechargeable battery pack • DC 3 V two size AA (LR6) alkaline batteries		

COMPACT DISC COMPACT PLAYER
SONY®

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
Specifications	1	
1. GENERAL		
Location and Function of Controls	3	
Using in a Car	3	
2. SERVICE NOTE	4	
3. SERVICE MODE	5	
4. ELECTRICAL ADJUSTMENTS	6	
5. DIAGRAMS		
5-1. Block Diagram	10	
5-2. Printed Wiring Boards	14	
5-3. Schematic Diagram	19	
5-4. IC Pin Function	27	
6. EXPLODED VIEWS	29	
7. ELECTRICAL PARTS LIST	32	

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

This Compact Disc player is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the bottom exterior.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

Before Replacing the Optical Pick-Up Block

Please be sure to check thoroughly the parameters as per the "Optical Pick-Up Block Checking Procedures" (Part No.: 9-960-027-11) issued separately before replacing the optical pick-up block.

Note and specifications required to check are given below.



- FOK output: IC501 ⑫ pin
When checking FOK, remove the lead wire to disc motor.
- S curve P-to-P value: 2.5 Vp-p
When checking S curve P-to-P value, remove the lead wire to disc motor.
- Adjusted part for focus gain adjustment: RV503
- RF signal P-to-P value: 0.9 – 1.3 Vp-p
- Traverse signal P-to-P value: 1.2 – 2.2 Vp-p
- The repairing grating holder is impossible.
- Adjusted part for tracking gain adjustment: RV504

SECTION 1

GENERAL

This section is extracted from instruction manual.

Location and Function of Controls

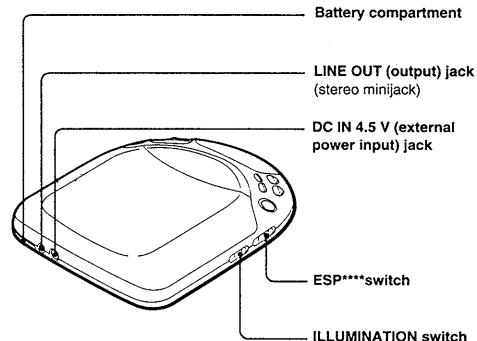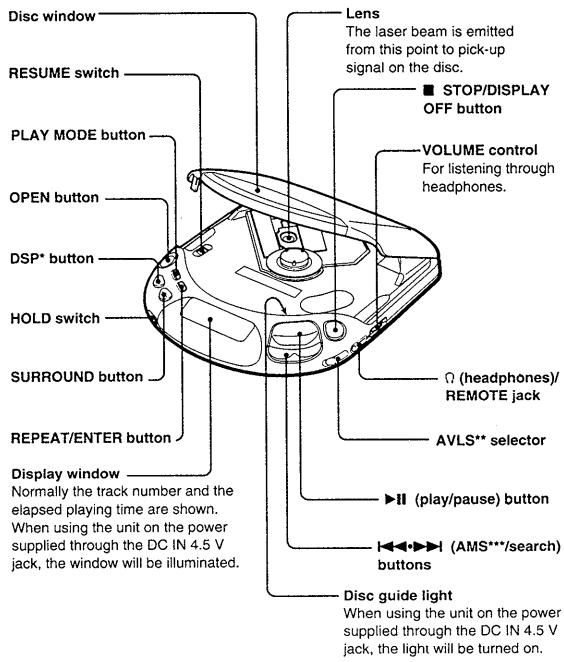

- Digital Signal Processing
- Automatic Volume Limiter System
- Automatic Music Sensor
- Electronic Shock Protection

To change the illumination colors

Slide the ILLUMINATION switch to GREEN or AMBER. When the unit is in the DSP or SURROUND mode, the DSP or SURROUND button is illuminated with opposite color to the other buttons.

DSP or SURROUND button	Other buttons
amber	green
green	amber

Using in a Car

You can use this unit with a car cassette deck by connecting it with the supplied car battery cord and car connecting pack.

Installation


Precautions

Do not install the unit in a location which:



- interferes with your driving.
- may be dangerous for passengers.
- interferes with the glove box lid or ashtray when opening it.
- is near a heat source.
- is subject to direct sunlight, excessive dust, or moisture (especially on a dashboard).

Please understand that we will not incur any obligations for troubles caused by incorrect installation.

The unit can be installed directly on a flat surface, such as a console box, with the supplied Velcro tapes.

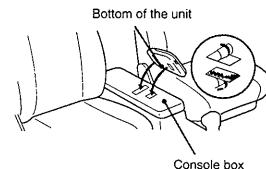

Car Battery Cord

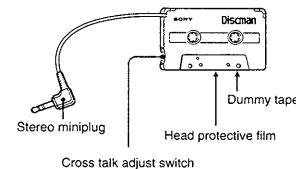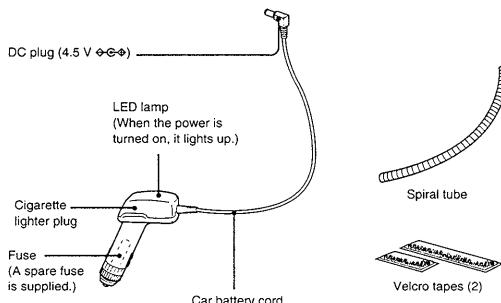

Notes

- Select the position of the cross talk adjust switch to obtain the optimum sound quality.
- Do not remove the head protective film (metal path).
- Do not pull out or contaminate the dummy tape.

SECTION 2

SERVICE NOTE

Precautions for Checking Emission of Laser Diode

Laser light of the equipment is focused by the object lens in the optical pick-up so that the light focuses on the reflection surface of the disc. Therefore, be sure to keep your eyes more than 30 cm apart from the object lens when you check the emission of laser diode.

Laser Diode Checking Methods

During normal operation of the equipment, emission of the laser diode is prohibited unless the upper panel is closed while turning ON the S810 (push switch type).

The following two checking methods for the laser diode are operable.

- **Method-1 (In the service mode or normal operation):**

Emission of the laser diode is visually checked.

1. Open the upper panel.
2. Push the S810 as shown in Fig. 1.
3. Check the object lens for confirming normal emission of the laser diode. If not emitting, there is a trouble in the automatic power control circuit or the optical pick-up.
During normal operation, the laser diode is turned ON about 2.5 seconds for focus searching.

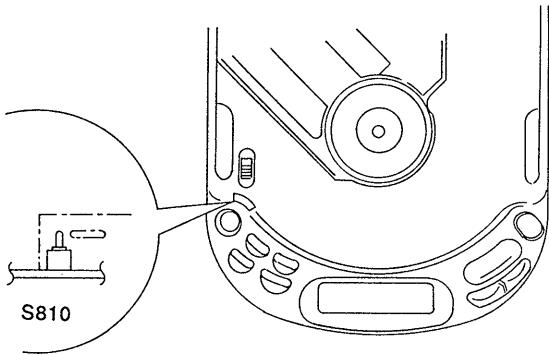



Fig. 1 Method to push the S810

- **Method-2 (In service mode or normal operation):**

Check the value of current flowing in the laser diode.

1. Remove the upper panel.
2. Read the current printed on the label attached on the rear side of the optical pick-up.

(Label stuck outside of the optical pick-up)

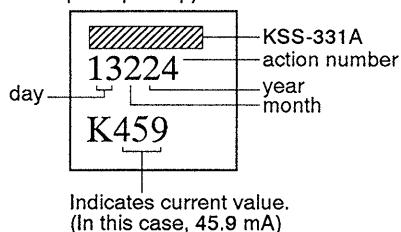

3. Connect a VTVM as shown in Fig. 2.
 4. Press the **►II** key.
 5. Calculate current value by the reading of the VTVM.
Reading of the tester (V) ÷ 1 = current value (A)
(Example) Reading of the VTVM of 37 mV:
 $37 \text{ mV} \div 1 \Omega = 0.037 \text{ (A)} = 37 \text{ mA}$
 6. Check that the current value is within the following range.
 - Current value of the label $\pm 5\%$ mA (25°C)
Variation by temperature: $0.4 \text{ mA}/^\circ\text{C}$
Current increases with temperature increased.
Current decreases with temperature decreased.
- If the current is more than the range above, there is a trouble in the automatic power control circuit or the laser diode is in deterioration.
If less than the range, a trouble exists in the automatic power control circuit or the optical pick-up.

- MAIN BOARD - (Side B)

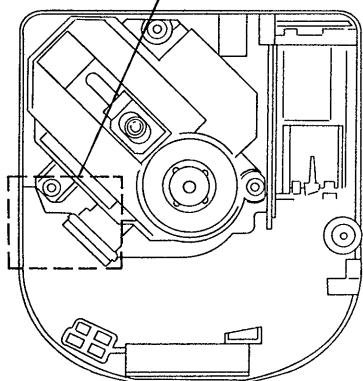
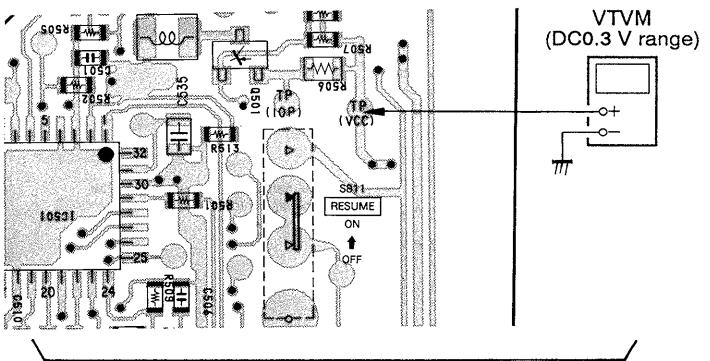


Fig. 2 VTVM connecting location

SECTION 3

SERVICE MODE

Service Mode (Service program)

The equipment is provided with a service program built in the microcomputer, like conventional models.

Service program operation methods are described in the following.


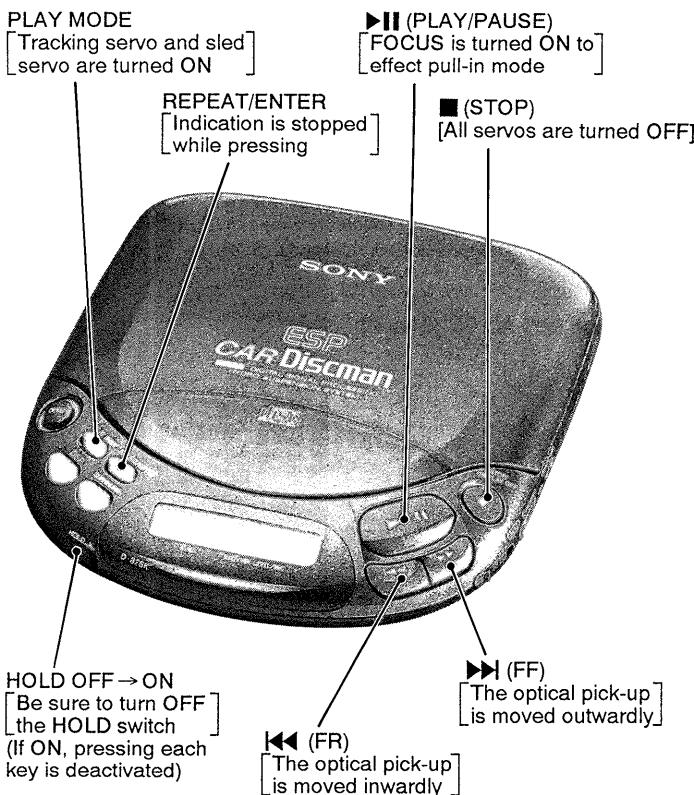


Fig. 3 Layout of each key

- Step 1 (Service mode setting methods)

1. Turn OFF the HOLD switch with external power supply disconnected (power is not applied to the set).
 2. Solder the jumper wire across the TEST (TAP802) terminals (pin ⑩, IC801 (TEST) is grounded).
 3. Connect an external power supply.

Thus, the set is switched to the service mode.

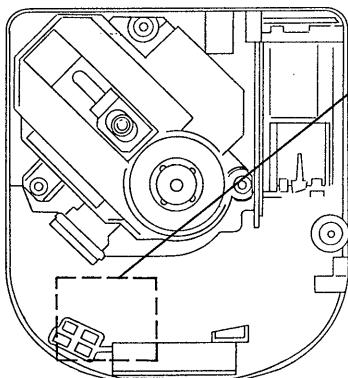

- Step 2 (Operation in the service mode)

- Once the service mode is effected, the LCD displays 5 indications each of which is repeatedly displayed.
 - By pressing the ►► or ◀◀ key, the optical pick-up is movable inwardly or outwardly. However, if this is activated, tracking servo and sled servo are turned OFF, so it can be turned ON by pressing the PLAY MODE key if required.
 - By pressing the ►|| key, focus is turned ON from focus searching while entering CLV-S (pull-in mode). Without disc, focus searching is repeated continuously.
 - By pressing the PLAY MODE key, tracking servo, sled servo and CLV-A (servo in PLAY) are turned ON.
 - When 3. and 4. are performed, playing begins. No muting is ON in the service mode.
 - By pressing the ■ key, all servos (focus, tracking and sled) are turned OFF. However, the disc motor revolves for a while by inertia.

- **Step 3 (Resetting of service mode)**

1. Be sure to disconnect the external power supply and remove the soldered jumper wire at the TEST terminals connected before in setting.
 2. The set thus becomes available for normal operation.

- MAIN BOARD - (Side A)

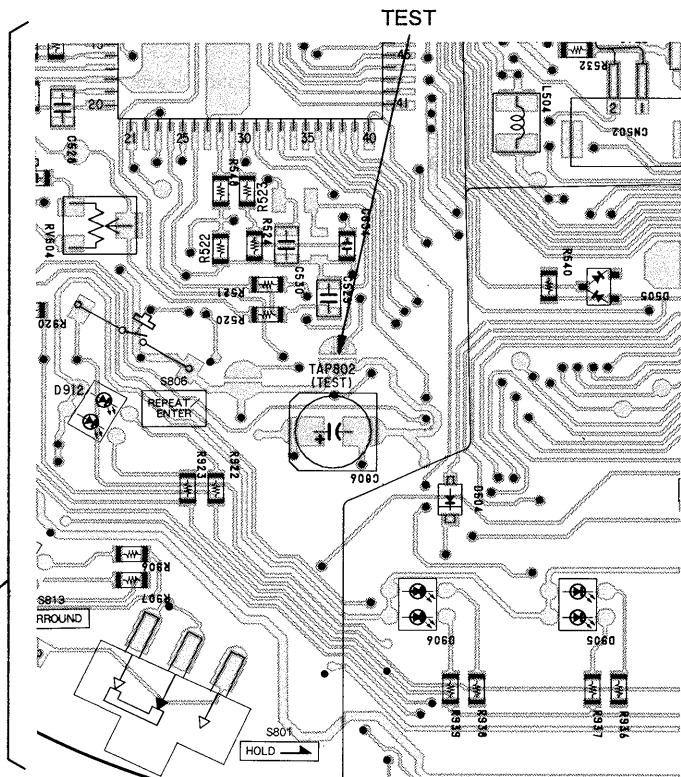


Fig. 4 Location of Test terminal

SECTION 4

ELECTRICAL ADJUSTMENTS

Precautions for Adjustment

1. Before beginning adjustment, set the equipment to service mode.
After the completion of adjustment, be sure to reset the service mode.
For more information, see "Service Mode (service program)" on pages 4.
2. Perform adjustments in the order given.
3. Use YEDS-18 disc (Part No.: 3-702-101-01) unless otherwise indicated.
4. Power supply voltage requirement.: DC4.5 V
 HOLD switch : OFF
 VOLUME switch : Minimum
 AVLS switch : OFF
 BASS BOOST switch: NORM
 ESP switch : OFF

Before Beginning Adjustment

Set the equipment to service mode (See page 4) and check the following. If there is an error, repair the equipment.

• Checking of the sled motor


1. Press the **►►** and **◀◀** keys and check that the optical pick-up can move smoothly without sluggishness or abnormal noise in innermost periphery → outermost periphery → innermost periphery.
►► : The optical pick-up moves outwardly.
◀◀ : The optical pick-up moves inwardly.

• Checking of focus searching

1. Press the **►||** key. (Focus searching operation is activated continuously.)
2. Check the object lens of the optical pick-up for smooth up/down motion without sluggishness or abnormal noise.
3. Press the **■** key.
Check that focus searching operation is deactivated. If not, again press the **■** key slightly longer.


PLL Free Run Frequency Check

Check Procedure:

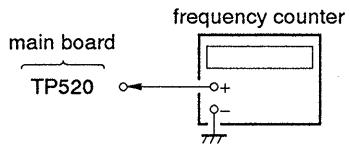

1. Connect a frequency counter to servo board test point TP520.
2. Put the set into service mode stop state. (See page 4.)
3. Check that the frequency counter reading is 4.5218 ± 0.01 MHz.
4. After adjustment, release service mode. (See page 4.)

- MAIN BOARD - (Side B)

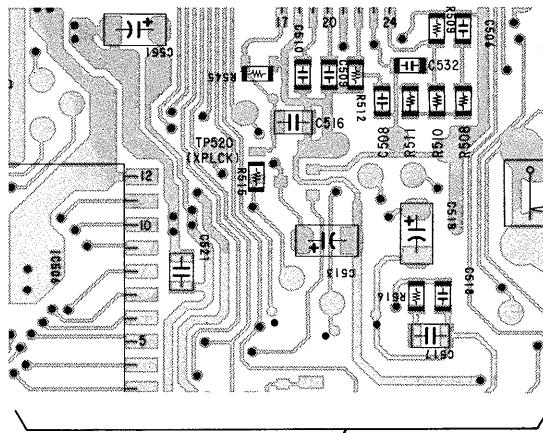


Tracking Balance Check

Condition:


- Hold the set in horizontal state.

Check Procedure:

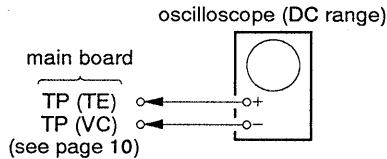

1. Connect the oscilloscope to TP (TE) of the main board.
2. Set the equipment to service mode stop state. (See page 4.)
3. Move the optical pick-up by pressing the $\blacktriangleright\blacktriangleright$ and $\blacktriangleleft\blacktriangleleft$ keys.
4. Put the disc (YEDS-18).
5. Press the $\blacktriangleright\blacktriangleright$ key.
[From focus searching, focus is turned ON while entering CLV drawing-in mode. Tracking and sled are turned OFF.]
6. Press the $\blacktriangleright\blacktriangleright$ key.
7. Check the waveform on the oscilloscope becomes up/down symmetrical with the axis of 0 V.

Note: Take long sweep time for easy monitoring.

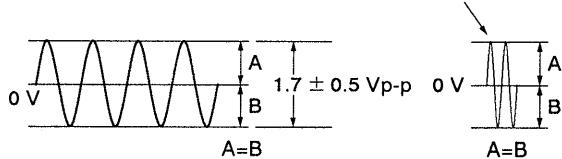

8. Stop revolving of the disc motor by pressing the ■ key.
9. After the completion of adjustment, reset service mode. (See page 4.)


Check Location: Main Board

Focus Bias Check

Condition:

- Hold the set in horizontal state.


Check Procedure:

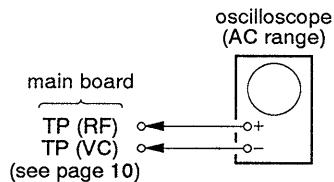

1. Set the equipment to service mode stop state. (See page 4.)
2. Connect the oscilloscope to the test point TP (RF) of the main board.
3. Move the optical pick-up by pressing the $\blacktriangleright\blacktriangleright$ and $\blacktriangleleft\blacktriangleleft$ keys.
(To display the eye pattern more clearly, move the optical pick-up to the music range of the disc.)
4. Put the disc (YEDS-18).
5. Press the $\blacktriangleright\blacktriangleright$ key.
[From focus searching, focus is turned ON while entering CLV drawing-in mode. Tracking and sled are turned OFF.]
6. Press the PLAY MODE key. (Both tracking and sled are turned ON.)
7. Check the oscilloscope waveform is as shown below.
A good eye pattern means that the diamond shape (\diamond) in the center of the waveform can be clearly distinguished.

RF SIGNAL WAVEFORM (EYE PATTERN)

VOLT DIV : 200 mV (With the 10:1 probe in use)
TIME DIV : 500 ns

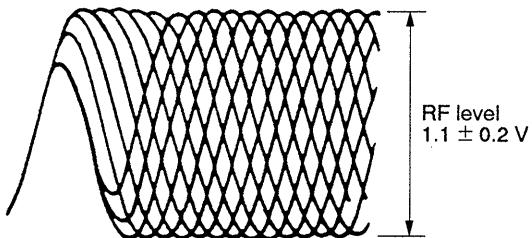

To watch the eye pattern, set the oscilloscope to AC range and increase the vertical sensitivity of the oscilloscope for easy watching.

8. Stop revolving of the disc motor by pressing the ■ key.
9. After the completion of adjustment, reset service mode. (See page 4.)

Check Location: Main Board

Focus/Tracking Gain Adjustment

To perform this adjustment precisely, a servo analyser or CD jigs are required.

However, there is an allowance for this gain, so substantially no problems occur normally even if it is slightly deviated. Therefore, you need not perform this adjustment.

Focus/tracking gain determines the follow-up property of the pick-up to mechanical shocks during 2-axis device operation. However, since these requirements are inconsistent, the equipment is adjusted to compromise both properties.

- With gain increased, noise in 2-axis device operation also increases.
 - With gain decreased, the equipment becomes less immune to mechanical shocks, where sound jumping often occurs.

This adjustment has to be performed upon replacing any of the following parts.

- Optical pick-up
 - RV503 (Focus gain VR)
 - RV504 (Tracking gain VR)

Normally, be sure not to move RV503 (focus gain VR) and RV504 (tracking gain VR).

With this equipment, it is very difficult to simply perform this adjustment.



If the equipment is not so often suffering from "occasional sound jumping" or not easily decided for complete repairing, use the CD jigs for the adjustment. To connect the CD jigs, see the right view. For more detailed adjustment methods, see the separate CD jig operation manual.

CD jig connecting methods:

Unsolder (TE and FE) and connect the equipment to the CD jigs as shown in the right view. At the time, connect the IC501 side and each VR side to the output to the CD jigs and the input from the CD jigs, respectively.



Connection and Adjustment Location:

- MAIN BOARD - (Side A)

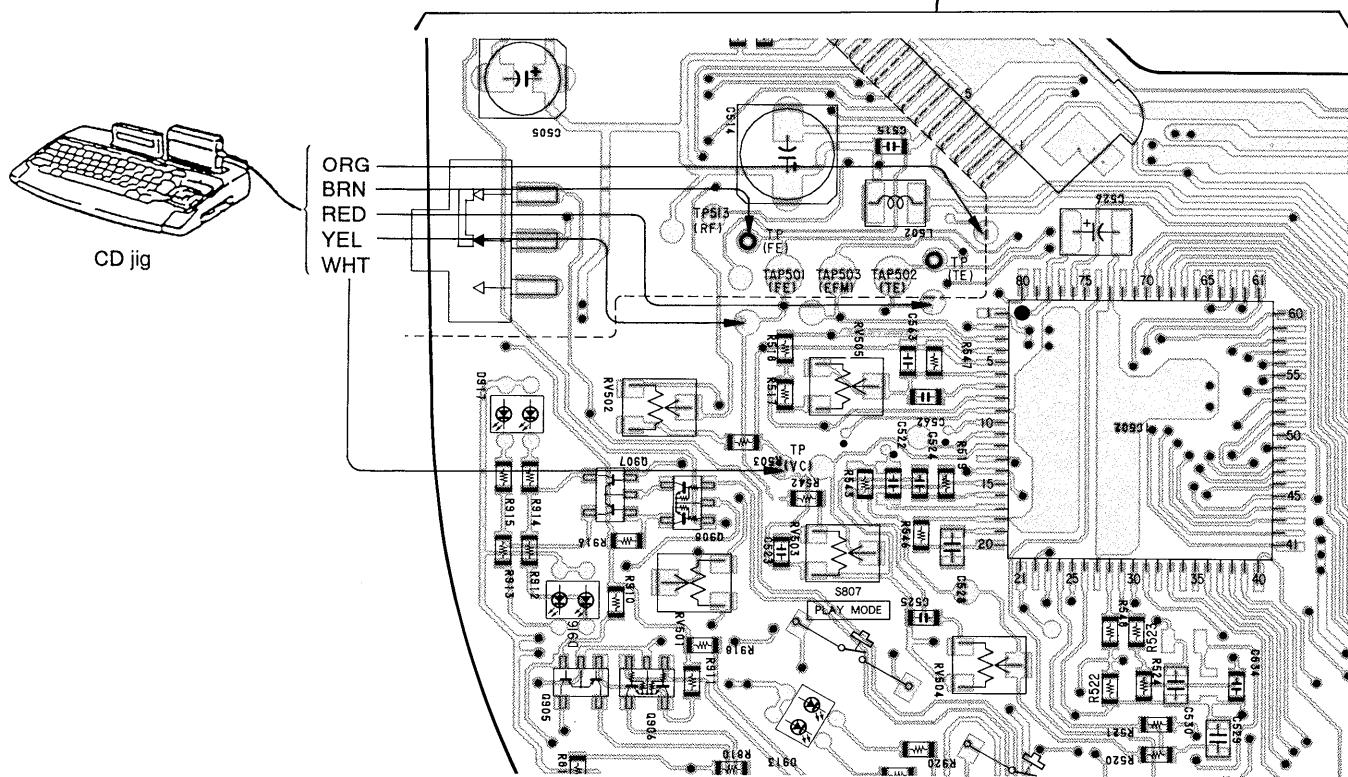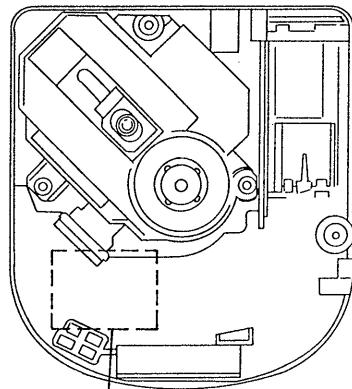


Connection and Check Location

- MAIN BOARD - (Side A)

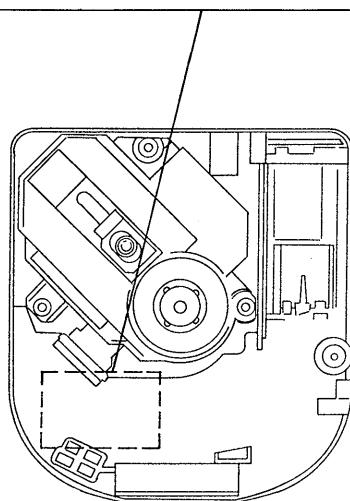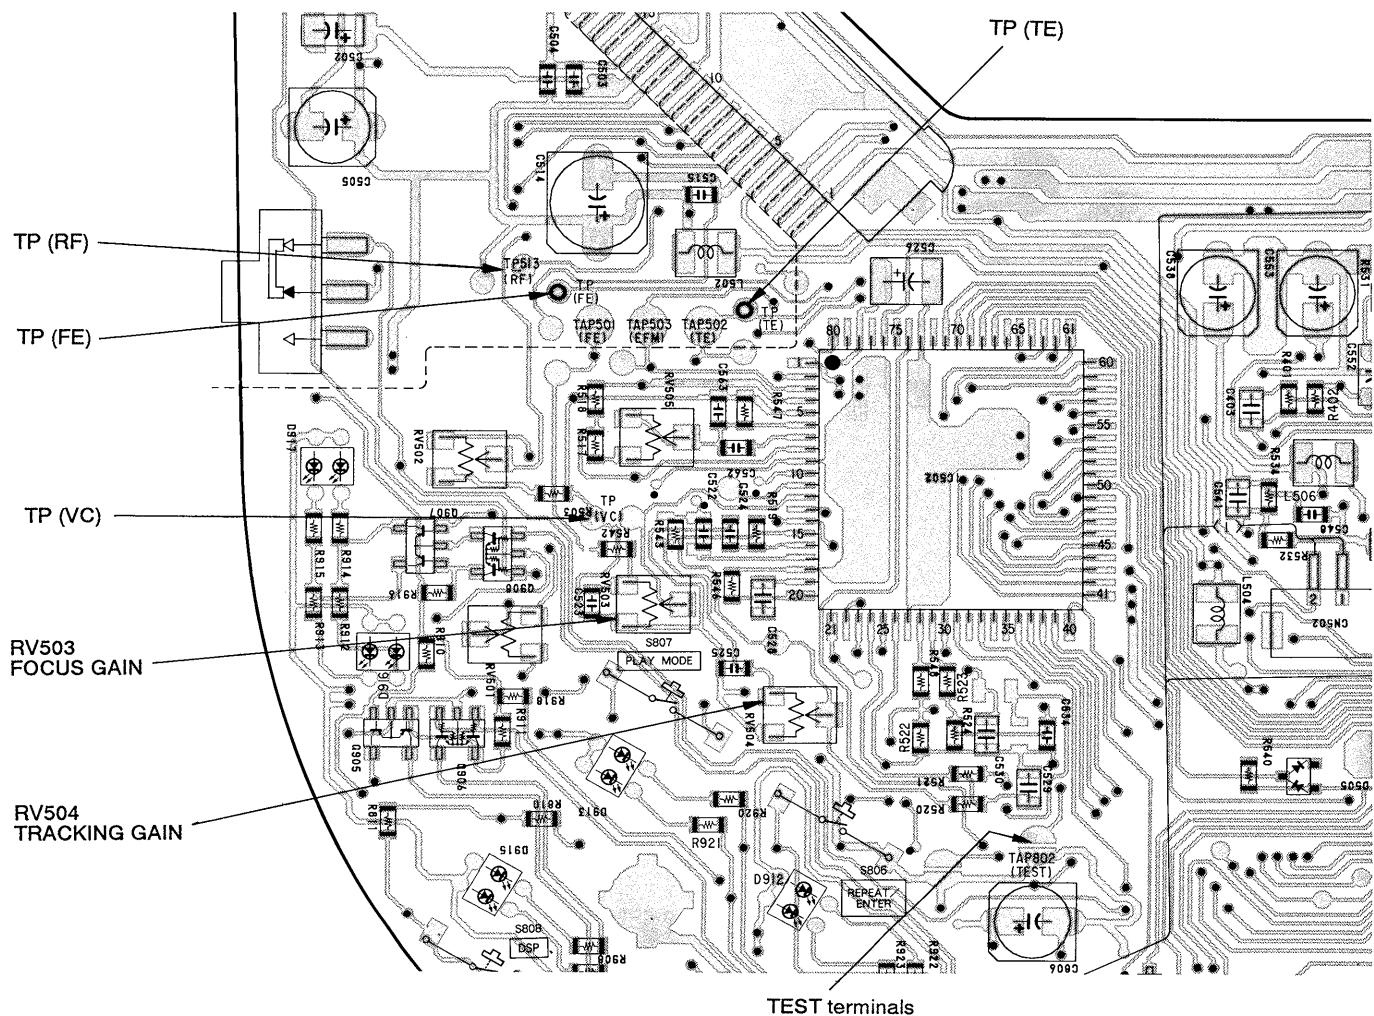



SECTION 5 PROGRAMS

5-1. BLOCK DIAGRAM

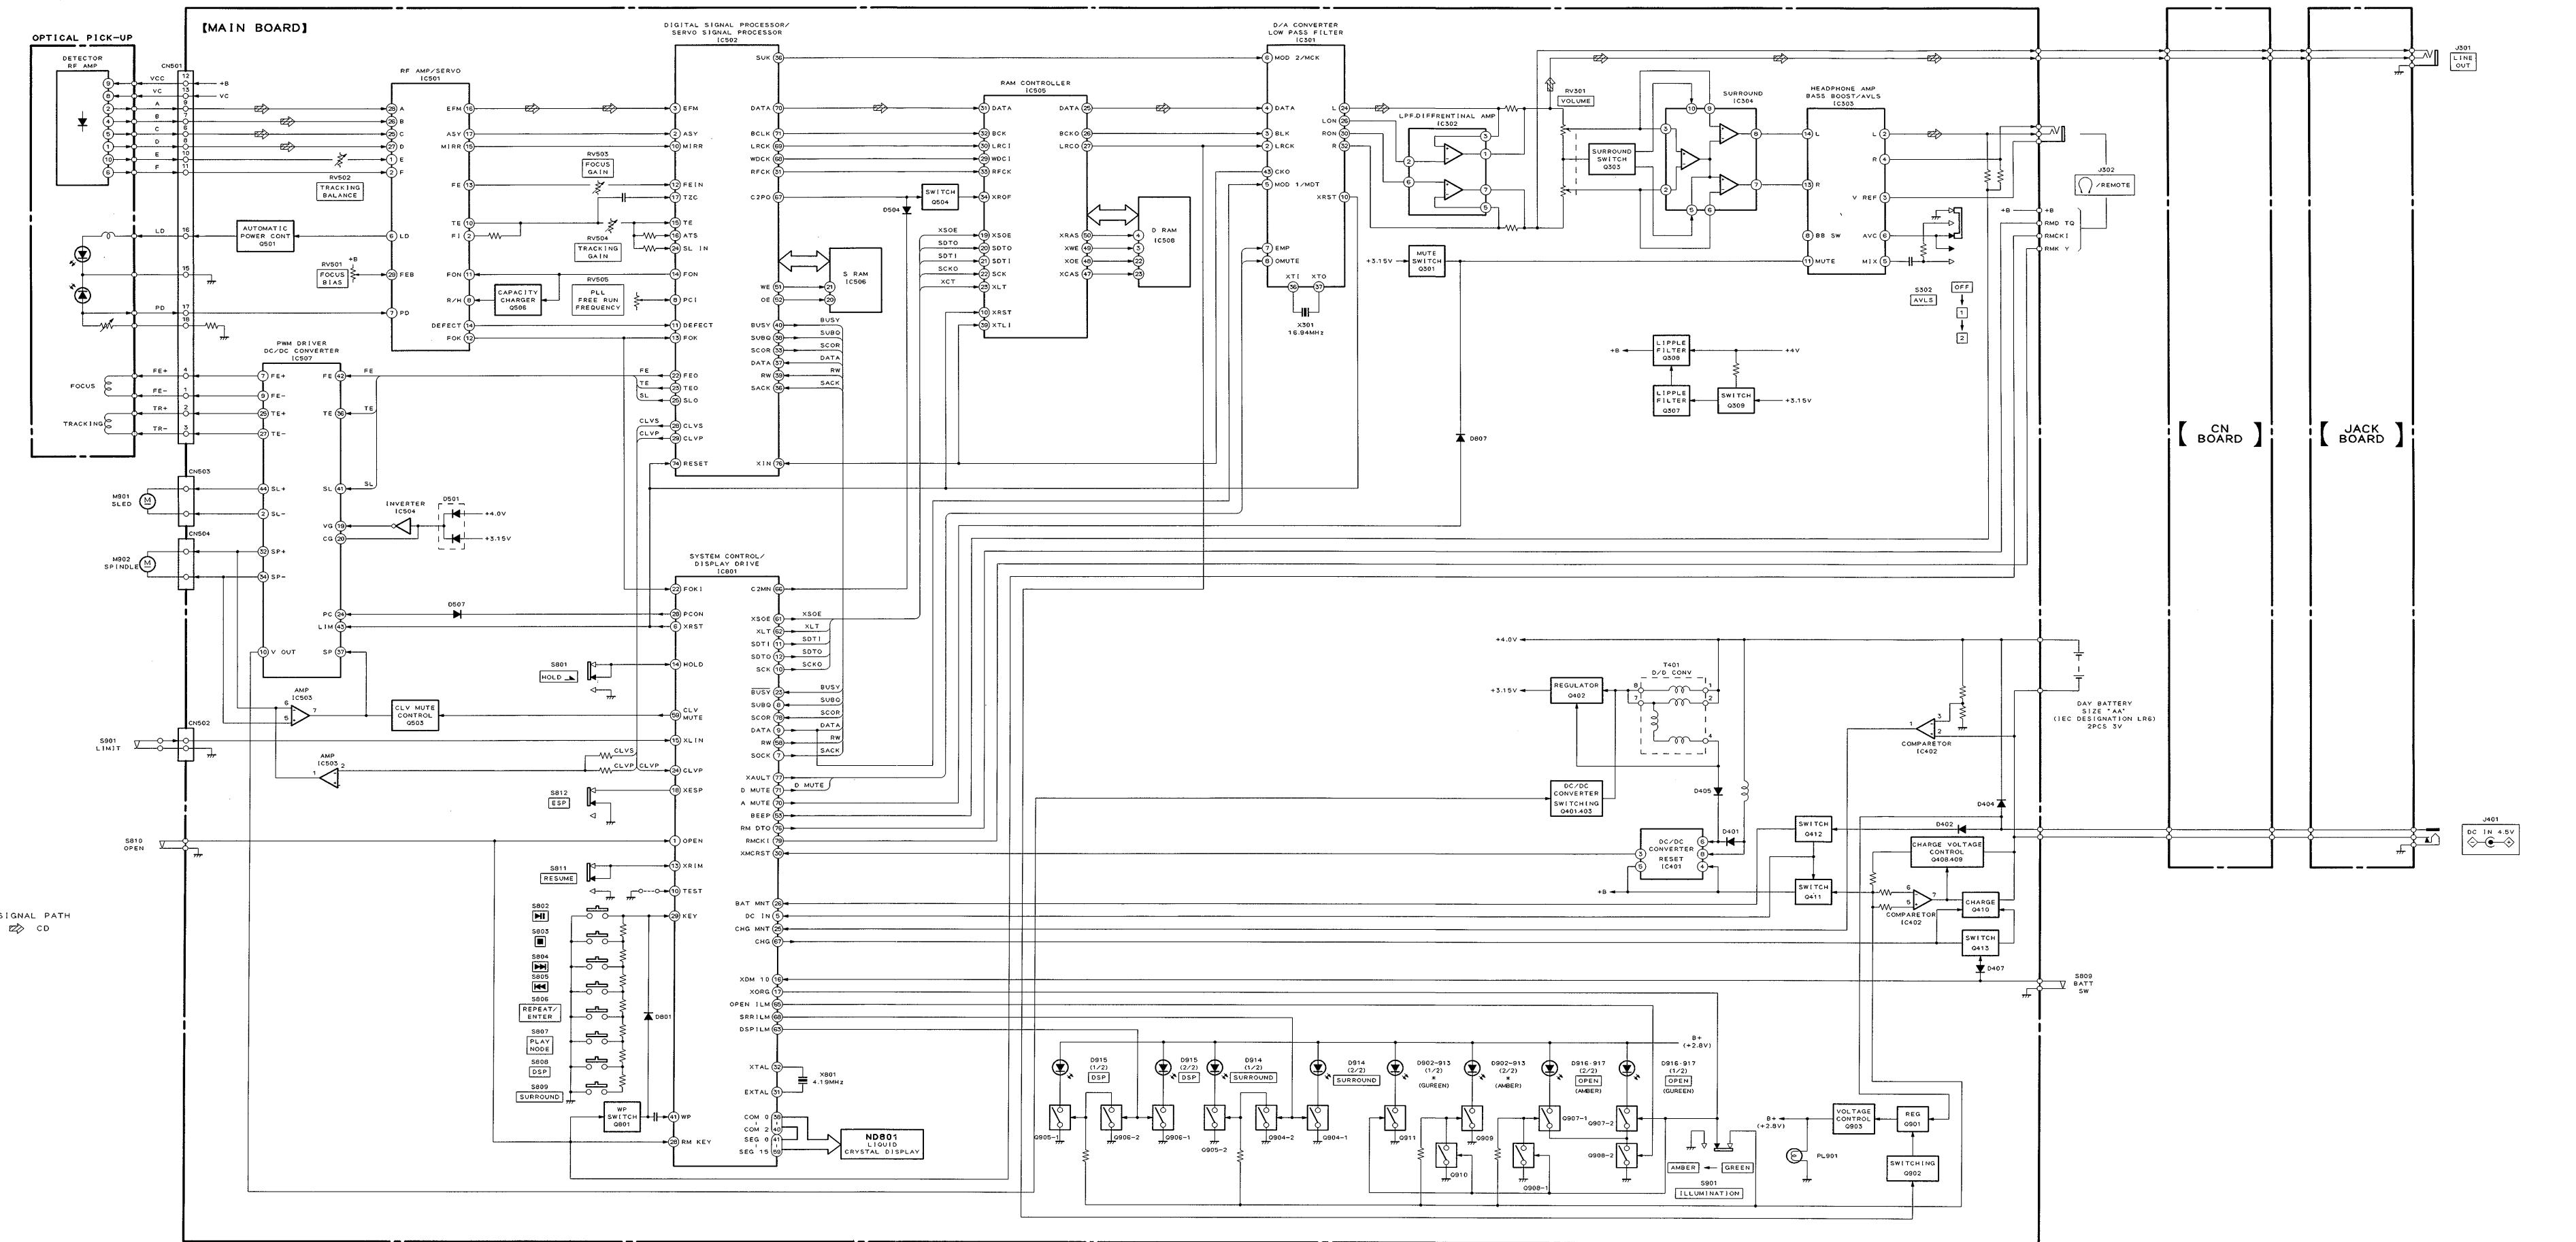


5-2. PRINTED WIRING BOARDS • See page 23 for Semiconductor Lead Layouts.

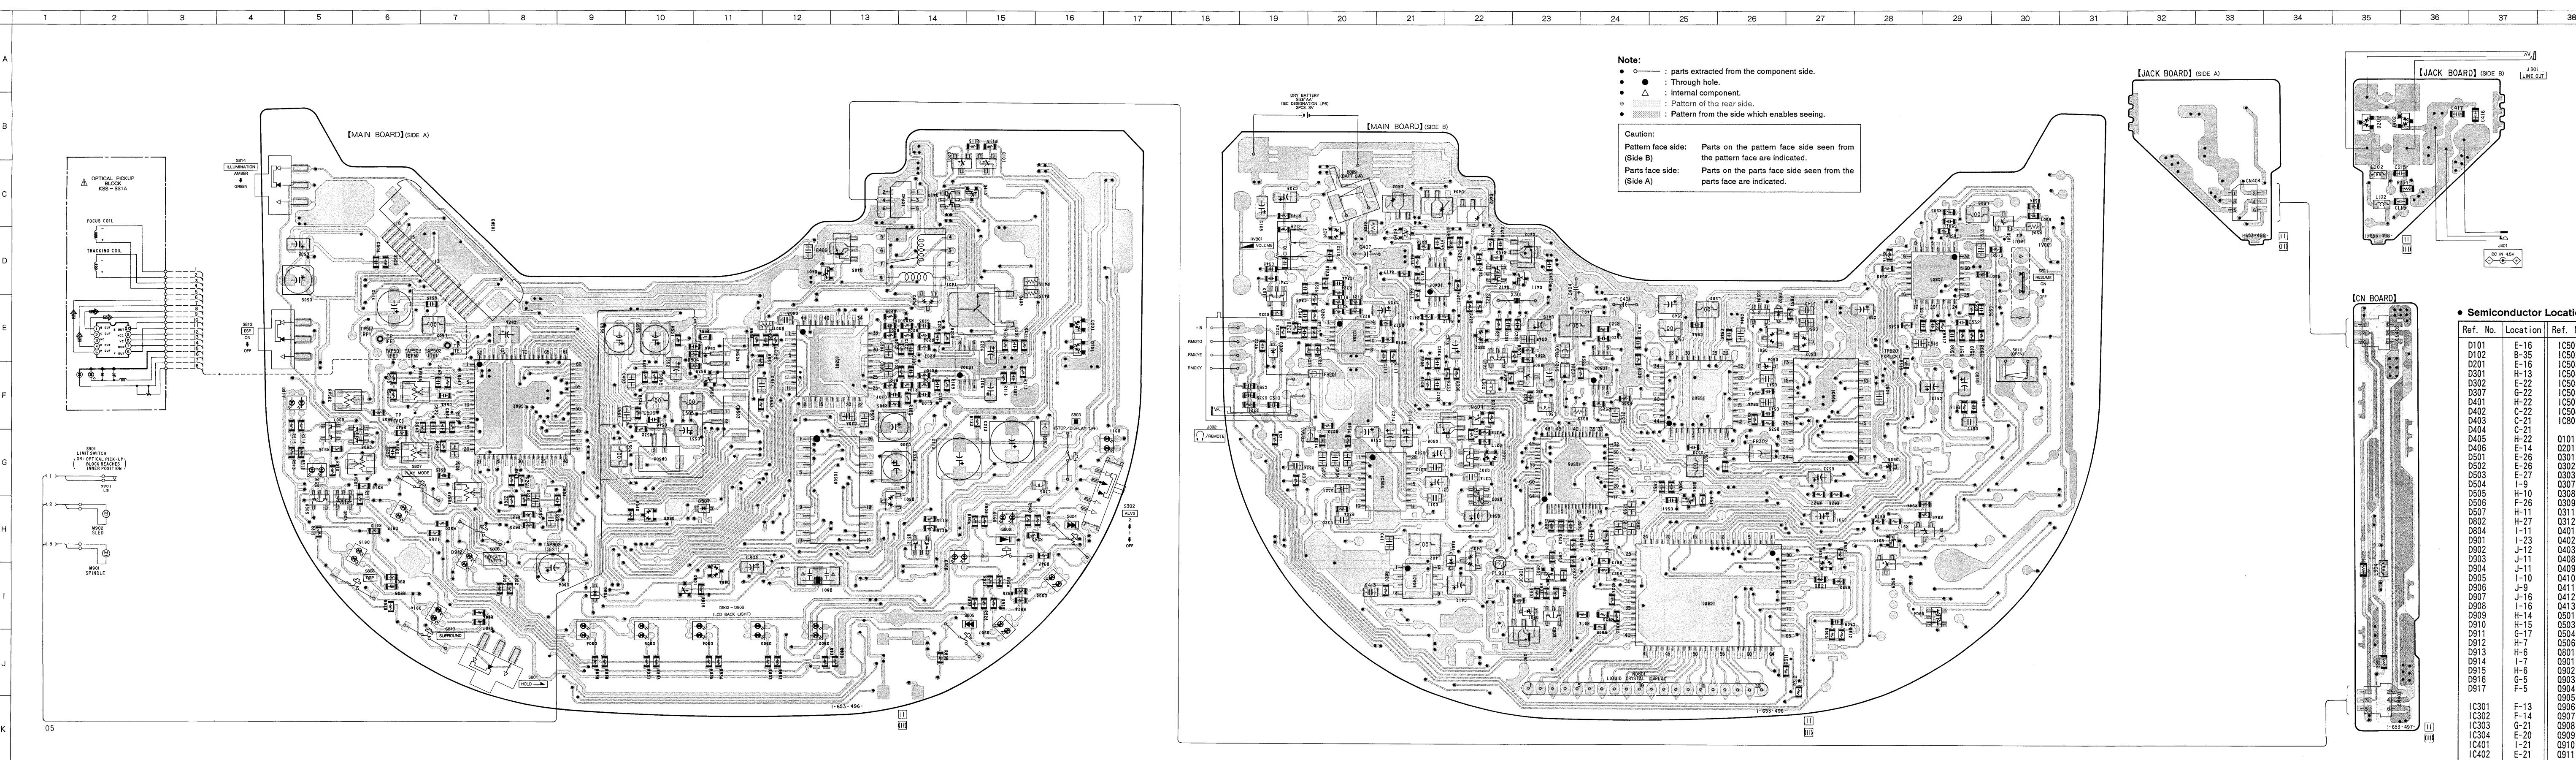


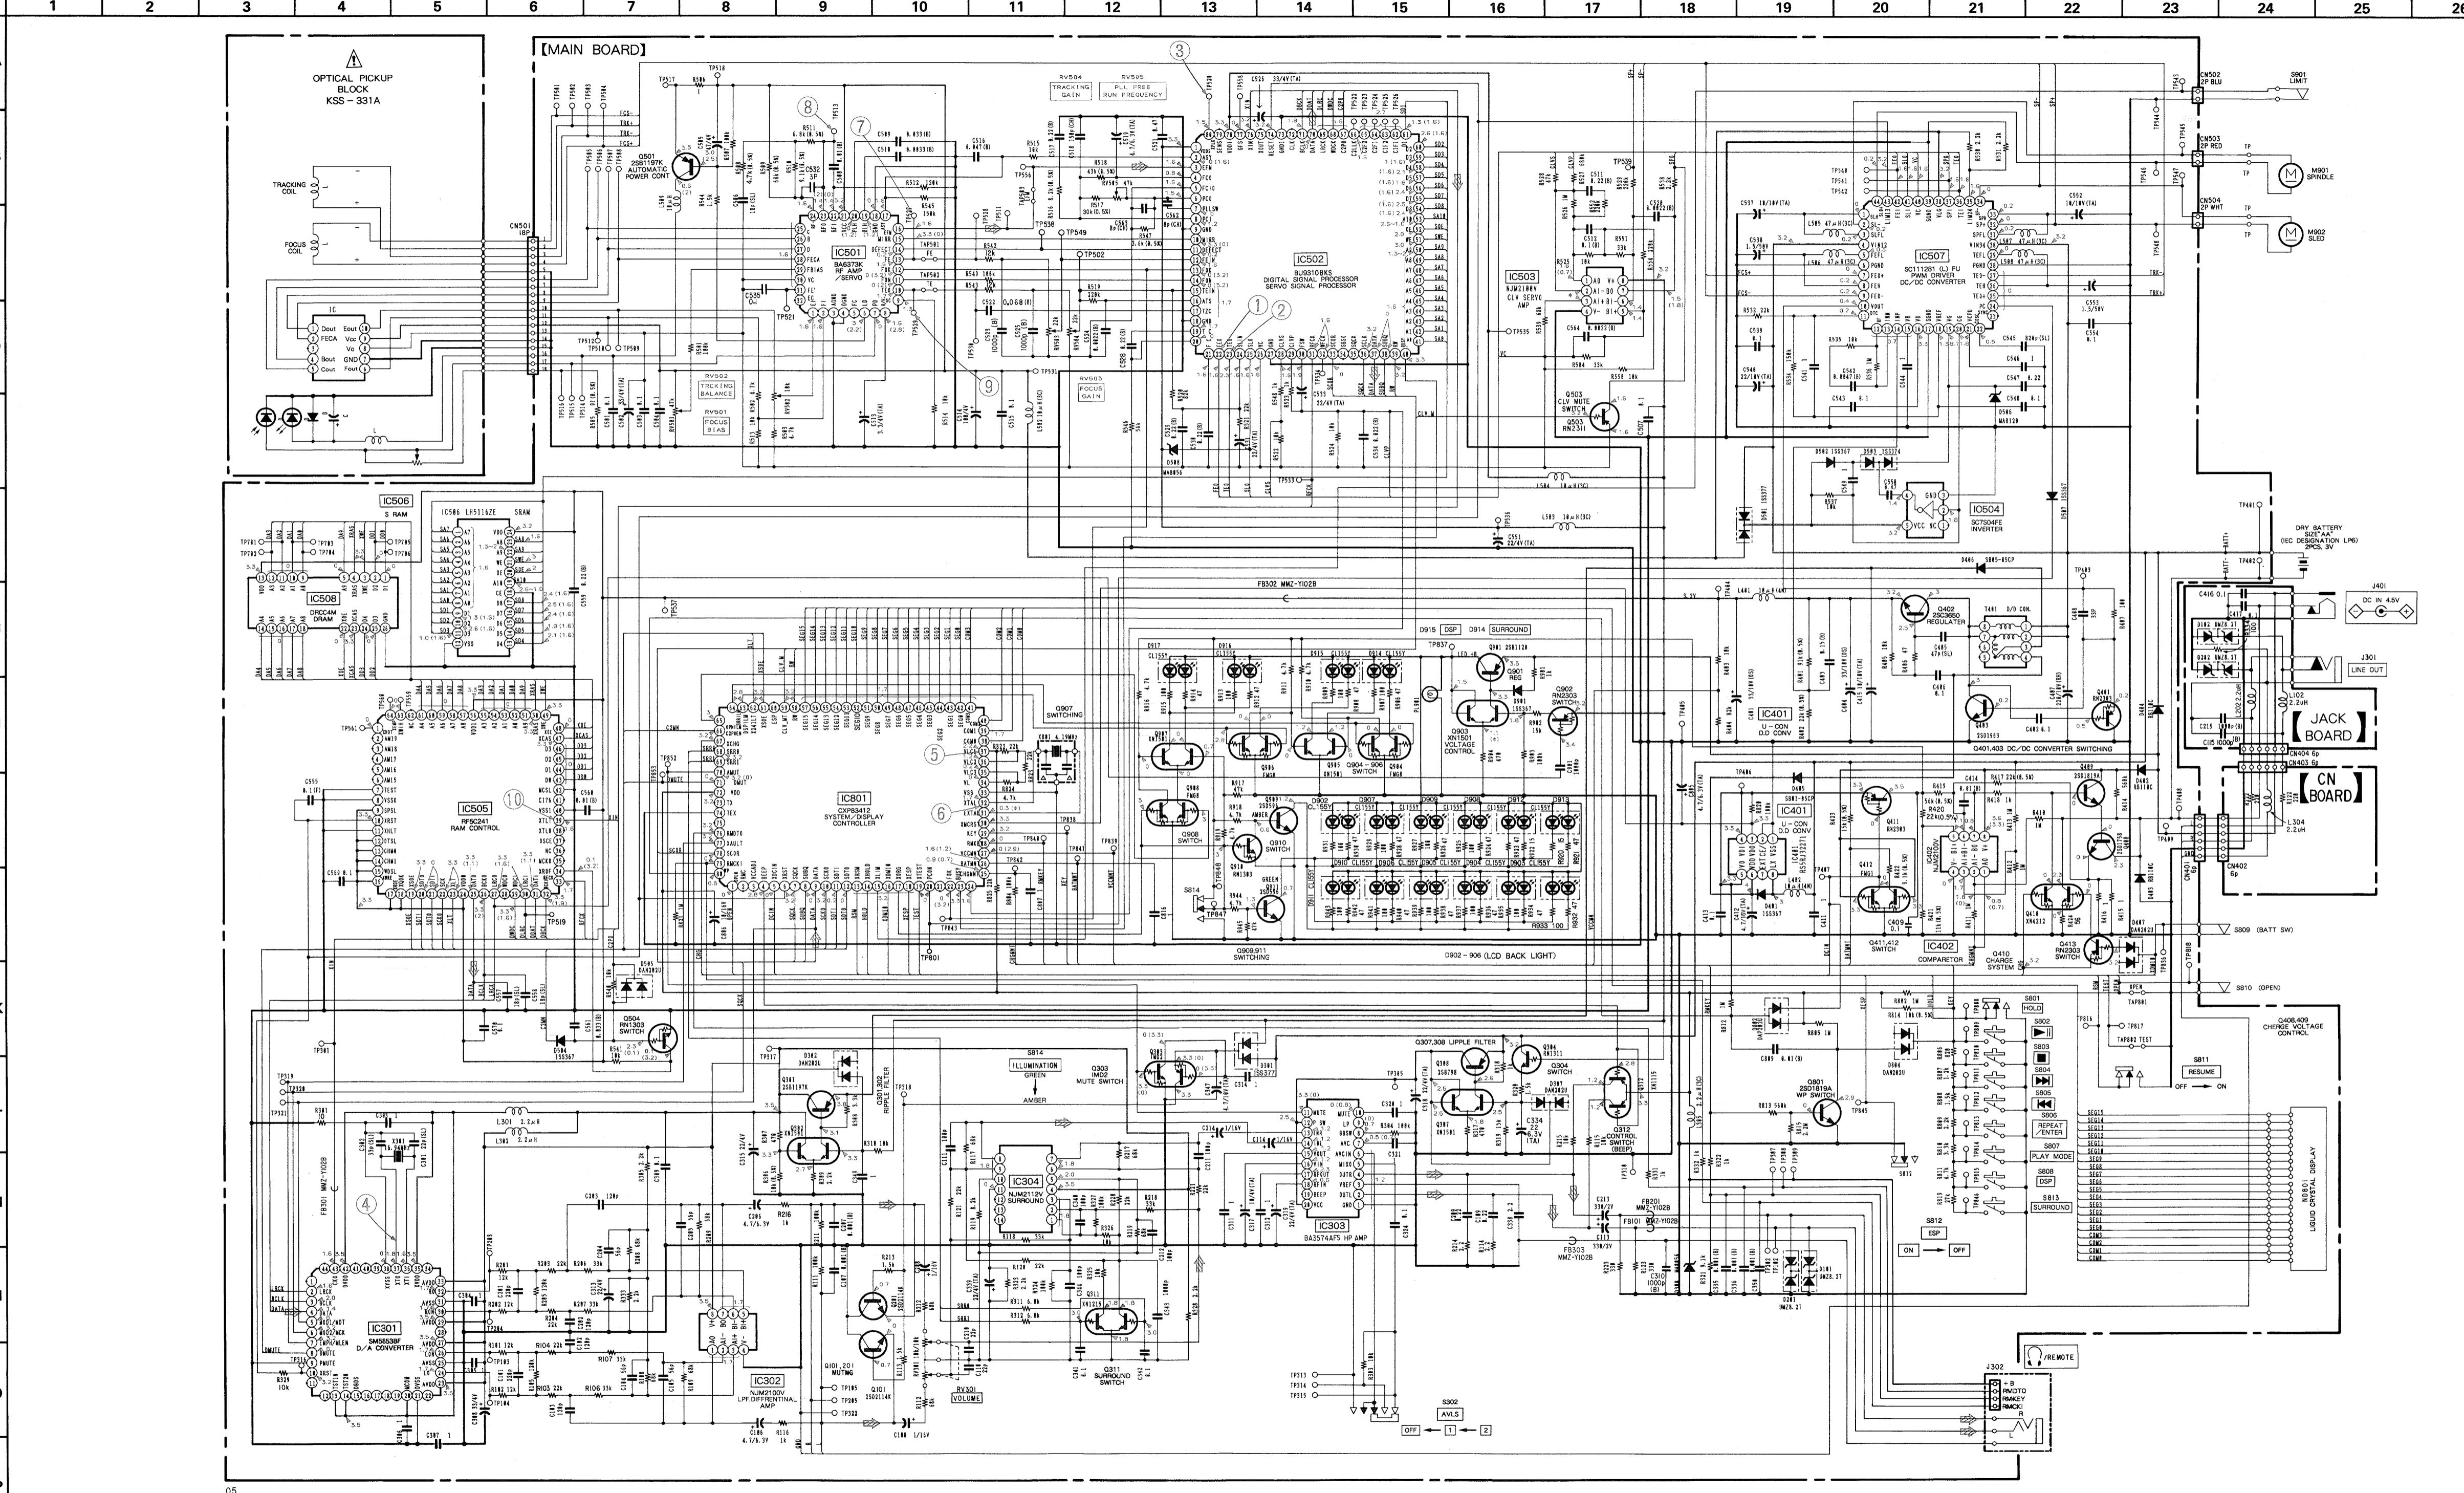









- Semiconductor Lead Layouts

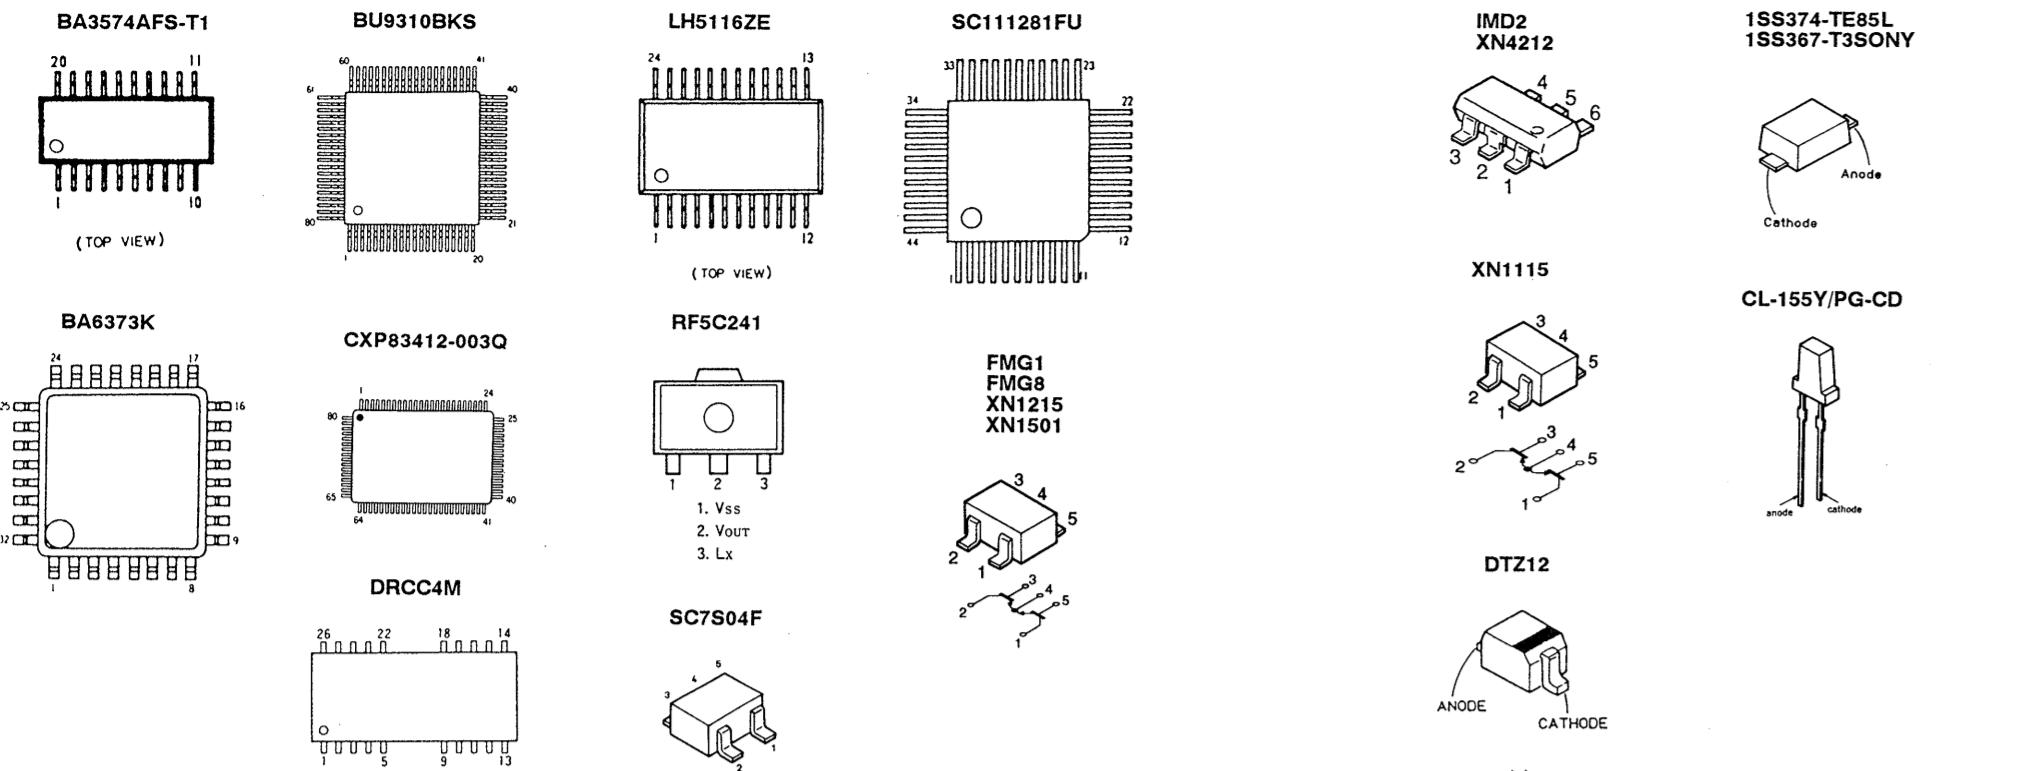

- Waveforms

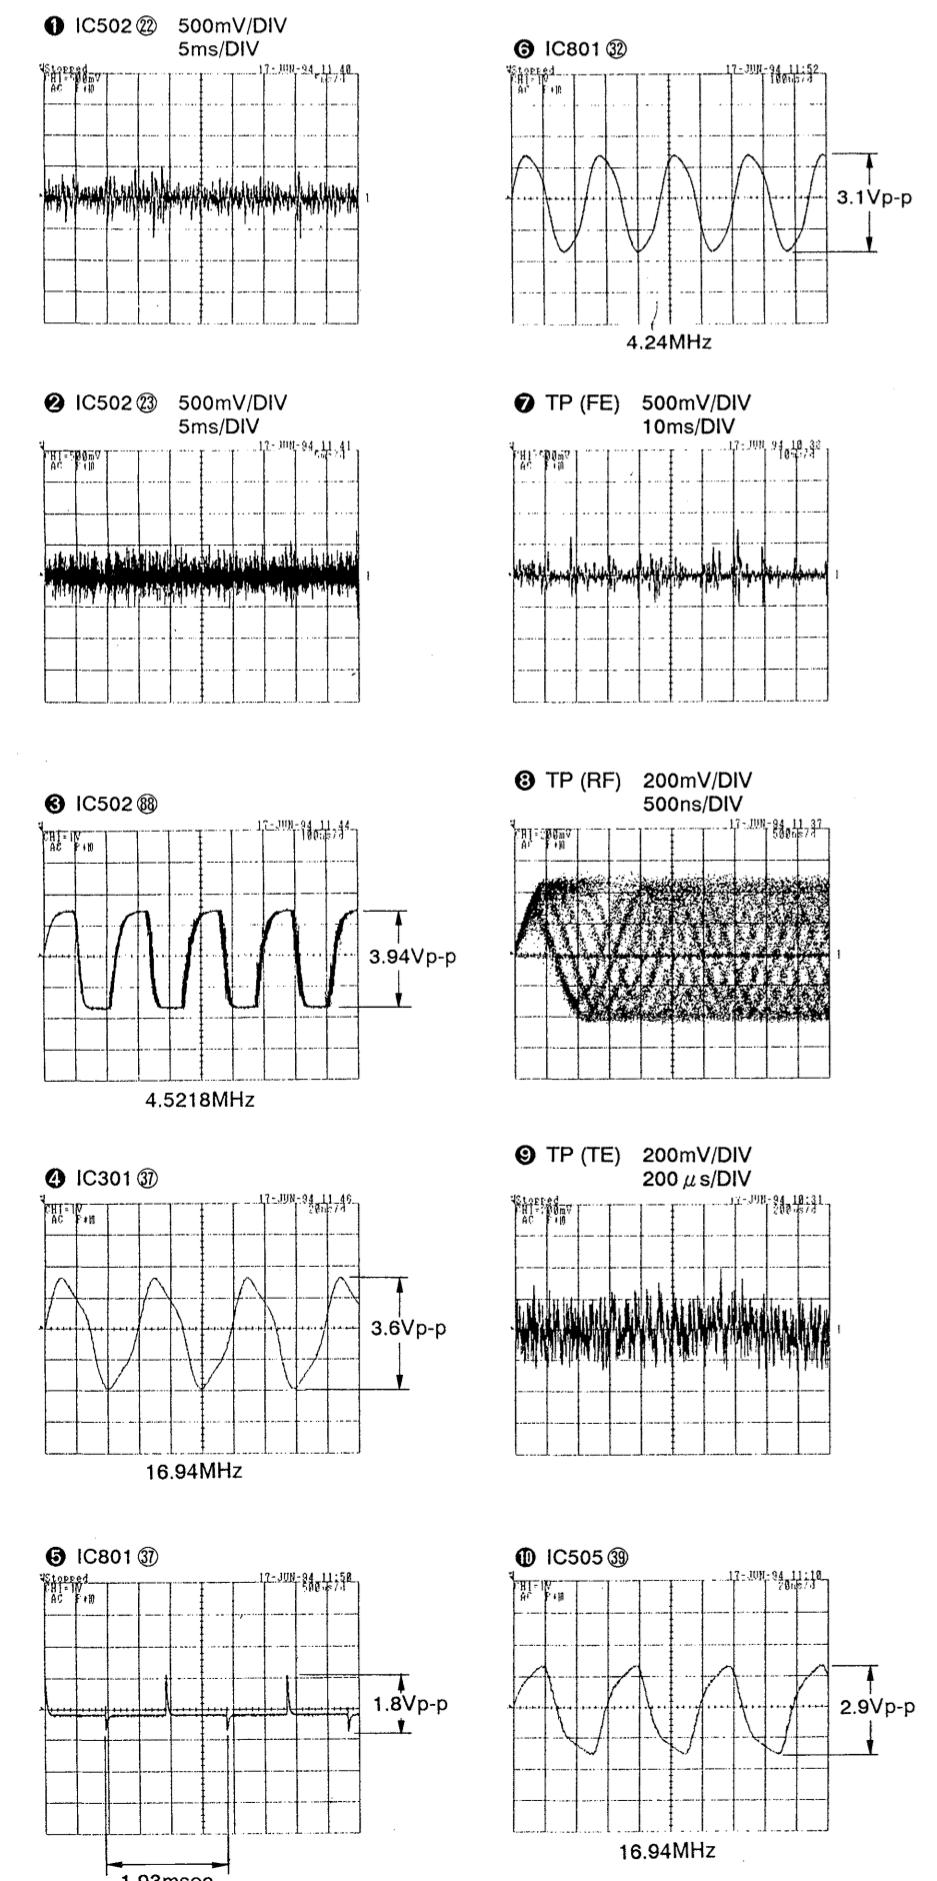

IC Block Diagrams MAIN BOARD

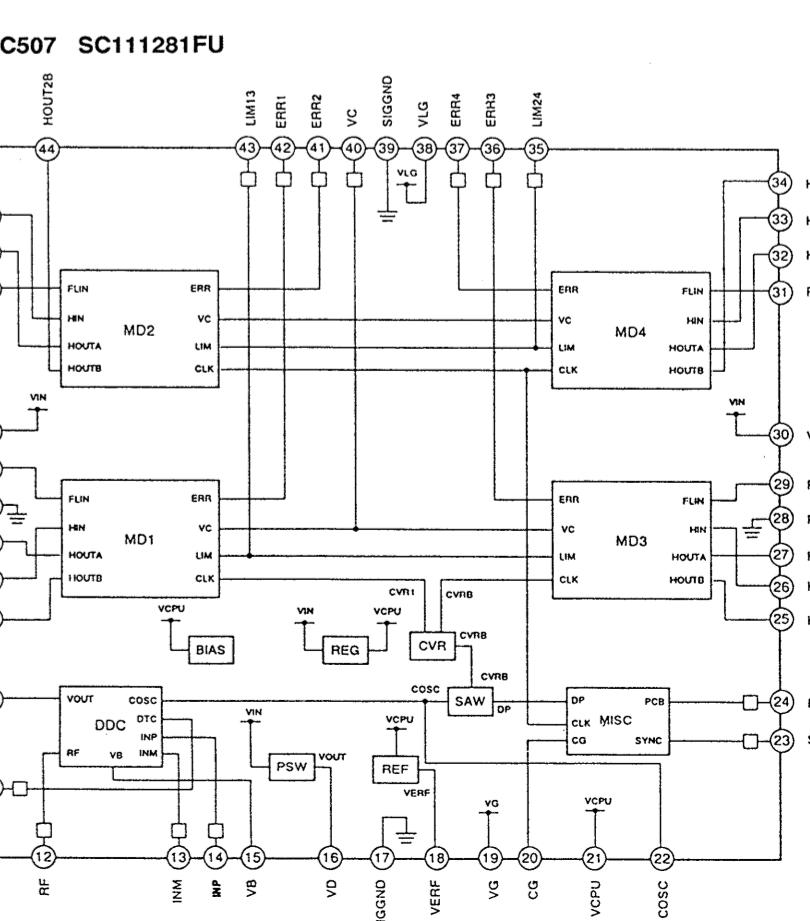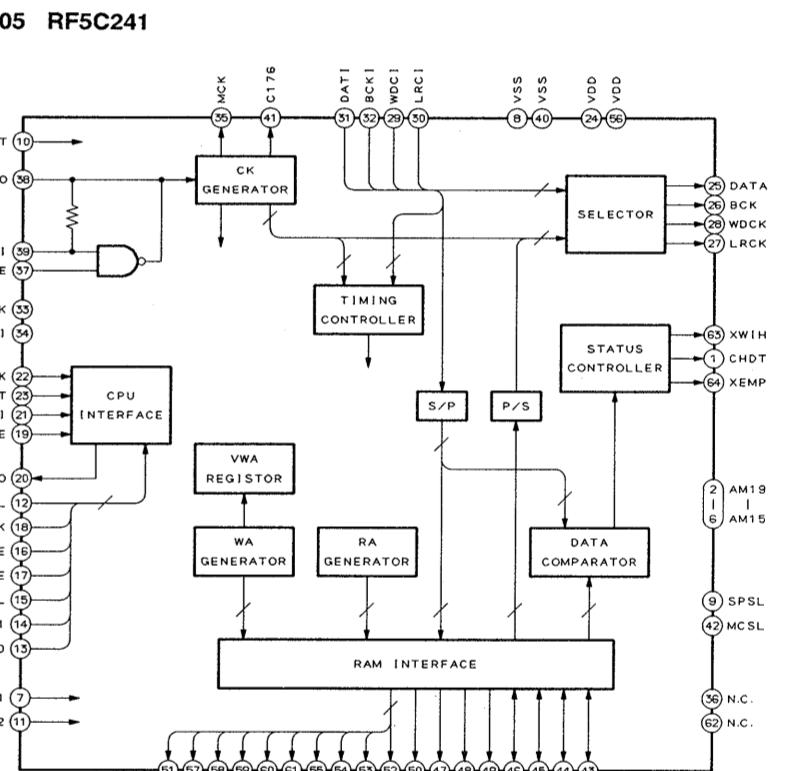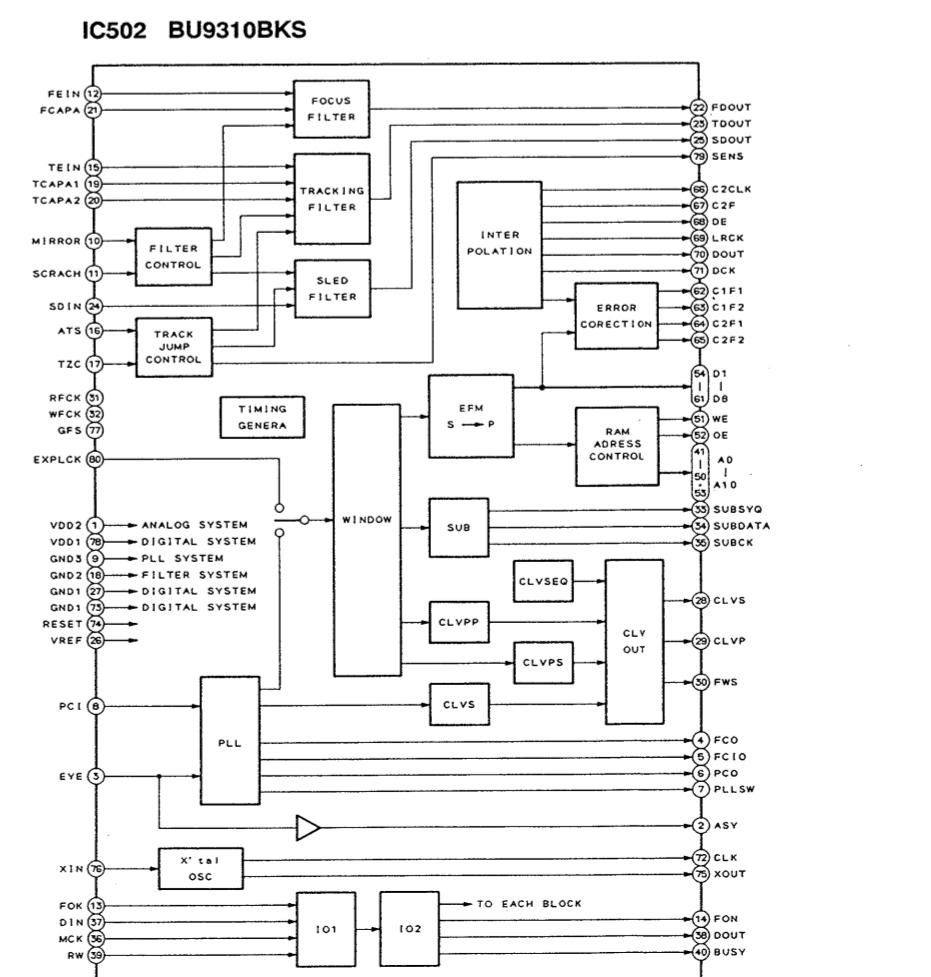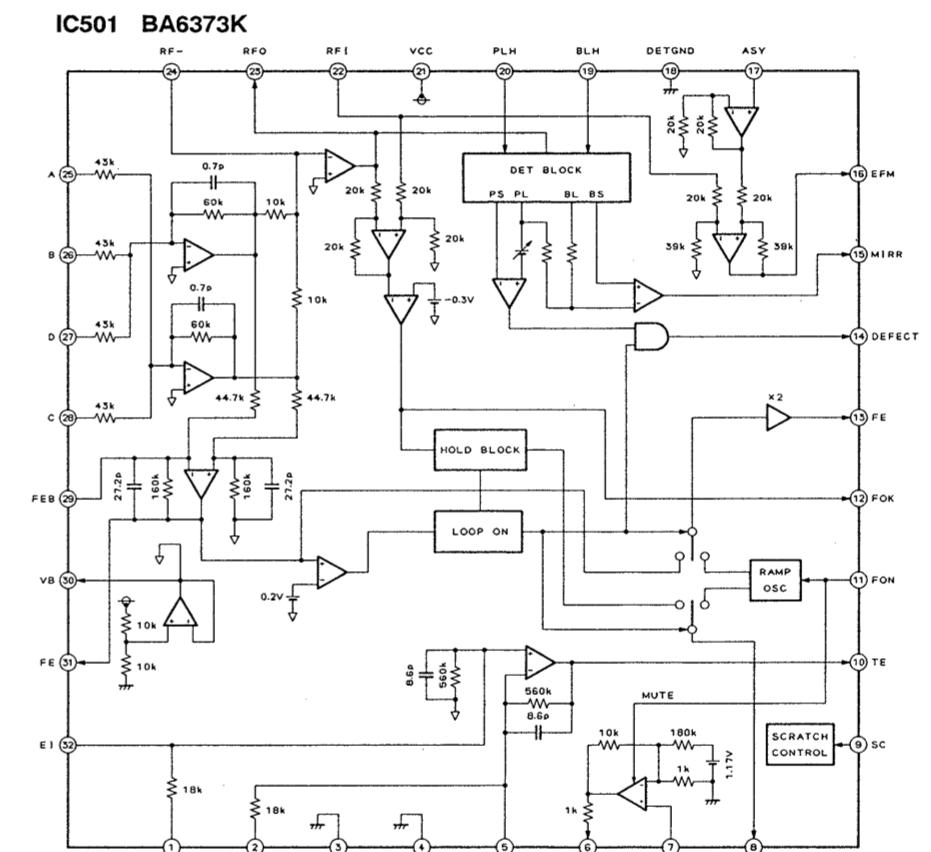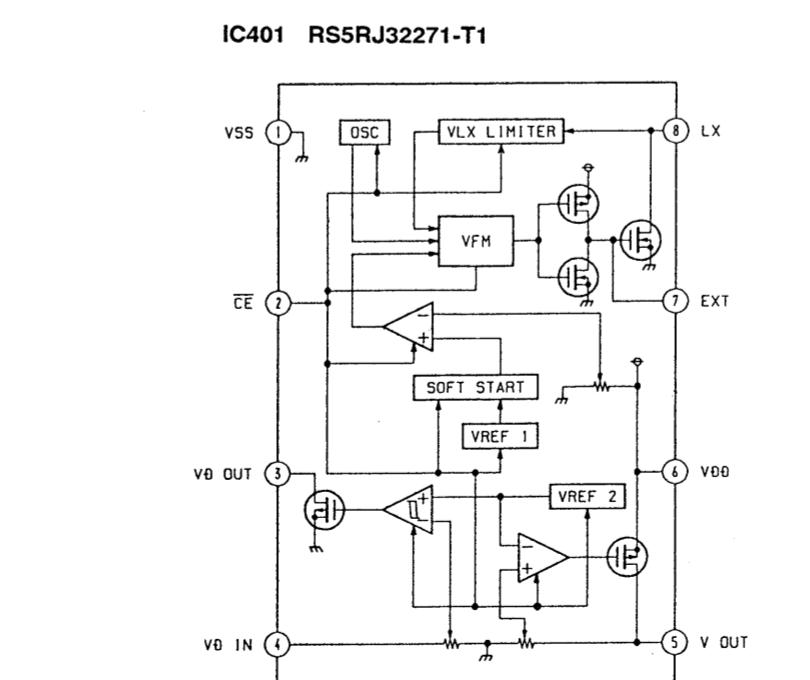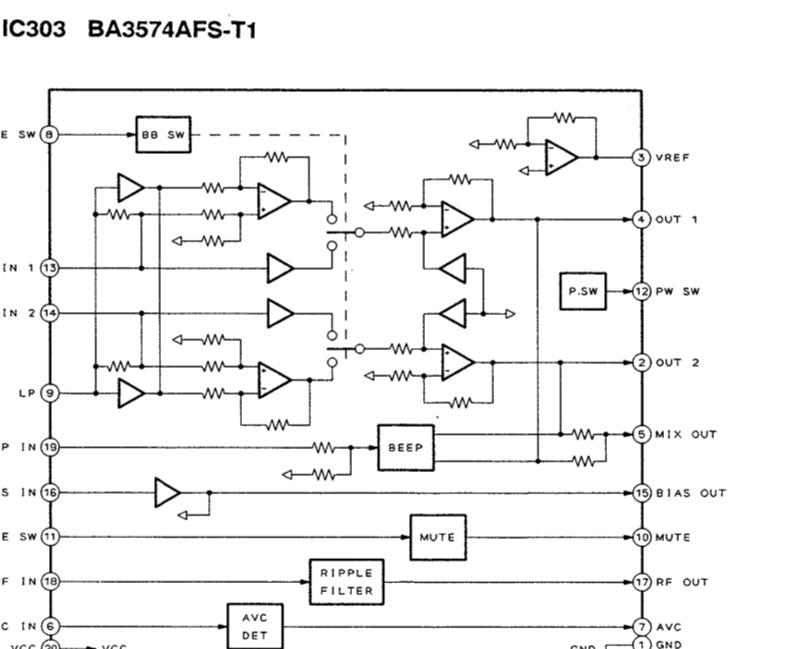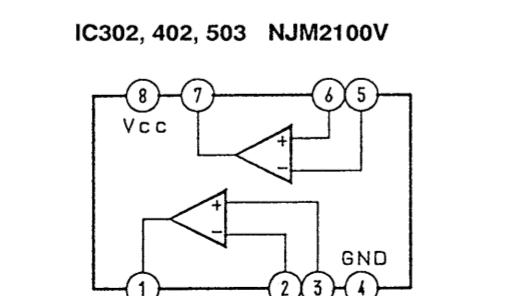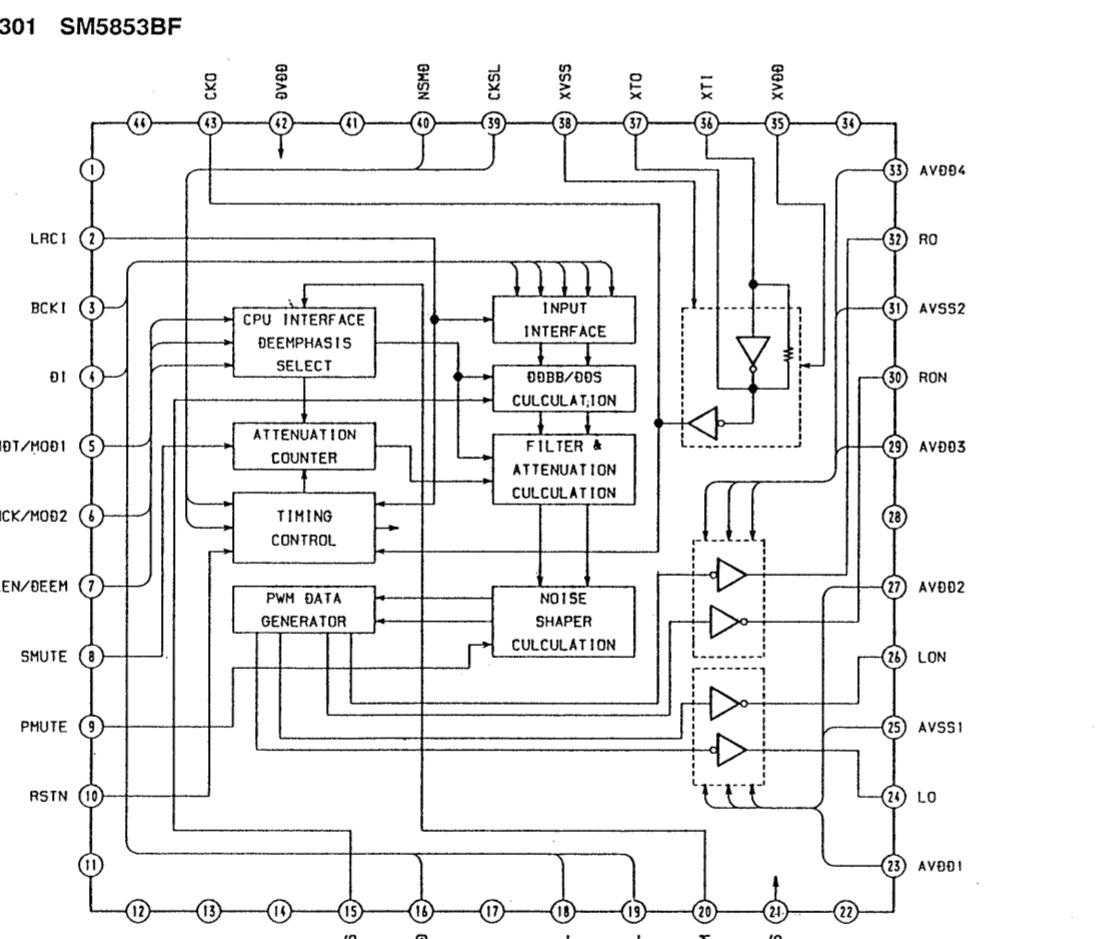

5-4. IC PIN FUNCTION
MAIN BOARD IC801 CXP83412

Pin No.	Pin Name	I/O	Function
1	OPEN	I	Door switch input terminal. Stop state is canceled at rising edge (↑) of input. "H": OPEN "L": CLOSE
2	RMC	I	Infrared ray remote control signal input.
3	VCCADJ	O	Servo power supply adjusting PWM output.
4	BEEP	O	Beep sound pulse output.
5	XDCIN	I	DC-IN detection input. "L": DC-IN "H": No DC-IN
6	XRST	O	Reset signal output to BU9310BKS, RF5C241, SM5853BF. Resets ICs by "L" level output.
7	SQCK	O	Serial clock output to BU9310KS, SM5853BF.
8	SUBQ	I	SUB-Q signal input from BU9310BKS.
9	DATA	O	Serial data output to BU9310BKS, SM5853BF.
10	SCKO	O	Serial clock output to RF5C241.
11	SDTI	I	Serial data input from RF5C241.
12	SDTO	O	Serial data output to RF5C241.
13	XRSM	I	RESUME switch input. "L": RESUME ON "H": RESUME OFF
14	XHOLD	I	HOLD switch input. "L": HOLD ON "H": HOLD OFF (Canceled)
15	XLIM	I	Limit switch input. "L": ON "H": OFF
16	XDM10	I	Rechargeable battery (BP-DM10) connected detecting switch input. "L": There is rechargeable battery. "H": There is not rechargeable battery.
17	XORG	I	DSPILM/SRRILM output select switch input.
18	XESP	I	ESP switch input. "L": ESP ON "H": ESP OFF
19	XTEST	I	Test mode at "L" level input on system reset.
20	PCON	O	Servo system power supply control output. "L": Power on. "H": Power off.
21		—	Not used.
22	FOK	I	FOK signal input from BA6373K.
23	BUSY	I	Busy signal input from BU9310BKS.
24		—	Not used.
25	CHGMNT	I	Battery (BP-DM10) charging voltage detect A/D input.
26	BATMNT	I	Battery (BP-DM10/AM-3) voltage detect A/D input.
27	VCCMNT	I	Servo system power supply voltage detect A/D input.
28	RMKEY	I	FR, FF, PLAY/PAUSE, DSP STOP switches on phones remote controller A/D input.
29	KEY	I	PLAY/PAUSE, STOP, FF, FR, REPEAT/ENTER, PLAY MODE, DSP, SURROUND switches A/D input.
30	XMCRST	I	System reset input. Reset at "L" level.
31	EXTAL	—	Connected to clock oscillating circuit.
32	XTAL	—	
33	VSS	—	Ground
34	VL	O	On standby, controls to cut off current flowing external LCD bias resistor.
35 - 37	VCL3 - VCL1	—	Supplies LCD bias power supply voltage.
38 - 41	COM0 - CMO3	O	LCD common signal output.

Pin No.	Pin Name	I/O	Function																
42 – 57	S00 – S15	O	LCD segment signal output.																
58	RW	O	RW signal output for serial communication to BU9310BKS.																
59	CLV_MT	O	CLV mute control output. “L”: Mute																
60	ESP	O	ESP state output. “H”: ESP ON “L”: ESP OFF																
61	XSOE	O	Serial data output enable signal for RF5C241 output.																
62	X241LT	O	Latch signal output on sending serial data to RF5C241.																
63	DSPILM	O	Color select of LED for DSP output. <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td></td><td colspan="2">XORG</td></tr> <tr> <td></td><td>H</td><td>L</td></tr> <tr> <td>DSP ON</td><td>L</td><td>H</td></tr> <tr> <td>DSP OFF</td><td>H</td><td>L</td></tr> </table>		XORG			H	L	DSP ON	L	H	DSP OFF	H	L				
	XORG																		
	H	L																	
DSP ON	L	H																	
DSP OFF	H	L																	
64	SRRILM	O	Color select of LED for surround output. <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td></td><td colspan="2">XORG</td></tr> <tr> <td></td><td>H</td><td>L</td></tr> <tr> <td>SURROUND ON</td><td>L</td><td>H</td></tr> <tr> <td>SURROUND OFF</td><td>H</td><td>L</td></tr> </table>		XORG			H	L	SURROUND ON	L	H	SURROUND OFF	H	L				
	XORG																		
	H	L																	
SURROUND ON	L	H																	
SURROUND OFF	H	L																	
65	OPNILM	O	Output to control LED for light hold on/off. “L”: Play “H”: Disc stop																
66	C2POEN	O	S-RAM Over-flow signal mute “H”: Mute on.																
67	XCHG	O	Battery (BP-DM10) charging control output. “L”: Charge																
68	SRR0	O	Surround control output. <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td></td><td colspan="3">Indication</td></tr> <tr> <td></td><td>None</td><td>((SUR))</td><td>((((SUR))))</td></tr> <tr> <td>SRR0</td><td>H</td><td>L</td><td>L</td></tr> <tr> <td>SRR1</td><td>L</td><td>H</td><td>L</td></tr> </table>		Indication				None	((SUR))	((((SUR))))	SRR0	H	L	L	SRR1	L	H	L
	Indication																		
	None	((SUR))	((((SUR))))																
SRR0	H	L	L																
SRR1	L	H	L																
70	AMUT	O	Mute control output. “H”: Mute																
71	DMUT	O	Mute control for SM5853BF. “H”: Mute																
72	VDD	—	Power supply.																
73	TX	—	Not used.																
74	TEX	—	Not used. (Ground)																
75	NC	—	Not used.																
76	RMDTO	O	Serial data output to LCD remote controller.																
77	XAULT	O	Latch signal output on sending serial data to SM5853F.																
78	SCOR	I	SCOR signal input from BU9310BKS.																
79	RMCKI	I	Clock signal (for data output) is fed from LCD remote controller. When detecting its falling edge, data is renewed.																
80	WP	I	Input for releasing stop state of system. Stop state is released at falling edge (↖) of input.																

SECTION 6

EXPLODED VIEWS


NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts Example:
KNOB, BALANCE (WHITE) . . . (RED)
 ↑ ↑
 Parts Color Cabinet's Color

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of the electrical parts list.

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.


(1) CABINET SECTION-1

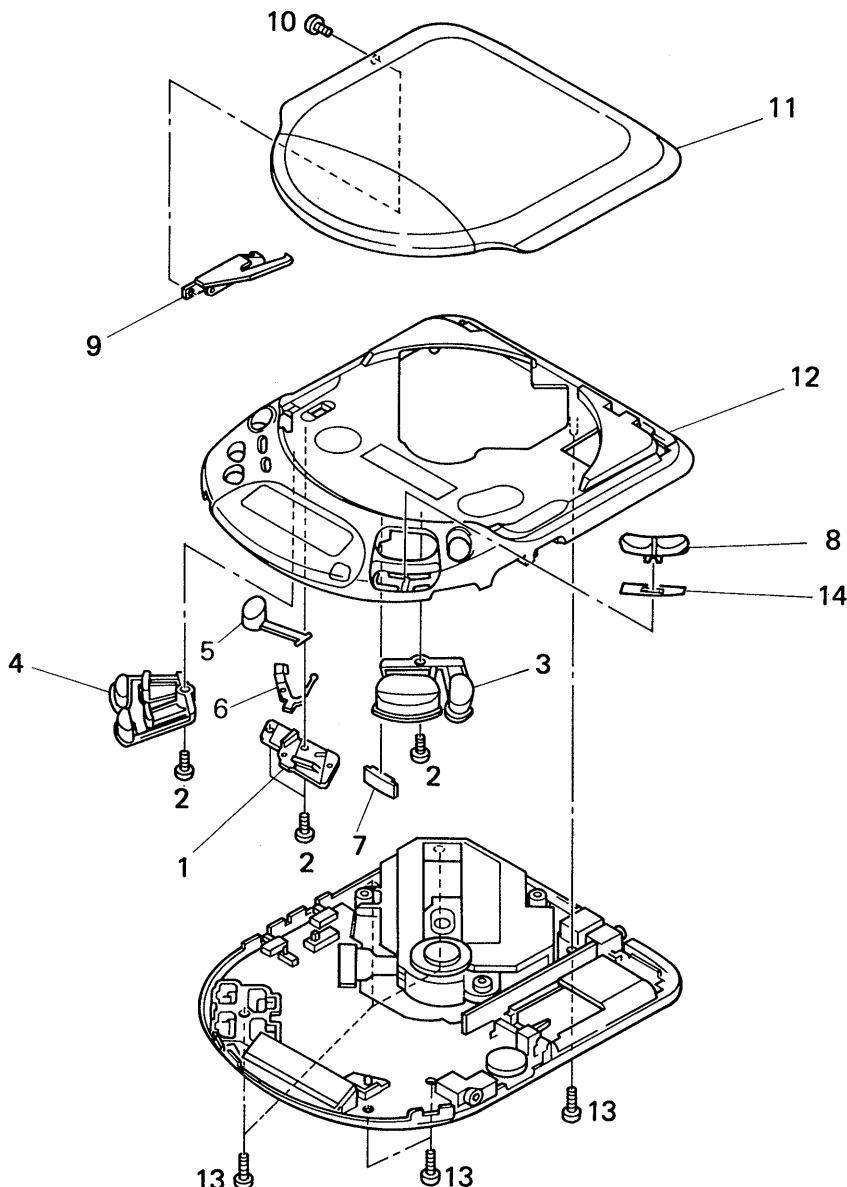

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	4-959-436-01	RETAINER (OPEN)		8	4-959-438-11	BUTTON (FR)	
2	3-374-079-11	SCREW (1.7X5), TAPPING		9	X-4943-816-1	ARM ASSY, SWITCHING	
3	4-959-429-11	BUTTON (PLAY)		10	3-704-197-32	SCREW (M1.4X3.0)	
4	4-959-416-01	BUTTON (MODE)		11	4-959-444-21	LID, UPPER	
5	4-959-433-11	BUTTON (OPEN)		12	X-4945-116-1	CABINET (UPPER) ASSY	
6	4-959-435-01	CLAW, LOCK		13	3-336-395-01	SCREW (B2X10) (G), TAPPING	
7	4-959-417-01	LENS		14	4-962-069-01	SHEET (FR)	


REVISED

(2) CABINET SECTION-2

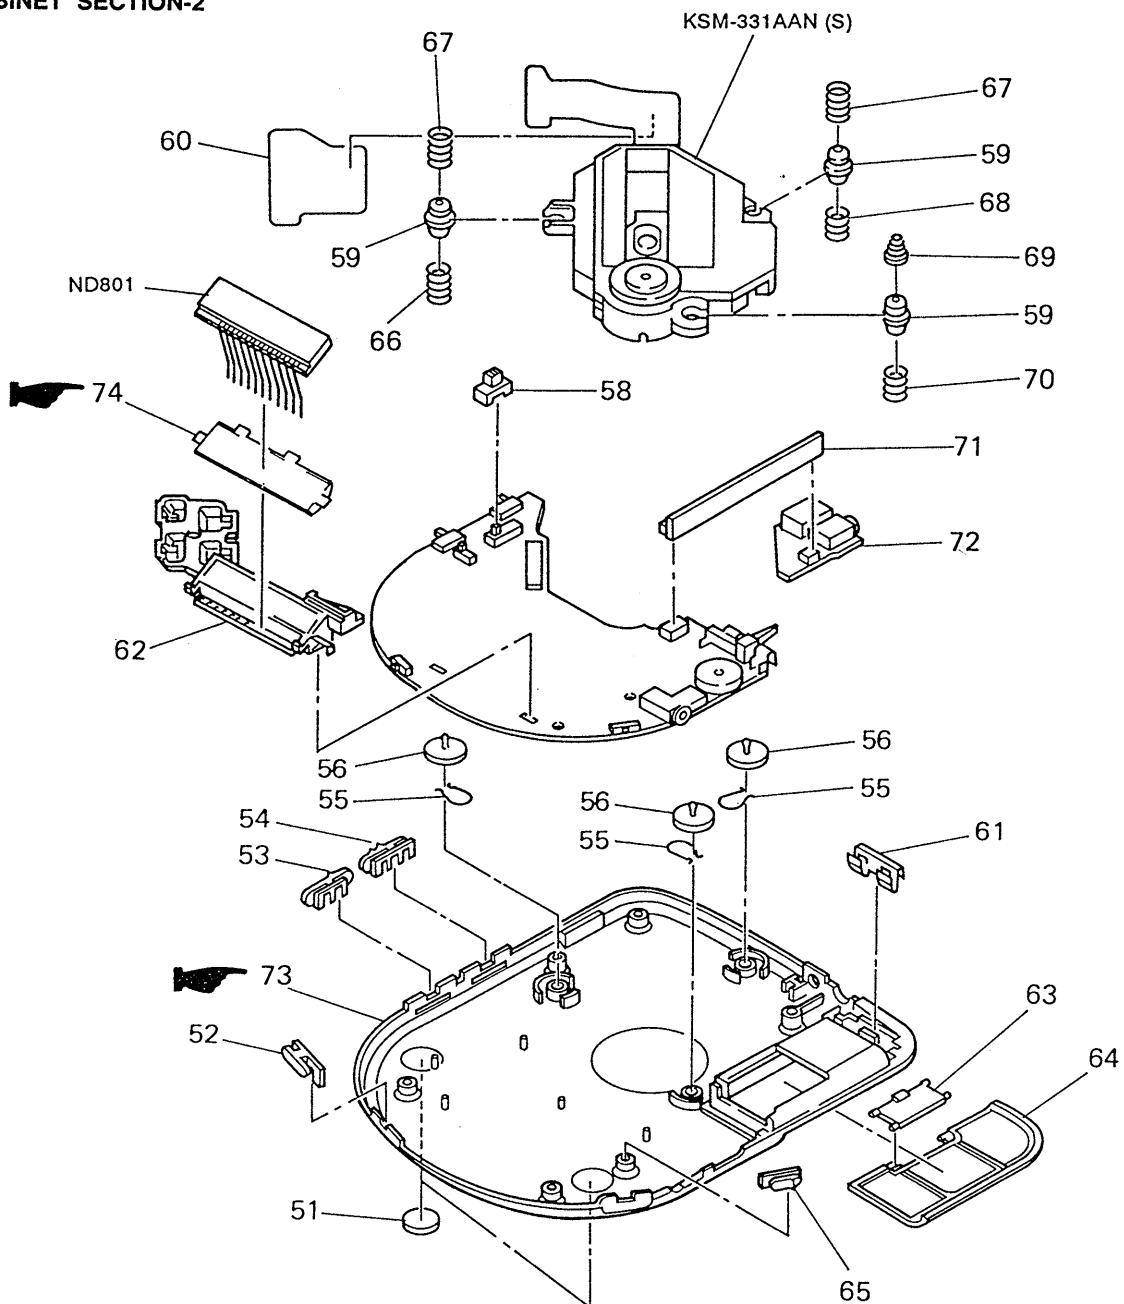

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	4-912-641-01	FOOT, RUBBER		64	4-959-413-11	LID, BATTERY CASE	
52	4-959-439-11	KNOB (HOLD)		65	4-959-437-11	KNOB (AVLS)	
53	4-959-432-01	KNOB (ESP)		66	4-959-425-11	SPRING, COMPRESSION	
54	4-959-431-11	KNOB (IRUMI)		67	4-961-120-01	SPRING (C) (UPPER), COIL	
55	4-959-428-01	SPRING (BUSHING)		68	4-961-118-01	SPRING (A) (UPPER), COIL	
56	4-959-418-01	BUSHING		69	4-959-425-01	SPRING, COMPRESSION	
57	A-3276-484-A	MAIN BOARD, COMPLETE		70	4-959-424-01	SPRING, COMPRESSION	
58	4-959-434-01	KNOB (RESUME)		* 71	1-653-497-11	CN BOARD	
59	4-959-412-02	INSULATOR, OIL		* 72	1-653-498-11	JACK BOARD	
60	4-956-818-01	RETAINER, FLEXIBLE		73	4-959-446-21	CABINET (LOWER)	
61	4-959-419-01	TERMINAL BOARD (RELAY), BATTERY		74	4-959-423-01	PLATE (LCD), LIQUID GUIDE	
* 62	4-959-430-11	HOLDER (LCD)		ND801	1-810-589-11	DISPLAY PANEL, LIQUID CRYSTAL	
63	4-959-414-11	HINGE, BATTERY					

(3) OPTICAL PICK-UP BLOCK SECTION
(KSM-331AAN (S))

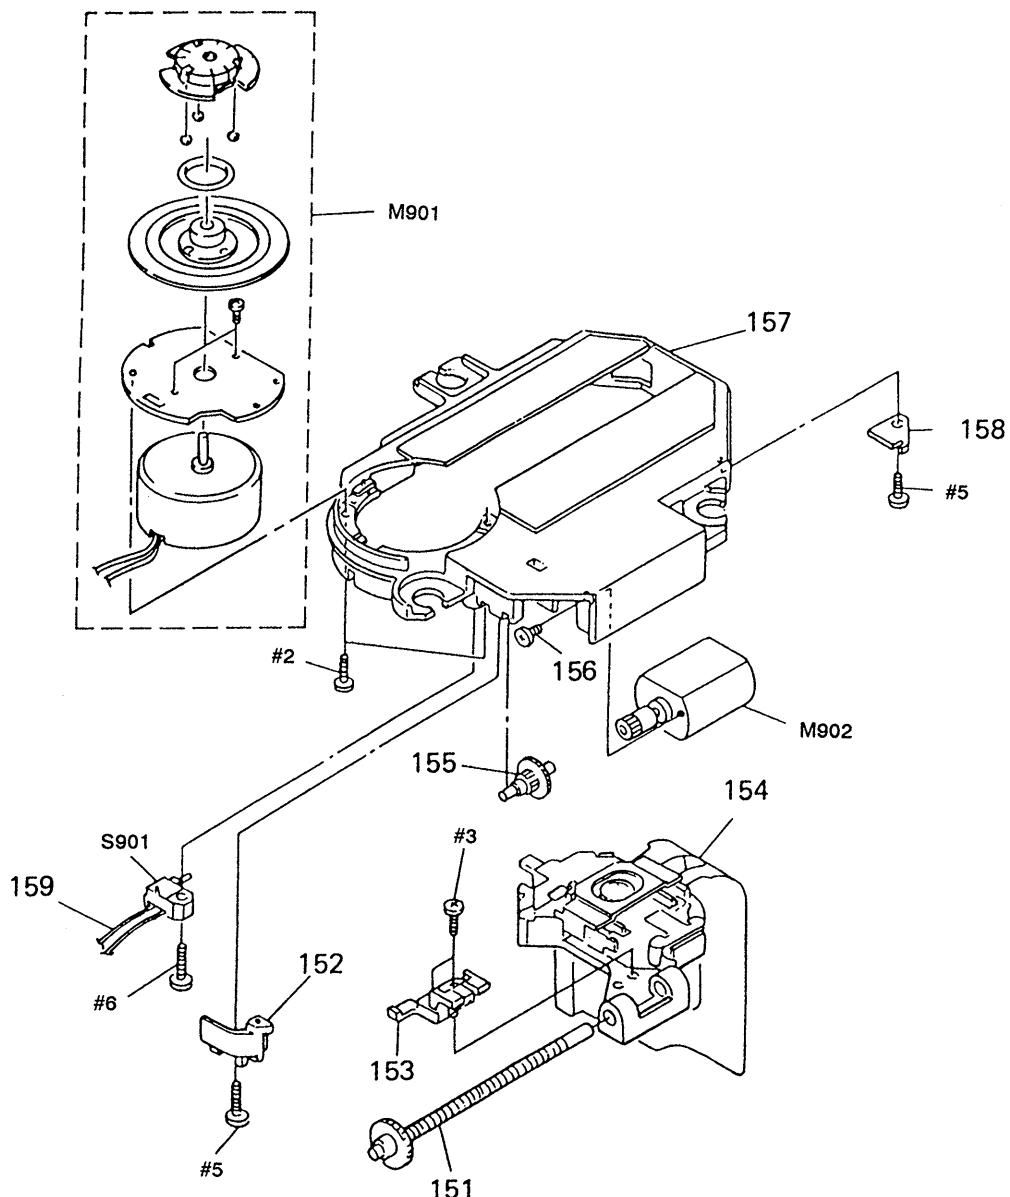

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	X-2625-483-1	SCREW ASSY, SLED		157	2-625-415-05	CHASSIS, MD	
152	2-625-412-02	SPRING, SLED		158	2-625-411-01	RETAINER, SHAFT	
153	2-625-414-02	RACK		159	1-948-418-21	HARNESS	
△154	8-848-289-31	DEVICE, OPTICAL (KSS-331A)		M901	X-2625-485-1	MOTOR ASSY, T. T. (SPINDLE)	
155	2-625-410-01	GEAR (B)		M902	X-2625-171-2	MOTOR ASSY, SLED	
156	3-732-988-01	SCREW (M2X2.5)		S901	1-570-771-11	SWITCH (LIMIT)	

Note: The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

REVISED

CN JACK MAIN

SECTION 7

ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

● SEMICONDUCTORS

In each case, u:μ, for example:

uA .. : μA.. uPA.. : μPA..

uPB.. : μPB.. uPC.. : μPC.. uPD.. : μPD..

● CAPACITORS

uF: μF

● COILS

uH: μH

The components identified by mark ▲ or dotted line with mark. ▲ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark	
*	1-653-497-11	CN BOARD	*****			< RESISTOR >		
				R334	1-216-809-11	METAL CHIP	100 5% 1/16W	
						*****	*****	
		< CONNECTOR >				A-3276-484-A	MAIN BOARD, COMPLETE	
						*****	*****	
CN402	1-568-362-11	CONNECTOR, BOARD TO BOARD 6P				4-959-421-01	TERMINAL BOARD (+), BATTERY	
CN403	1-568-362-11	CONNECTOR, BOARD TO BOARD 6P				4-959-423-01	PLATE (LCD), LIGHT GUIDE	
						 *4-959-430-11	HOLDER (LCD)	
						< CAPACITOR >		
L304	1-410-997-31	INDUCTOR CHIP	2.2uH		C101	1-164-816-11	CERAMIC CHIP	220PF 2% 50V
					C102	1-162-928-11	CERAMIC CHIP	120PF 5% 50V
R122	1-216-813-11	METAL CHIP	220 5% 1/16W		C103	1-162-928-11	CERAMIC CHIP	120PF 5% 50V
R222	1-216-813-11	METAL CHIP	220 5% 1/16W		C104	1-162-924-11	CERAMIC CHIP	56PF 5% 50V
			*****		C105	1-162-924-11	CERAMIC CHIP	56PF 5% 50V
*	1-653-498-11	JACK BOARD	*****		C106	1-135-181-21	TANTALUM CHIP	4.7uF 20% 6.3V
					C107	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
		< CAPACITOR >			C108	1-135-091-00	TANTAL. CHIP	1uF 20% 16V
C115	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V		C109	1-164-222-11	CERAMIC CHIP	0.22uF 25V
C215	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V		C110	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C416	1-164-360-11	CERAMIC CHIP	0.1uF 16V		C111	1-162-953-11	CERAMIC CHIP	100PF 5% 50V
C417	1-164-360-11	CERAMIC CHIP	0.1uF 16V		C113	1-126-608-11	ELECT	330uF 20% 2V
					C114	1-135-091-00	TANTAL. CHIP	1uF 20% 16V
		< CONNECTOR >			C201	1-164-816-11	CERAMIC CHIP	220PF 2% 50V
CN404	1-568-330-11	CONNECTOR, BOARD TO BOARD 6P			C202	1-162-928-11	CERAMIC CHIP	120PF 5% 50V
					C203	1-162-928-11	CERAMIC CHIP	120PF 5% 50V
		< DIODE >			C204	1-162-924-11	CERAMIC CHIP	56PF 5% 50V
D102	8-719-039-99	DIODE	UMZ8.2T		C205	1-162-924-11	CERAMIC CHIP	56PF 5% 50V
D202	8-719-039-99	DIODE	UMZ8.2T		C206	1-135-181-21	TANTALUM CHIP	4.7uF 20% 6.3V
					C207	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
		< JACK >			C208	1-135-091-00	TANTAL. CHIP	1uF 20% 16V
J301	1-565-287-41	JACK (LINE OUT)			C209	1-164-222-11	CERAMIC CHIP	0.22uF 25V
J401	1-568-907-21	JACK, DC (POLARITY UNIFIED TYPE) (DC IN 4.5V)			C210	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
					C211	1-162-953-11	CERAMIC CHIP	100PF 5% 50V
		< COIL >			C212	1-162-953-11	CERAMIC CHIP	100PF 5% 50V
L102	1-410-997-31	INDUCTOR CHIP	2.2uH		C213	1-126-608-11	ELECT	330uF 20% 2V
L202	1-410-997-31	INDUCTOR CHIP	2.2uH		C214	1-135-091-00	TANTAL. CHIP	1uF 20% 16V
					C301	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
					C302	1-162-947-11	CERAMIC CHIP	33PF 5% 50V

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C303	1-164-346-11	CERAMIC CHIP	1uF 16V	C503	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C304	1-164-346-11	CERAMIC CHIP	1uF 16V	C504	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C305	1-164-346-11	CERAMIC CHIP	1uF 16V	C505	1-126-607-11	ELECT CHIP	47uF 20% 4V
C306	1-164-346-11	CERAMIC CHIP	1uF 16V	C506	1-162-944-11	CERAMIC CHIP	18PF 5% 50V
C307	1-164-346-11	CERAMIC CHIP	1uF 16V	C507	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C308	1-126-207-11	ELECT CHIP	33uF 20% 4V	C508	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C309	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C509	1-164-677-11	CERAMIC CHIP	0.033uF 10% 16V
C310	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C510	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V
C311	1-164-346-11	CERAMIC CHIP	1uF 16V	C511	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V
C312	1-164-346-11	CERAMIC CHIP	1uF 16V	C512	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C313	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	C513	1-135-180-21	TANTAL. CHIP	3.3uF 20% 4V
C314	1-164-346-11	CERAMIC CHIP	1uF 16V	C514	1-126-209-11	ELECT	100uF 20% 4V
C315	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	C515	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C317	1-135-201-11	TANTALUM CHIP	10uF 20% 4V	C516	1-163-809-11	CERAMIC CHIP	0.047uF 10% 25V
C318	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	C517	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V
C319	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	C518	1-164-217-11	CERAMIC CHIP	150PF 5% 50V
C320	1-164-346-11	CERAMIC CHIP	1uF 16V	C519	1-135-181-21	TANTALUM CHIP	4.7uF 20% 6.3V
C321	1-164-346-11	CERAMIC CHIP	1uF 16V	C520	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V
C324	1-163-038-00	CERAMIC CHIP	0.1uF 25V	C521	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C334	1-124-778-00	ELECT CHIP	22uF 20% 6.3V	C522	1-164-344-11	CERAMIC CHIP	0.068uF 10% 25V
C335	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C523	1-162-964-11	CERAMIC CHIP	1000PF 10% 50V
C336	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C524	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V
C338	1-164-505-11	CERAMIC CHIP	2.2uF 16V	C525	1-162-964-11	CERAMIC CHIP	1000PF 10% 50V
C339	1-104-847-11	TANTAL. CHIP	22uF 20% 4V	C526	1-135-318-11	TANTAL. CHIP	33uF 20% 4V
C340	1-162-953-11	CERAMIC CHIP	100PF 5% 50V	C528	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V
C341	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C529	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V
C342	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C530	1-164-489-11	CERAMIC CHIP	0.22uF 10% 16V
C343	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C531	1-104-847-11	TANTAL. CHIP	22uF 20% 4V
C344	1-162-953-11	CERAMIC CHIP	100PF 5% 50V	C532	1-162-934-11	CERAMIC CHIP	3PF 0.25% 50V
C347	1-135-210-11	TANTALUM CHIP	4.7uF 20% 10V	C533	1-104-847-11	TANTAL. CHIP	22uF 20% 4V
C349	1-164-346-11	CERAMIC CHIP	1uF 16V	C534	1-164-227-11	CERAMIC CHIP	0.022uF 10% 25V
C350	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C535	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C401	1-127-561-11	ELECT (SOLID)	33uF 20% 10V	C537	1-104-851-11	TANTAL. CHIP	10uF 20% 10V
C402	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C538	1-126-194-21	ELECT	1.5uF 20% 50V
C403	1-164-492-11	CERAMIC CHIP	0.15uF 10% 16V	C539	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C404	1-127-561-11	ELECT (SOLID)	33uF 20% 10V	C540	1-104-852-11	TANTAL. CHIP	22uF 20% 10V
C405	1-162-949-11	CERAMIC CHIP	47PF 5% 50V	C541	1-164-346-11	CERAMIC CHIP	1uF 16V
C406	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C542	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C407	1-128-241-11	ELECT	220uF 20% 10V	C543	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C408	1-162-947-11	CERAMIC CHIP	33PF 5% 50V	C544	1-164-346-11	CERAMIC CHIP	1uF 16V
C409	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C545	1-164-473-11	CERAMIC CHIP	820PF 5% 50V
C411	1-164-346-11	CERAMIC CHIP	1uF 16V	C546	1-164-346-11	CERAMIC CHIP	1uF 16V
C412	1-135-155-21	TANTAL. CHIP	4.7uF 10% 16V	C547	1-164-222-11	CERAMIC CHIP	0.22uF 25V
C413	1-163-038-00	CERAMIC CHIP	0.1uF 25V	C548	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C414	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C549	1-164-346-11	CERAMIC CHIP	1uF 16V
C415	1-104-851-11	TANTAL. CHIP	10uF 20% 10V	C550	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C501	1-164-360-11	CERAMIC CHIP	0.1uF 16V	C551	1-104-847-11	TANTAL. CHIP	22uF 20% 4V
C502	1-135-318-11	TANTAL. CHIP	33uF 20% 4V	C552	1-104-851-11	TANTAL. CHIP	10uF 20% 10V

MAIN

Ref. No.	Part No.	Description	Remark		Ref. No.	Part No.	Description	Remark	
C553	1-126-194-21	ELECT	1. 5uF	20%	50V	D802	8-719-941-09	DIODE	DAP202U
C554	1-164-360-11	CERAMIC CHIP	0.1uF		16V	D804	8-719-941-86	DIODE	DAN202U
C555	1-164-360-11	CERAMIC CHIP	0.1uF		16V	D901	8-719-049-09	DIODE	1SS367-T3SONY
C557	1-162-944-11	CERAMIC CHIP	18PF	5%	50V	D902	8-719-987-45	DIODE	CL-155Y/PG-CD
C558	1-162-944-11	CERAMIC CHIP	18PF	5%	50V	D903	8-719-987-45	DIODE	CL-155Y/PG-CD
C559	1-164-222-11	CERAMIC CHIP	0.22uF		25V	D904	8-719-987-45	DIODE	CL-155Y/PG-CD
C560	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	D905	8-719-987-45	DIODE	CL-155Y/PG-CD
C561	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V	D906	8-719-987-45	DIODE	CL-155Y/PG-CD
C562	1-162-913-11	CERAMIC CHIP	8PF	0.5PF	50V	D907	8-719-987-45	DIODE	CL-155Y/PG-CD
C563	1-162-913-11	CERAMIC CHIP	8PF	0.5PF	50V	D908	8-719-987-45	DIODE	CL-155Y/PG-CD
C564	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	D909	8-719-987-45	DIODE	CL-155Y/PG-CD
C569	1-164-360-11	CERAMIC CHIP	0.1uF		16V	D910	8-719-987-45	DIODE	CL-155Y/PG-CD
C570	1-164-360-11	CERAMIC CHIP	0.1uF		16V	D911	8-719-987-45	DIODE	CL-155Y/PG-CD
C805	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	D912	8-719-987-45	DIODE	CL-155Y/PG-CD
C806	1-124-779-00	ELECT CHIP	10uF	20%	16V	D913	8-719-987-45	DIODE	CL-155Y/PG-CD
C807	1-164-346-11	CERAMIC CHIP	1uF		16V	D914	8-719-987-45	DIODE	CL-155Y/PG-CD
C809	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	D915	8-719-987-45	DIODE	CL-155Y/PG-CD
C816	1-164-346-11	CERAMIC CHIP	1uF		16V	D916	8-719-987-45	DIODE	CL-155Y/PG-CD
C901	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	D917	8-719-987-45	DIODE	CL-155Y/PG-CD
< CONNECTOR >					< FERRITE BEAD >				
CN401	1-568-330-11	CONNECTOR, BOARD TO BOARD 6P				FB101	1-550-907-21	BEAD, FERRITE (CHIP)	
CN501	1-566-534-11	CONNECTOR, FPC (ZIF) 18P				FB201	1-550-907-21	BEAD, FERRITE (CHIP)	
* CN502	1-695-320-51	PIN, CONNECTOR (1.5MM) (SMD) 2P				FB301	1-550-907-21	BEAD, FERRITE (CHIP)	
* CN503	1-695-320-31	PIN, CONNECTOR (1.5MM) (SMD) 2P				FB302	1-550-907-21	BEAD, FERRITE (CHIP)	
* CN504	1-695-320-21	PIN, CONNECTOR (1.5MM) (SMD) 2P				FB303	1-550-907-21	BEAD, FERRITE (CHIP)	
< DIODE >					< IC >				
D101	8-719-039-99	DIODE	UMZ8.2T			IC301	8-759-177-67	IC	SM5853BF
D201	8-719-039-99	DIODE	UMZ8.2T			IC302	8-759-097-92	IC	NJM2100V
D301	8-719-049-11	DIODE	1SS377-TE85L			IC303	8-759-285-22	IC	BA3574AFS
D302	8-719-941-86	DIODE	DAN202U			IC304	8-759-161-75	IC	NJM2112V(TE2)
D307	8-719-941-86	DIODE	DAN202U			IC401	8-759-176-73	IC	RS5RJ32271
D308	8-719-422-46	DIODE	MA8056			IC402	8-759-097-92	IC	NJM2100V
D401	8-719-049-09	DIODE	1SS367-T3SONY			IC501	8-759-264-79	IC	BA6373K
D402	8-719-975-33	DIODE	RB110C			IC502	8-759-293-61	IC	BU9310BKS
D403	8-719-975-33	DIODE	RB110C			IC503	8-759-097-92	IC	NJM2100V
D404	8-719-975-33	DIODE	RB110C			IC504	8-759-031-84	IC	SC7S04F
D405	8-719-938-72	DIODE	SB01-05CP			IC505	8-759-179-71	IC	RF5C241
D406	8-719-938-75	DIODE	SB05-05CP			IC506	8-759-264-81	IC	LH5116ZE
D407	8-719-941-86	DIODE	DAN202U			IC507	8-759-263-14	IC	SC111281LFU
D501	8-719-049-11	DIODE	1SS377-TE85L			IC508	8-759-264-82	IC	DRCC4M
D502	8-719-049-09	DIODE	1SS367-T3SONY			IC801	8-752-856-81	IC	CXP83412-008Q
D503	8-719-049-10	DIODE	1SS374-TE85L			< JACK >			
D504	8-719-049-09	DIODE	1SS367-T3SONY			J302	1-580-680-11	JACK (PHONES/REMOTE)	
D505	8-719-941-86	DIODE	DAN202U						
D506	8-719-977-34	DIODE	DTZ12						
D507	8-719-049-09	DIODE	1SS367-T3SONY						
D508	8-719-422-46	DIODE	MA8056						

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark				
< RESISTOR >											
JC301	1-216-295-00	METAL CHIP	0 5% 1/10W	Q503	8-729-014-34	TRANSISTOR	RN2311-TE85L				
JC501	1-216-864-11	METAL CHIP	0 5% 1/16W	Q504	8-729-402-45	TRANSISTOR	UN5212				
JC901	1-216-295-00	METAL CHIP	0 5% 1/10W	Q801	8-729-402-32	TRANSISTOR	2SD1819A-R				
				Q901	8-729-806-75	TRANSISTOR	2SB1120-F				
				Q902	8-729-014-18	TRANSISTOR	RN2303-TE85L				
< COIL >											
L301	1-410-997-31	INDUCTOR CHIP	2. 2uH	Q903	8-729-402-13	TRANSISTOR	XN1501				
L302	1-410-997-31	INDUCTOR CHIP	2. 2uH	Q904	8-729-924-79	TRANSISTOR	FMG8				
L305	1-410-997-31	INDUCTOR CHIP	2. 2uH	Q905	8-729-402-13	TRANSISTOR	XN1501				
L401	1-412-622-51	INDUCTOR	10uH	Q906	8-729-924-79	TRANSISTOR	FMG8				
L402	1-412-630-51	INDUCTOR	47uH	Q907	8-729-402-13	TRANSISTOR	XN1501				
L502	1-414-398-11	INDUCTOR	10uH	Q908	8-729-924-79	TRANSISTOR	FMG8				
L503	1-414-398-11	INDUCTOR	10uH	Q909	8-729-141-75	TRANSISTOR	2SD596DV345				
L504	1-414-398-11	INDUCTOR	10uH	Q910	8-729-402-45	TRANSISTOR	UN5212				
L505	1-414-402-11	INDUCTOR	47uH	Q911	8-729-141-75	TRANSISTOR	2SD596DV345				
L506	1-414-402-11	INDUCTOR	47uH	< RESISTOR >							
L507	1-414-402-11	INDUCTOR	47uH	R101	1-216-834-11	METAL CHIP	12K 5% 1/16W				
L508	1-414-402-11	INDUCTOR	47uH	R102	1-216-834-11	METAL CHIP	12K 5% 1/16W				
L509	1-414-398-11	INDUCTOR	10uH	R103	1-216-837-11	METAL CHIP	22K 5% 1/16W				
				R104	1-216-837-11	METAL CHIP	22K 5% 1/16W				
				R105	1-216-846-11	METAL CHIP	120K 5% 1/16W				
< LIQUID CRYSTAL >											
ND801	1-810-589-11	DISPLAY PANEL, LIQUID CRYSTAL		R106	1-216-839-11	METAL CHIP	33K 5% 1/16W				
< PILOT LAMP >											
PL901	1-518-259-00	LAMP, PILOT		R107	1-216-839-11	METAL CHIP	33K 5% 1/16W				
< TRANSISTOR >											
Q101	8-729-023-22	TRANSISTOR	2SD2114K	R108	1-216-843-11	METAL CHIP	68K 5% 1/16W				
Q201	8-729-023-22	TRANSISTOR	2SD2114K	R109	1-216-843-11	METAL CHIP	68K 5% 1/16W				
Q301	8-729-904-86	TRANSISTOR	2SB1197K-Q	R111	1-216-845-11	METAL CHIP	100K 5% 1/16W				
Q302	8-729-402-13	TRANSISTOR	XN1501	R112	1-216-843-11	METAL CHIP	68K 5% 1/16W				
Q303	8-729-907-39	TRANSISTOR	IMD2	R113	1-216-823-11	METAL CHIP	1. 5K 5% 1/16W				
Q304	8-729-014-12	TRANSISTOR	RN1311-TE85L	R114	1-216-789-11	METAL CHIP	2. 2 5% 1/16W				
Q307	8-729-402-13	TRANSISTOR	XN1501	R115	1-216-833-11	METAL CHIP	10K 5% 1/16W				
Q308	8-729-101-07	TRANSISTOR	2SB798-DL	R116	1-216-821-11	METAL CHIP	1K 5% 1/16W				
Q311	8-729-403-17	TRANSISTOR	XN1215	R117	1-216-843-11	METAL CHIP	68K 5% 1/16W				
Q312	8-729-403-45	TRANSISTOR	XN1115	R118	1-216-839-11	METAL CHIP	33K 5% 1/16W				
Q401	8-729-014-18	TRANSISTOR	RN2303-TE85L	R119	1-216-832-11	METAL CHIP	8. 2K 5% 1/16W				
Q402	8-729-022-67	TRANSISTOR	2SC3650-TD	R120	1-216-837-11	METAL CHIP	22K 5% 1/16W				
Q403	8-729-923-36	TRANSISTOR	2SD1963-Q. R	R121	1-216-837-11	METAL CHIP	22K 5% 1/16W				
Q408	8-729-922-34	TRANSISTOR	2SD1758F5-QR	R123	1-216-815-11	METAL CHIP	330 5% 1/16W				
Q409	8-729-402-32	TRANSISTOR	2SD1819A-R	R201	1-216-834-11	METAL CHIP	12K 5% 1/16W				
Q410	8-729-403-02	TRANSISTOR	XN4212	R202	1-216-834-11	METAL CHIP	12K 5% 1/16W				
Q411	8-729-014-18	TRANSISTOR	RN2303-TE85L	R203	1-216-837-11	METAL CHIP	22K 5% 1/16W				
Q412	8-729-920-56	TRANSISTOR	FMG1	R204	1-216-837-11	METAL CHIP	22K 5% 1/16W				
Q413	8-729-014-18	TRANSISTOR	RN2303-TE85L	R205	1-216-846-11	METAL CHIP	120K 5% 1/16W				
Q501	8-729-904-86	TRANSISTOR	2SB1197K-Q	R206	1-216-839-11	METAL CHIP	33K 5% 1/16W				
				R207	1-216-839-11	METAL CHIP	33K 5% 1/16W				
				R208	1-216-843-11	METAL CHIP	68K 5% 1/16W				
				R209	1-216-843-11	METAL CHIP	68K 5% 1/16W				
				R211	1-216-845-11	METAL CHIP	100K 5% 1/16W				
				R212	1-216-843-11	METAL CHIP	68K 5% 1/16W				
				R213	1-216-823-11	METAL CHIP	1. 5K 5% 1/16W				

MAIN

Ref. No.	Part No.	Description		Remark	Ref. No.	Part No.	Description		Remark		
R214	1-216-789-11	METAL CHIP	2. 2	5%	1/16W	R415	1-217-671-11	METAL CHIP	1	5%	1/10W
R215	1-216-833-11	METAL CHIP	10K	5%	1/16W	R416	1-217-671-11	METAL CHIP	1	5%	1/10W
R216	1-216-821-11	METAL CHIP	1K	5%	1/16W	R417	1-218-724-11	METAL CHIP	22K	0.50%	1/16W
R217	1-216-843-11	METAL CHIP	68K	5%	1/16W	R418	1-216-821-11	METAL CHIP	1K	5%	1/16W
R218	1-216-839-11	METAL CHIP	33K	5%	1/16W	R419	1-218-734-11	METAL CHIP	56K	0.50%	1/16W
R219	1-216-843-11	METAL CHIP	68K	5%	1/16W	R420	1-218-724-11	METAL CHIP	22K	0.50%	1/16W
R220	1-216-837-11	METAL CHIP	22K	5%	1/16W	R421	1-218-717-11	METAL CHIP	11K	0.50%	1/16W
R221	1-216-837-11	METAL CHIP	22K	5%	1/16W	R422	1-218-870-11	METAL CHIP	9.1K	0.50%	1/16W
R223	1-216-815-11	METAL CHIP	330	5%	1/16W	R423	1-218-720-11	METAL CHIP	15K	0.50%	1/16W
R301	1-216-001-00	METAL CHIP	10	5%	1/10W	R424	1-216-019-00	METAL CHIP	56	5%	1/10W
R303	1-216-833-11	METAL CHIP	10K	5%	1/16W	R501	1-216-845-11	METAL CHIP	100K	5%	1/16W
R304	1-216-845-11	METAL CHIP	100K	5%	1/16W	R502	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R305	1-216-825-11	METAL CHIP	2. 2K	5%	1/16W	R503	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R306	1-218-716-11	METAL CHIP	10K	0.50%	1/16W	R504	1-216-839-11	METAL CHIP	33K	5%	1/16W
R307	1-216-817-11	METAL CHIP	470	5%	1/16W	R505	1-211-992-11	METAL CHIP	91	0.50%	1/16W
R308	1-216-827-11	METAL CHIP	3. 3K	5%	1/16W	R506	1-217-671-11	METAL CHIP	1	5%	1/10W
R309	1-216-825-11	METAL CHIP	2. 2K	5%	1/16W	R507	1-216-845-11	METAL CHIP	100K	5%	1/16W
R310	1-216-833-11	METAL CHIP	10K	5%	1/16W	R508	1-218-708-11	METAL CHIP	4.7K	0.50%	1/16W
R311	1-216-831-11	METAL CHIP	6. 8K	5%	1/16W	R509	1-218-736-11	METAL CHIP	68K	0.50%	1/16W
R312	1-216-831-11	METAL CHIP	6. 8K	5%	1/16W	R510	1-218-870-11	METAL CHIP	9.1K	0.50%	1/16W
R317	1-216-817-11	METAL CHIP	470	5%	1/16W	R511	1-218-867-11	METAL CHIP	6.8K	0.50%	1/16W
R318	1-216-821-11	METAL CHIP	1K	5%	1/16W	R512	1-216-846-11	METAL CHIP	120K	5%	1/16W
R319	1-216-835-11	METAL CHIP	15K	5%	1/16W	R513	1-216-833-11	METAL CHIP	10K	5%	1/16W
R320	1-216-823-11	METAL CHIP	1. 5K	5%	1/16W	R514	1-216-833-11	METAL CHIP	10K	5%	1/16W
R321	1-218-345-11	METAL GLAZE	9. 1K	5%	1/16W	R515	1-216-833-11	METAL CHIP	10K	5%	1/16W
R322	1-216-821-11	METAL CHIP	1K	5%	1/16W	R516	1-218-714-11	METAL CHIP	8.2K	0.50%	1/16W
R323	1-216-825-11	METAL CHIP	2. 2K	5%	1/16W	R517	1-218-724-11	METAL CHIP	22K	0.50%	1/16W
R324	1-216-845-11	METAL CHIP	100K	5%	1/16W	R518	1-218-886-11	METAL CHIP	43K	0.50%	1/16W
R325	1-216-833-11	METAL CHIP	10K	5%	1/16W	R519	1-216-849-11	METAL CHIP	220K	5%	1/16W
R326	1-216-833-11	METAL CHIP	10K	5%	1/16W	R520	1-216-844-11	METAL CHIP	82K	5%	1/16W
R327	1-216-845-11	METAL CHIP	100K	5%	1/16W	R521	1-216-837-11	METAL CHIP	22K	5%	1/16W
R328	1-216-825-11	METAL CHIP	2. 2K	5%	1/16W	R522	1-216-833-11	METAL CHIP	10K	5%	1/16W
R329	1-216-073-00	METAL CHIP	10K	5%	1/10W	R523	1-216-821-11	METAL CHIP	1K	5%	1/16W
R331	1-216-821-11	METAL CHIP	1K	5%	1/16W	R524	1-216-833-11	METAL CHIP	10K	5%	1/16W
R332	1-216-821-11	METAL CHIP	1K	5%	1/16W	R525	1-216-833-11	METAL CHIP	10K	5%	1/16W
R333	1-216-825-11	METAL CHIP	2. 2K	5%	1/16W	R526	1-216-857-11	METAL CHIP	1M	5%	1/16W
R401	1-218-739-11	METAL CHIP	91K	0.50%	1/16W	R527	1-216-855-11	METAL CHIP	680K	5%	1/16W
R402	1-218-724-11	METAL CHIP	22K	0.50%	1/16W	R528	1-216-841-11	METAL CHIP	47K	5%	1/16W
R403	1-216-833-11	METAL CHIP	10K	5%	1/16W	R529	1-216-849-11	METAL CHIP	220K	5%	1/16W
R404	1-216-844-11	METAL CHIP	82K	5%	1/16W	R530	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R405	1-216-833-11	METAL CHIP	10K	5%	1/16W	R531	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R406	1-216-805-11	METAL CHIP	47	5%	1/16W	R532	1-216-837-11	METAL CHIP	22K	5%	1/16W
R407	1-216-809-11	METAL CHIP	100	5%	1/16W	R534	1-216-847-11	METAL CHIP	150K	5%	1/16W
R410	1-216-857-11	METAL CHIP	1M	5%	1/16W	R535	1-216-833-11	METAL CHIP	10K	5%	1/16W
R411	1-216-857-11	METAL CHIP	1M	5%	1/16W	R536	1-216-857-11	METAL CHIP	1M	5%	1/16W
R412	1-216-857-11	METAL CHIP	1M	5%	1/16W	R537	1-216-833-11	METAL CHIP	10K	5%	1/16W
R413	1-216-857-11	METAL CHIP	1M	5%	1/16W	R538	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R414	1-216-854-11	METAL CHIP	560K	5%	1/16W	R539	1-216-843-11	METAL CHIP	68K	5%	1/16W
						R540	1-216-833-11	METAL CHIP	10K	5%	1/16W

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R541	1-216-833-11	METAL CHIP	10K	5%	1/16W	R918	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R542	1-216-834-11	METAL CHIP	12K	5%	1/16W	R919	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R543	1-216-834-11	METAL CHIP	12K	5%	1/16W	R920	1-216-799-11	METAL CHIP	15	5%	1/16W
R544	1-216-823-11	METAL CHIP	1.5K	5%	1/16W	R921	1-216-805-11	METAL CHIP	47	5%	1/16W
R545	1-216-847-11	METAL CHIP	150K	5%	1/16W	R922	1-216-799-11	METAL CHIP	15	5%	1/16W
R546	1-216-842-11	METAL CHIP	56K	5%	1/16W	R923	1-216-805-11	METAL CHIP	47	5%	1/16W
R547	1-218-705-11	METAL CHIP	3.6K	0.50%	1/16W	R924	1-216-805-11	METAL CHIP	47	5%	1/16W
R548	1-216-821-11	METAL CHIP	1K	5%	1/16W	R925	1-216-809-11	METAL CHIP	100	5%	1/16W
R549	1-216-845-11	METAL CHIP	100K	5%	1/16W	R926	1-216-805-11	METAL CHIP	47	5%	1/16W
R550	1-216-833-11	METAL CHIP	10K	5%	1/16W	R927	1-216-809-11	METAL CHIP	100	5%	1/16W
R551	1-216-839-11	METAL CHIP	33K	5%	1/16W	R928	1-216-805-11	METAL CHIP	47	5%	1/16W
R552	1-216-849-11	METAL CHIP	220K	5%	1/16W	R929	1-216-809-11	METAL CHIP	100	5%	1/16W
R554	1-216-849-11	METAL CHIP	220K	5%	1/16W	R930	1-216-805-11	METAL CHIP	47	5%	1/16W
R802	1-216-857-11	METAL CHIP	1M	5%	1/16W	R931	1-216-809-11	METAL CHIP	100	5%	1/16W
R804	1-216-845-11	METAL CHIP	100K	5%	1/16W	R932	1-216-805-11	METAL CHIP	47	5%	1/16W
R805	1-216-857-11	METAL CHIP	1M	5%	1/16W	R933	1-216-809-11	METAL CHIP	100	5%	1/16W
R806	1-216-820-11	METAL CHIP	820	5%	1/16W	R934	1-216-805-11	METAL CHIP	47	5%	1/16W
R807	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	R935	1-216-809-11	METAL CHIP	100	5%	1/16W
R808	1-216-823-11	METAL CHIP	1.5K	5%	1/16W	R936	1-216-805-11	METAL CHIP	47	5%	1/16W
R809	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R937	1-216-809-11	METAL CHIP	100	5%	1/16W
R810	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	R938	1-216-805-11	METAL CHIP	47	5%	1/16W
R811	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R939	1-216-809-11	METAL CHIP	100	5%	1/16W
R812	1-216-857-11	METAL CHIP	1M	5%	1/16W	R940	1-216-805-11	METAL CHIP	47	5%	1/16W
R813	1-216-854-11	METAL CHIP	560K	5%	1/16W	R941	1-216-809-11	METAL CHIP	100	5%	1/16W
R814	1-218-716-11	METAL CHIP	10K	0.50%	1/16W	R942	1-216-805-11	METAL CHIP	47	5%	1/16W
R815	1-216-861-11	METAL CHIP	2.2M	5%	1/16W	R943	1-216-809-11	METAL CHIP	100	5%	1/16W
R819	1-216-838-11	METAL CHIP	27K	5%	1/16W	R944	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R820	1-216-845-11	METAL CHIP	100K	5%	1/16W	R945	1-216-841-11	METAL CHIP	47K	5%	1/16W
R821	1-216-857-11	METAL CHIP	1M	5%	1/16W	< VARIABLE RESISTOR >					
R822	1-216-837-11	METAL CHIP	22K	5%	1/16W	RV301	1-223-382-51	RES, VAR, CARBON 10K/10K (VOLUME ▶)			
R823	1-216-837-11	METAL CHIP	22K	5%	1/16W	RV501	1-223-612-11	RES, ADJ, METAL GLAZE 47K			
R824	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	RV502	1-223-695-11	RES, ADJ, METAL GLAZE 10K			
R825	1-216-837-11	METAL CHIP	22K	5%	1/16W	RV503	1-223-578-11	RES, ADJ, METAL GLAZE 22K			
R901	1-216-821-11	METAL CHIP	1K	5%	1/16W	RV504	1-223-578-11	RES, ADJ, METAL GLAZE 22K			
R902	1-216-835-11	METAL CHIP	15K	5%	1/16W	RV505	1-223-612-11	RES, ADJ, METAL GLAZE 47K			
R903	1-216-845-11	METAL CHIP	100K	5%	1/16W	< SWITCH >					
R904	1-216-817-11	METAL CHIP	470	5%	1/16W	S302	1-571-506-41	SWITCH, SLIDE (AVLS)			
R906	1-216-805-11	METAL CHIP	47	5%	1/16W	S801	1-572-272-11	SWITCH, SLIDE (HOLD)			
R907	1-216-809-11	METAL CHIP	100	5%	1/16W	S802	1-692-459-11	SWITCH (▶ II)			
R908	1-216-805-11	METAL CHIP	47	5%	1/16W	S803	1-692-459-11	SWITCH (■ STOP/DISPLAY OFF)			
R909	1-216-809-11	METAL CHIP	100	5%	1/16W	S804	1-692-459-11	SWITCH (▶▶)			
R910	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	S805	1-692-459-11	SWITCH (◀)			
R911	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	S806	1-692-459-11	SWITCH (REPEAT/ENTER)			
R912	1-216-805-11	METAL CHIP	47	5%	1/16W	S807	1-692-459-11	SWITCH (PLAY MODE)			
R913	1-216-809-11	METAL CHIP	100	5%	1/16W	S808	1-692-459-11	SWITCH (DSP)			
R914	1-216-805-11	METAL CHIP	47	5%	1/16W	S809	1-572-126-11	SWITCH, PUSH (1 KEY) (BATT SW)			
R915	1-216-809-11	METAL CHIP	100	5%	1/16W						
R916	1-216-829-11	METAL CHIP	4.7K	5%	1/16W						
R917	1-216-841-11	METAL CHIP	47K	5%	1/16W						

MAIN

Ref. No.	Part No.	Description	Remark
S810	1-570-953-11	SWITCH, PUSH (1 KEY) (OPEN)	
S811	1-572-908-11	SWITCH, SLIDE (RESUME)	
S812	1-572-272-11	SWITCH, SLIDE (ESP)	
S813	1-692-459-11	SWITCH (SURROUND)	
S814	1-572-272-11	SWITCH, SLIDE (ILLUMINATION)	

< TRANSFORMER >

T401 1-423-636-11 TRANSFORMER, DC-DC CONVERTER

< VIBRATOR >

X301 1-579-345-11 VIBRATOR, CERAMIC (16.94MHz)
X801 1-579-063-21 VIBRATOR, CERAMIC (4.19MHz)

MISCELLANEOUS

△154	8-848-289-31	DEVICE, OPTICAL (KSS-331A)
159	1-948-418-21	HARNESS
M901	X-2625-485-1	MOTOR ASSY, T. T. (SPINDLE)
M902	X-2625-171-2	MOTOR ASSY, SLED
S901	1-570-771-11	SWITCH (LIMIT)

ACCESSORIES & PACKING MATERIALS

A	A-3263-915-A CPA-6 (SET) CAR CONNECTING PACK
1	1-467-009-11 ADAPTOR, AC (AC-E455)
1	1-532-360-XX FUSE, GLASS TUBE (for DCC-E455)
1	1-751-087-11 CORD, CAR BATTERY (DCC-E455)
1	1-751-419-11 CORD, CONNECTION
2	2-120-526-01 TUBE, SPIRAL
3	3-759-138-21 MANUAL, INSTRUCTION (ENGLISH)
4	4-916-258-01 MAGIC TAPE
4	4-950-259-01 CAP (for DCC-E455)
4	4-950-263-01 SPRING (for DCC-E455)
4	4-950-277-01 CHIP (for DCC-E455)
*	4-967-787-01 CUSHION
*	4-967-797-01 INDIVIDUAL CARTON

HARDWARE LIST

#2	7-627-852-17 SCREW PRECISION +P 1.7X4
#3	7-627-852-18 SCREW PRECISION +P 1.7X4 TYPE 3
#5	7-685-104-19 SCREW (2X6) TAPPING, (B)
#6	7-685-105-19 SCREW (2X8) TAPPING, (B)

The components identified by
mark △ or dotted line with mark.
△ are critical for safety.
Replace only with part number
specified.