

# D-835K/837K/838K

## SERVICE MANUAL



Photo: D-838K

*US Model  
Canadian Model*

D-835K/837K/838K

*AEP Model*

D-835K/838K

*UK Model*

D-835K

*E Model*

D-837K/838K

*Australian Model*

D-838K

Model Name Using Similar Mechanism	D-840K
CD Mechanism Type	KSM-333CAN
Optical Pick-Up Name	KSS-333C

### SPECIFICATIONS

#### System

Compact disc digital audio system

#### Laser diode properties

Material: GaAlAs

Wavelength:  $\lambda=780$  nm

Emission duration: Continuous

Laser output power: Less than

44.6  $\mu$ W\*

\*This output is the value measured at a distance of 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture.

#### Error correction

Sony Super Strategy Cross Interleave Reed Solomon Code

#### D-A conversion

1-bit quartz time-axis control

#### Frequency response

20 - 20,000 Hz ±1 dB (measured by EIAJ CP-307)

#### Output (at 4.5 V input level)

Headphones (stereo minijack)

20 mW + 20 mW at 16 ohms

Line output (stereo minijack)

Output level 0.75 V rms at 47 kilohms

Recommended load impedance over 10 kilohms

#### General

##### Power requirements

- Sony BP-DM10 rechargeable battery:  
2.4 V DC, Ni-Cd, 650 mAh

- Two LR6 (size AA) batteries: 3 V DC
- AC power adaptor (DC IN 4.5 V jack):

220 - 230 V, 50 Hz (European model)

120 V, 60 Hz (USA, Canadian, Central and South American model)

240 V, 50 Hz (Australian model)

230 - 240 V, 50 Hz (U.K. model)

- Car battery (DC IN 4.5 V jack):

4.5 V DC

#### Dimensions (w/h/d) (incl. projecting parts and controls)

Approx. 140 x 33.3 x 166.5 mm  
(5 1/2 x 1 1/4 x 6 5/8 in.)

#### Mass (excl. rechargeable batteries)

Approx. 300 g (10.6 oz)

#### Operating temperature

5°C - 35°C (41°F - 95°F)

#### Supplied accessories

##### D-835K

AC power adaptor (1)

Connecting cord (Phono plug x 2 ↔ stereo miniplug) (1)

Stereo headphones (1)\*

Car connecting pack (1)

Car battery cord (1)

Spiral tube (1)

Velcro tapes (2)

Spare fuse (1)

Velcro tapes for attaching card remote control (1)

##### D-837K

AC power adaptor (1)

Connecting cord (Phono plug x 2 ↔ stereo miniplug) (1)

Card remote control (1)

Stereo headphones (1)\*

Car connecting pack (1)

Car battery cord (1)

Spiral tube (1)

Velcro tapes (2)

Spare fuse (1)

Velcro tapes for attaching card remote control (1)

\*Supplied with Canadian model only

##### D-838K

AC power adaptor (1)

Connecting cord (Phono plug x 2 ↔ stereo miniplug) (1)

Card remote control (1)

Stereo headphones (1)\*

Car connecting pack (1)

Car battery cord (1)

Spiral tube (1)

Velcro tapes (2)

Spare fuse (1)

Velcro tapes for attaching card remote control (1)

\*Supplied with Canadian and European models

Design and specifications are subject to change without notice.

**COMPACT DISC COMPACT PLAYER**  
**SONY®**



## TABLE OF CONTENTS

<b>1. GENERAL</b>	
Parts Identification.....	3
<b>2. SERVICE NOTE</b>	4
<b>3. DISASSEMBLY</b>	6
<b>4. SERVICE MODE</b>	7
<b>5. ELECTRICAL ADJUSTMENTS</b>	8
<b>6. DIAGRAMS</b>	
6-1. Printed Wiring Board .....	13
6-2. Schematic Diagram .....	17
6-3. IC Pin Function Description .....	25
<b>7. EXPLODED VIEWS</b>	27
<b>8. ELECTRICAL PARTS LIST</b>	30

### Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

### Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

### SAFETY-RELATED COMPONENT WARNING!!


COMPONENTS IDENTIFIED BY MARK  $\Delta$  OR DOTTED LINE WITH MARK  $\Delta$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

### ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  $\Delta$  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the rear exterior.

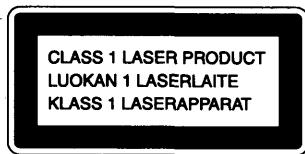

### CAUTION


Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

## SECTION 1 GENERAL

This section is extracted from  
instruction manual.

### Parts identification

For explanation of the use of each part, refer to the pages indicated in parentheses.  
For the supplied remote control, see "Using the supplied card remote control"  
(D-837K/D-838K) on page 8.

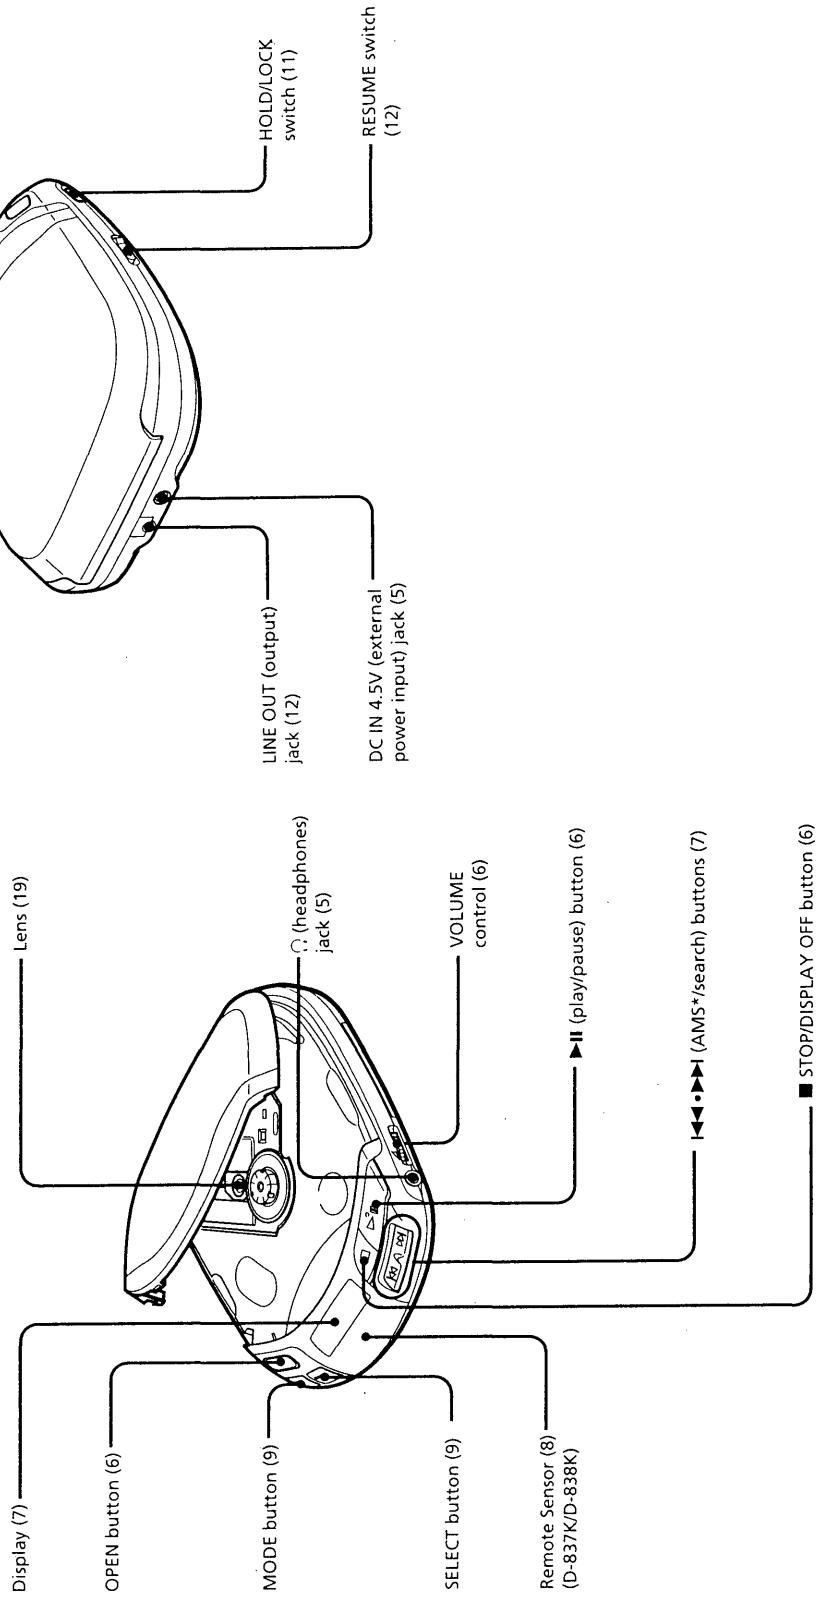

\* AMS: Automatic Music Sensor

## SECTION 2 SERVICE NOTE

### NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts. The flexible board is easily damaged and should be handled with care.

### NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

### Before Replacing the Optical Pick-Up Block

Please be sure to check thoroughly the parameters as per the "Optical Pick-Up Block Checking Procedures" (Part No.: 9-960-027-11) issued separately before replacing the optical pick-up block.

Note and specifications required to check are given below.

- FOK output: IC801 ⑭ pin  
When checking FOK, remove the lead wire to disc motor.
- S curve P-to-P value: 2.5 Vp-p IC501 ⑬ pin  
When checking S curve P-to-P value, remove the lead wire to disc motor.
- Adjusted part for focus gain adjustment: RV504
- RF signal P-to-P value: 0.7 – 1.1 Vp-p
- Traverse signal P-to-P value: 1.2 – 2.0 Vp-p
- The repairing grating holder is impossible.
- Adjusted part for tracking gain adjustment: RV503

### Precautions for Checking Emission of Laser Diode

Laser light of the equipment is focused by the object lens in the optical pick-up so that the light focuses on the reflection surface of the disc. Therefore, be sure to keep your eyes more than 30 cm apart from the object lens when you check the emission of laser diode.

### Laser Diode Checking Methods

During normal operation of the equipment, emission of the laser diode is prohibited unless the upper panel is closed while turning ON the S810 (push switch type).

The following two checking methods for the laser diode are operable.

#### • Method-1 (In the service mode or normal operation):

##### Emission of the laser diode is visually checked.

1. Open the upper panel.
2. Push the S810 as shown in Fig. 1.
3. Press the ▶II key.
4. Check the object lens for confirming normal emission of the laser diode. If not emitting, there is a trouble in the automatic power control circuit or the optical pick-up.

During normal operation, the laser diode is turned ON about 2.5 seconds for focus searching.


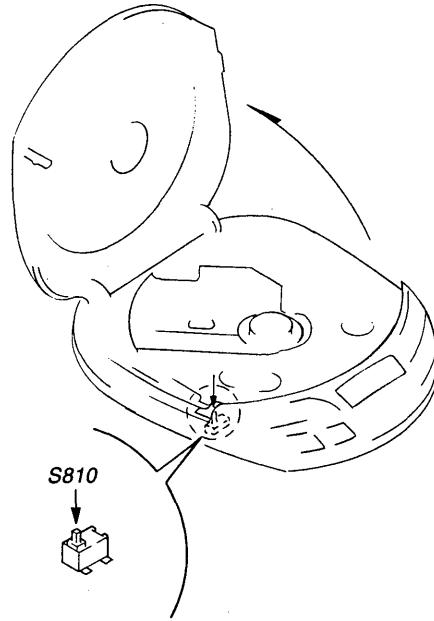


Fig. 1 Method to push the S810

• **Method-2 (In the service mode or normal operation):**  
**Check the value of current flowing in the laser diode.**


1. Remove the upper panel.
2. Read the current printed on the label attached on the rear side of the optical pick-up.

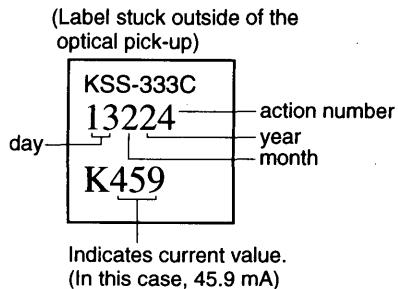

3. Connect a digital voltmeter as shown in Fig. 2.
4. Press the **►II** key.
5. Calculate current value by the reading of the digital voltmeter.  
 Reading of the digital voltmeter (V)  $\div$  4.7 = current value (A)  
 (Example) Reading of the digital voltmeter of 0.216 V:  
 $0.216 \text{ V} \div 4.7 \Omega = 0.0459 \text{ (A)} = 45.9 \text{ mA}$
6. Check that the current value is within the following range.
  - Current value of the label  $\pm 5\text{mA}$  ( $25^\circ\text{C}$ )  
 Variation by temperature:  $0.4 \text{ mA}/^\circ\text{C}$   
 Current increases with temperature increased.  
 Current decreases with temperature decreased.

If the current is more than the range above, there is a trouble in the automatic power control circuit or the laser diode is in deterioration.  
 If less than the range, a trouble exists in the automatic power control circuit or the optical pick-up.

– MAIN BOARD – (Side A)

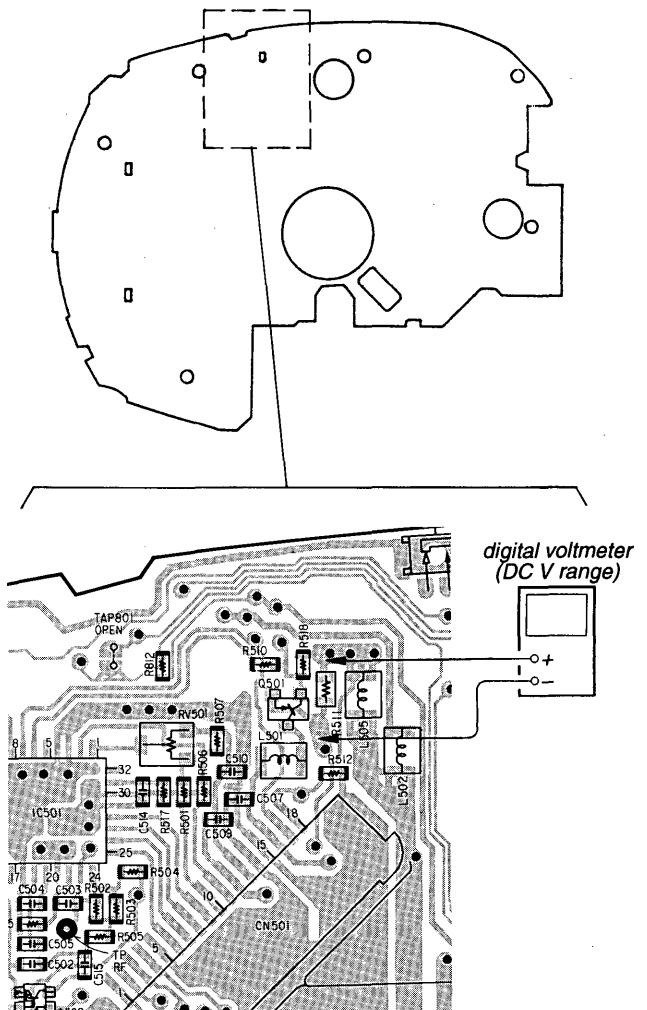


**Fig. 2 Digital voltmeter connecting location**

## SECTION 3 DISASSEMBLY

**Note:** Follow the disassembly procedure in the numerical order given.

### REAR CABINET

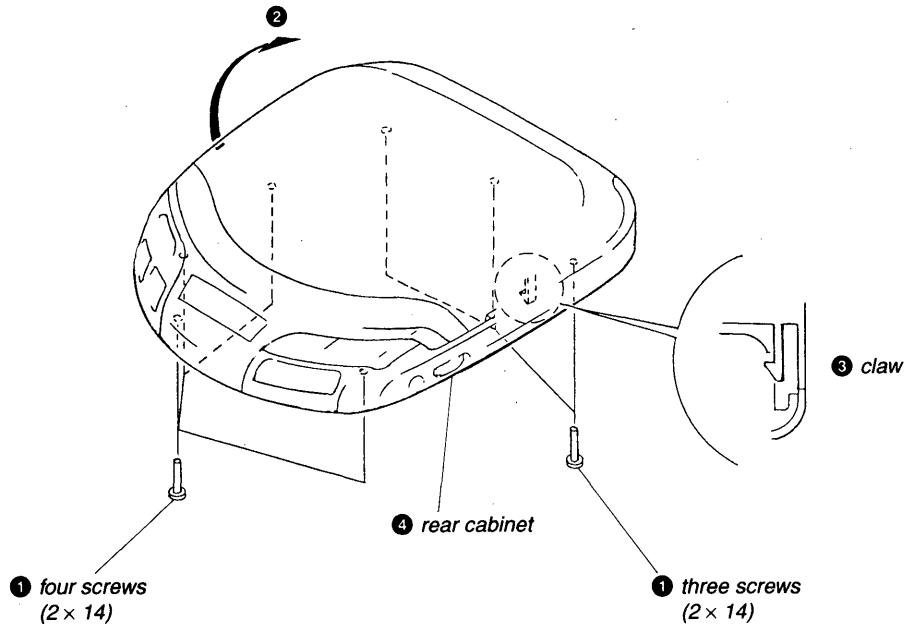


## SECTION 4 SERVICE MODE

### Service Mode (Service program)

The equipment is provided with a service program built in the microcomputer, like conventional models.


Service program operation methods are described in the following.

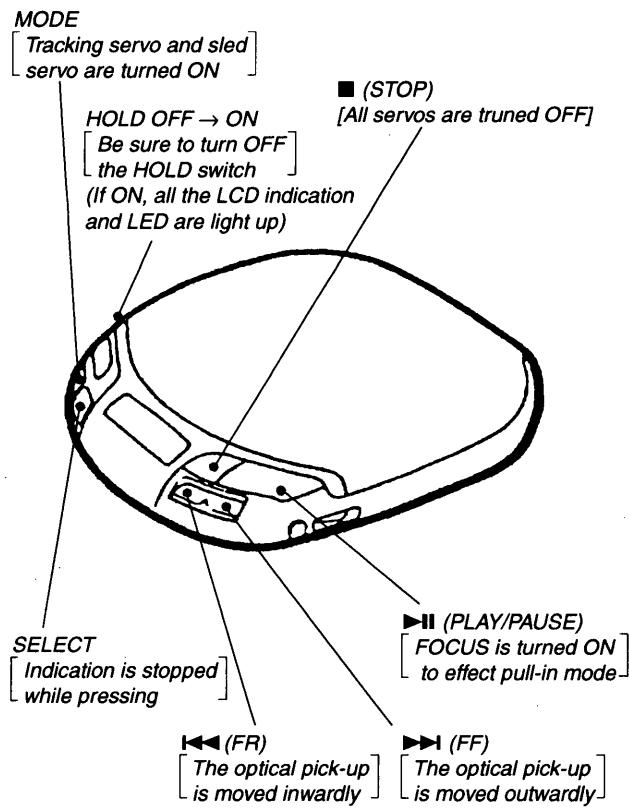

*Descriptions in [ ] indicate major operations in the service mode. For more information, see Step 2.*

**Fig. 3 Layout of each key**

### - MAIN BOARD - (Side A)

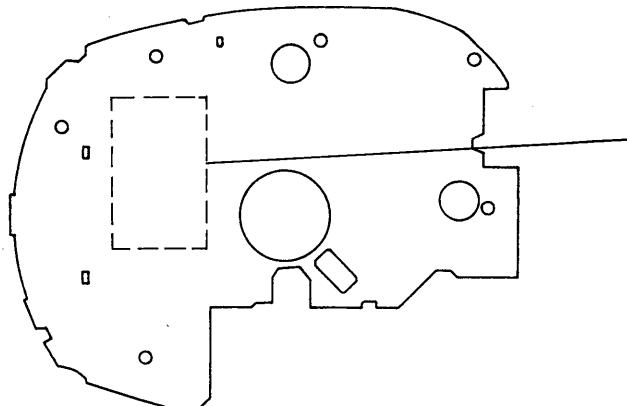

### • Step 1 (Service mode setting methods)


1. Turn OFF the HOLD switch with external power supply disconnected (power is not applied to the set).
2. Solder across the TEST terminals (pin ⑩, IC801 (XTEST) is grounded).
3. Connect an external power supply.  
Thus, the set is switched to the service mode.

### • Step 2 (Operation in the service mode)

1. Once the service mode is effected, the LCD displays 5 indications each of which is repeatedly displayed. However, the following operations can be activated even if LCD indication is effected.
2. By pressing the ▶ or ◀ key, the optical pick-up is movable inwardly or outwardly. However, if this is activated, tracking servo and sled servo are turned OFF, so it can be turned ON by pressing the MODE key if required.
3. By pressing the SELECT key, the display stops. With the key released, repeated indication is continued, so you can check each segment.
4. By pressing the ▶ key, focus is turned ON from focus searching while entering CLV-S (pull-in mode). Without disc, focus searching is repeated continuously.
5. By pressing the MODE key, tracking servo, sled servo and CLV-A (servo in PLAY) are turned ON.
6. When 4. and 5. are performed, playing begins. No muting is ON in the service mode.
7. By pressing the ■ key, all servos (focus, tracking and sled) are turned OFF. However, the disc motor revolves for a while by inertia.

### • Step 3 (Resetting of service mode)

1. Be sure to disconnect the external power supply and remove the solder bridge at the TEST terminal connected before in setting.
2. The set thus becomes available for normal operation.

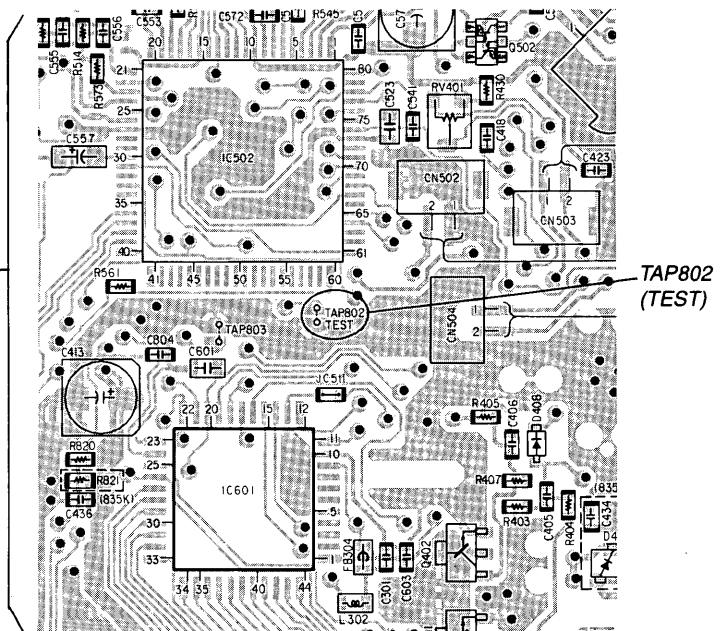

**Fig. 4 Location of TEST terminal**

## SECTION 5

### ELECTRICAL ADJUSTMENTS

#### Precautions for Adjustment

1. Before beginning adjustment, set the equipment to service mode.  
After the completion of adjustment, be sure to reset the service mode.  
For more information, see "Service Mode (service program)" on page 7.
2. Perform adjustments in the order given.
3. Use YEDS-18 disc (Part No.: 3-702-101-01) unless otherwise indicated.
4. Power supply voltage requirement: DC4.5 V  
HOLD switch : OFF  
VOLUME control : Minimum

#### Before Beginning Adjustment

Set the equipment to service mode (See page 7) and check the following. If there is an error, repair the equipment.

#### • Checking of the sled motor


1. Open the upper panel.
2. Press the **►►** and **◀◀** keys and check that the optical pick-up can move smoothly without sluggishness or abnormal noise in innermost periphery → outermost periphery → innermost periphery.  
**►►** : The optical pick-up moves outwardly.  
**◀◀** : The optical pick-up moves inwardly.

#### • Checking of focus searching

1. Open the upper panel.
2. Press the **►►** key. (Focus searching operation is activated continuously.)
3. Check the object lens of the optical pick-up for smooth up/down motion without sluggishness or abnormal noise.
4. Press the **■** key.  
Check that focus searching operation is deactivated. If not, again press the **■** key slightly longer.

#### VCPU Adjustment

##### Adjustment Procedure:

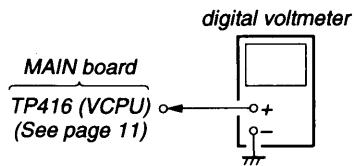

1. Set the equipment to service mode stop state. (See page 7.)
2. Connect the digital voltmeter to TP416 (VCPU) of the MAIN board.
3. Adjust RV401 on the MAIN board so that the reading on digital voltmeter goes  $3.0 \pm 0.02$  V.
4. After the completion of adjustment, reset service mode. (See page 7.)


**Adjustment Location:** MAIN board

#### Tracking Balance Adjustment

##### Condition:


- Hold the set in horizontal state.

##### Adjustment Procedure:

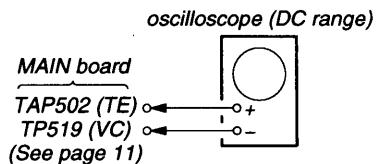

1. Connect the oscilloscope to TAP502 (TE) of the MAIN board.
2. Set the equipment to service mode stop state. (See page 7.)
3. Move the optical pick-up to the center by pressing the **►►** and **◀◀** keys.
4. Put the disc (YEDS-18).
5. Press the **►►** key.  
[ From focus searching, focus is turned ON while entering CLV drawing-in mode. Tracking and sled are turned OFF. ]
6. Adjust RV501 so that the waveform on the oscilloscope becomes up/down symmetrical with an axis of 0 V.

**Note:** Take long sweep time for easy monitoring.

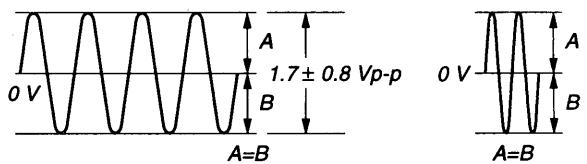

7. Stop removing of the disc motor by pressing the **■** key.
8. After the completion of adjustment, reset service mode. (See page 7.)


**Adjustment Location:** MAIN board

## Focus Bias Check

### Condition:

- Hold the set in horizontal state.


### Adjustment Procedure:

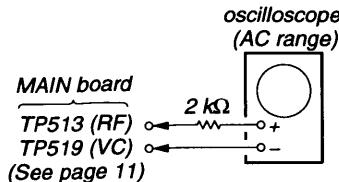

1. Set the equipment to service mode stop state. (See page 7.)
2. Connect the oscilloscope to the test point TP513 (RF) of the MAIN board.
3. Move the optical pick-up to the center by pressing the  $\blacktriangleright\blacksquare$  and  $\blacktriangleleft\blacksquare$  keys.
4. Put the disc (YEDS-18).
5. Put the  $\blacksquare\blacksquare$  key.  
From focus searching, focus is turned ON while entering CLV drawing-in mode. Tracking and sled are turned OFF.
6. Press the MODE key. (Both tracking and sled are turned ON.)
7. Check the oscilloscope waveform is as shown below.  
A good eye pattern means that the diamond shape ( $\diamond$ ) in the center of the waveform can be clearly distinguished.

### RF SIGNAL REFERENCE WAVEFORM (EYE PATTERN)

VOLT/DIV : 200 mV (With the 10:1 probe in use)  
TIME/DIV : 500 nS

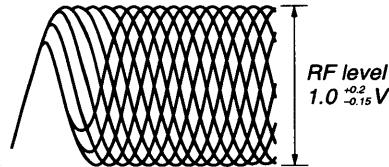

To watch the eye pattern, set the oscilloscope to AC range and increase the vertical sensitivity of the oscilloscope for easy watching.

8. Stop revolving of the disc motor by pressing the  $\blacksquare$  key.
9. After the completion of adjustment, reset service mode. (See page 7.)

### Adjustment Location: MAIN Board

## Focus/Tracking Gain Adjustment

A servo analyzer is necessary in order to perform this adjustment exactly.

However, this gain has a margin, so even if it is slightly off, there is no problem. Therefore, do not perform this adjustment.

Focus/tracking gain determines the pick-up follow-up relative to mechanical noise and mechanical shock when the 2-axis device operates. However, as these reciprocate, the adjustment is at the point where both are satisfied.

- When gain is raised, the noise when 2-axis device operates increases.
- When gain is lowered, it is more susceptible to mechanical shock and skipping occurs more easily.

This adjustment has to be performed upon replacing any of the following parts.

- Optical pick-up
- RV504 (Focus gain VR)
- RV503 (Tracking gain VR)

Normally, be sure not to move RV504 (focus gain VR) and RV503 (tracking gain VR).

### Adjustment method:


#### – Focus Gain Adjustment –

This adjustment is not performed.

If focus gain VR RV504 is turned, set to mechanical center.

#### – Tracking Gain Adjustment –

(perform at normal operation)

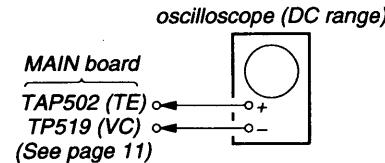

1. Place the optical pick-up level, horizontally. (If the optical pick-up is not level, the 2-axis device will be weighted and adjustment cannot be done.)
2. Connect the oscilloscope to TAP502 (TE) and TP519 (VC) on MAIN board.
3. Set the disc (YEDS-18) and press the  $\blacksquare\blacksquare$  key.
4. Turn RV503 slightly clockwise (tracking gain drops) and obtain a waveform with a fundamental wave (waveform has large waves) as in Figure 1.
5. Turn RV503 slowly counterclockwise (tracking gain rises) until the fundamental wave disappears (no large waves) as in Figure 2.
6. Set RV503 to the position about 30° counterclockwise from the position obtained in step 5. If RV503 contact point is more than 90° counterclockwise from mechanical center, tracking gain is too high. In this case, readjust from step 4.
7. Press  $\blacktriangleright\blacksquare$  or  $\blacktriangleleft\blacksquare$  key and observe the 100 track jump waveform. Check that no traverse waveform appears for both  $\blacktriangleright\blacksquare$  or  $\blacktriangleleft\blacksquare$  directions. (See Figures 3 and 4.) It is acceptable if the traverse waveform appears only now and then, but if it appears constantly, raise tracking gain slightly and check step 7 again.
8. Check that there is not abnormal amount of operation noise (white noise) from the 2-axis device. If there is, tracking gain is too high, readjust starting with step 4.

The waveforms are those measured with the oscilloscope set as shown below.

- VOLT/DIV: 50 mV
- TIME/DIV: 5 ms

- Waveform when tracking gain is lowered.  
Fundamental wave appears (large waves).




**Fig. 1**

- Waveform when fundamental wave disappears (no large waves).




**Fig. 2**

- Waveform with no traverse waveform during 100 track jump.  
(Brake application is smooth because of adjustment.)

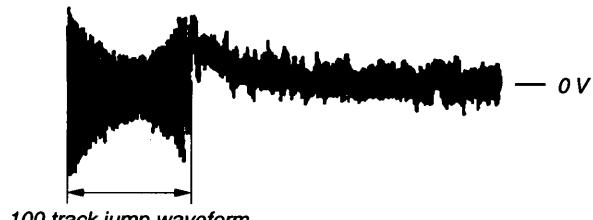

**Fig. 3**


- Waveform with traverse waveform during 100 track jump.  
(Brake application is poor because of adjustment.)

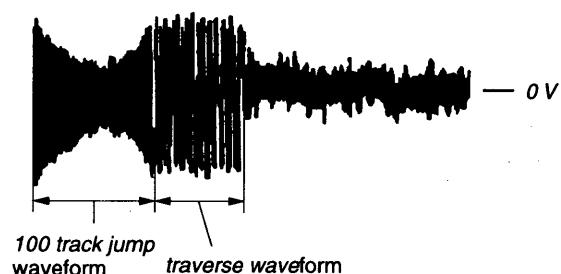

**Fig. 4**

**Adjustment Parts Location:**

- MAIN BOARD - (Side A)

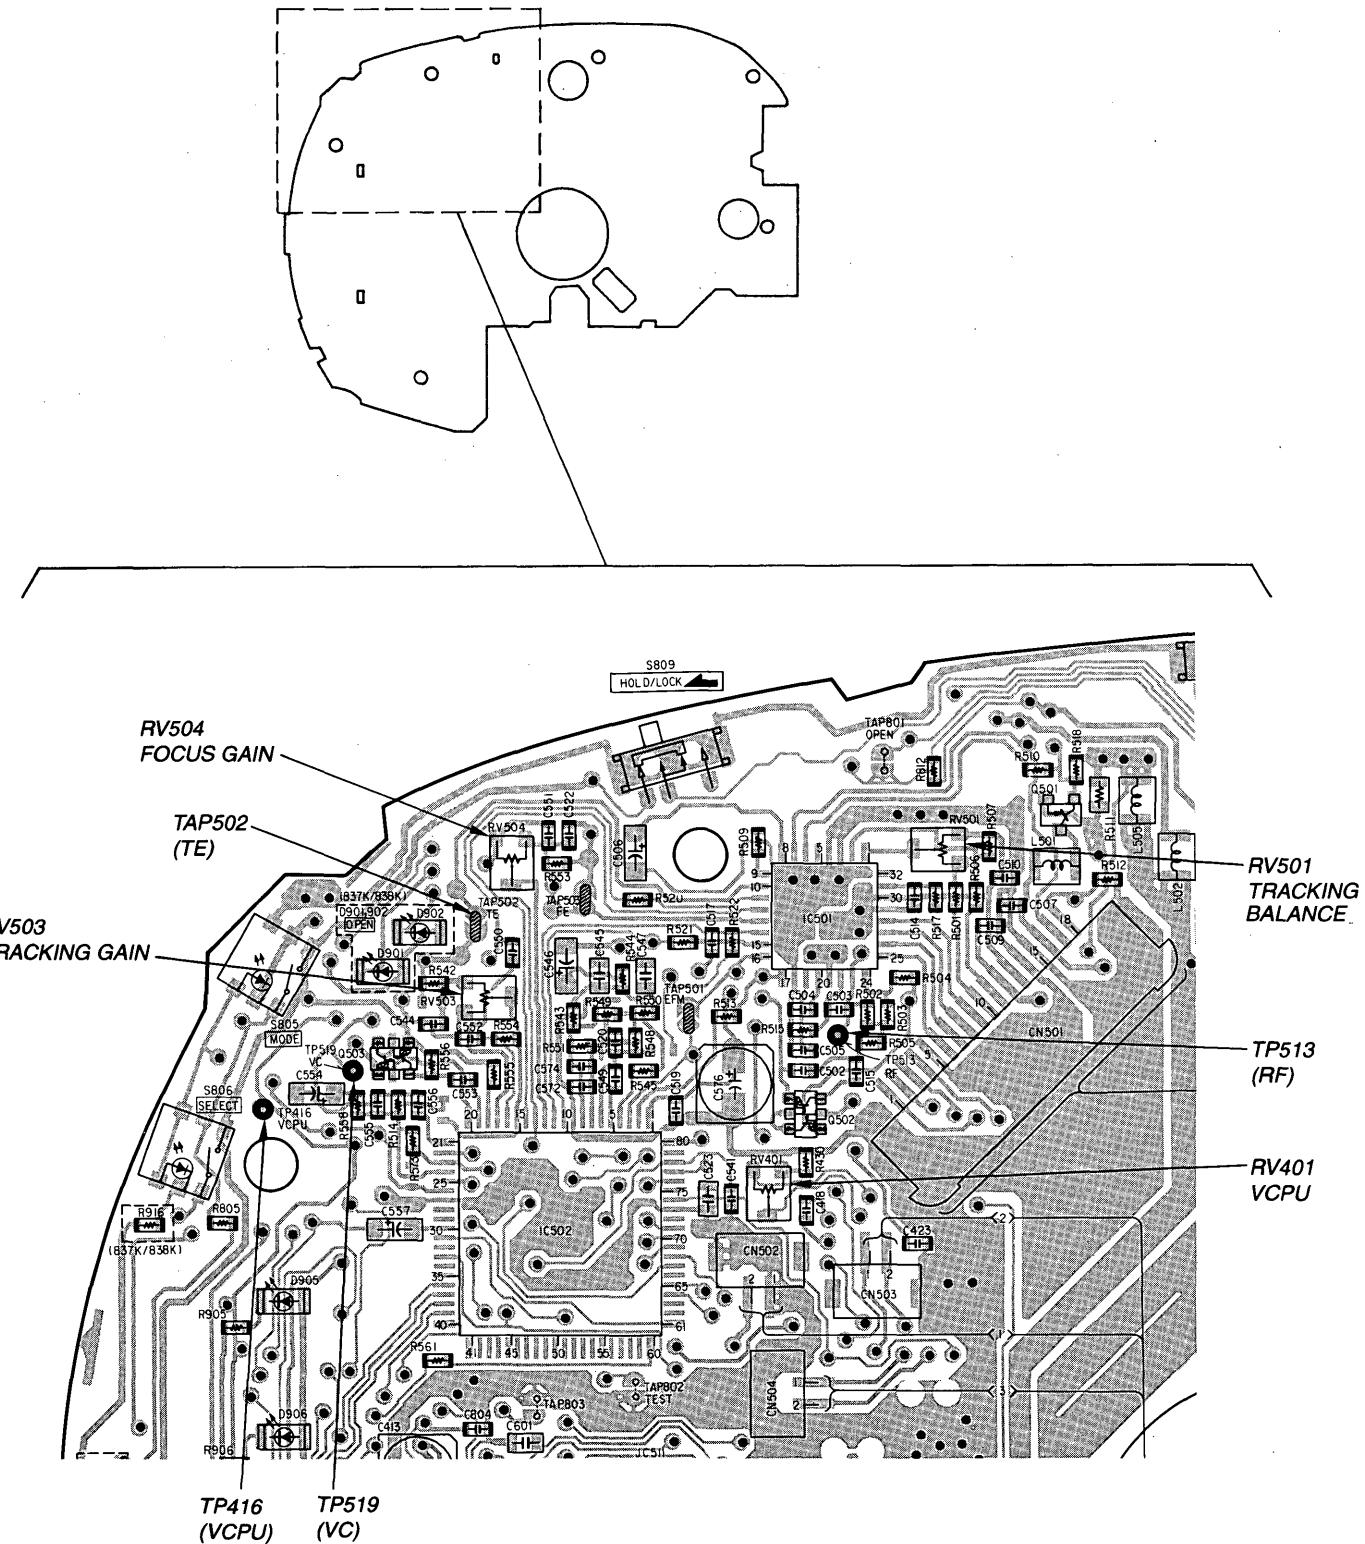


**SECTION 6  
DIAGRAMS**
**• Semiconductor  
Location**

Ref. No.	Location	Ref. No.	Location
D106	J-23	IC401	D-22
D203	J-23	IC402	H-4
D301	G-25	IC403	A-17
D302	H-23	● IC404	F-1
D303	J-23	IC501	B-5
D401	B-16	IC502	D-3
D402	F-16	IC503	C-25
D403	A-18	IC504	C-18
D404	D-23	IC601	F-3
○ D405	F-6	IC603	H-4
D406	G-14	IC801	F-25
D407	E-23		
D408	F-5	Q101	I-23
D411	A-18	Q111	I-23
D501	C-24	Q201	I-23
D502	C-22	Q301	I-24
D601	D-24	Q302	H-24
D801	H-25	Q401	G-5
D802	H-25	Q402	F-5
● D803	A-19	Q403	C-17
● D804	D-25	Q404	C-15
● D805	A-20	Q406	B-17
● D806	C-15	Q411	C-17
● D807	A-19	Q501	B-6
● D901	C-3	Q502	C-5
● D902	B-3	Q503	C-3
● D904	J-3	Q504	B-23
D905	D-2	Q505	D-24
D906	E-2	Q506	C-24
D907	F-2	Q601	D-24
D908	G-2	Q801	A-19
D909	G-2	Q802	A-19
D910	H-25	Q803	D-25
		Q806	C-15
IC301	G-23		
IC302	I-4		



Note :  
 ○ : D-835K/837K  
 ● : D-837K/838K

Note on Printed Wiring Board:  
 • : parts extracted from the component side.  
 ● : Through hole.  
 △ : internal component.  
 ■ : Pattern from the side which enables seeing.  
 (The other layers' patterns are not indicated.)

Caution:  
 Pattern face side: Parts on the pattern face side seen from the (Side B) pattern face are indicated.  
 Parts face side: The parts on the parts face side seen from the (Side A) parts face are indicated.

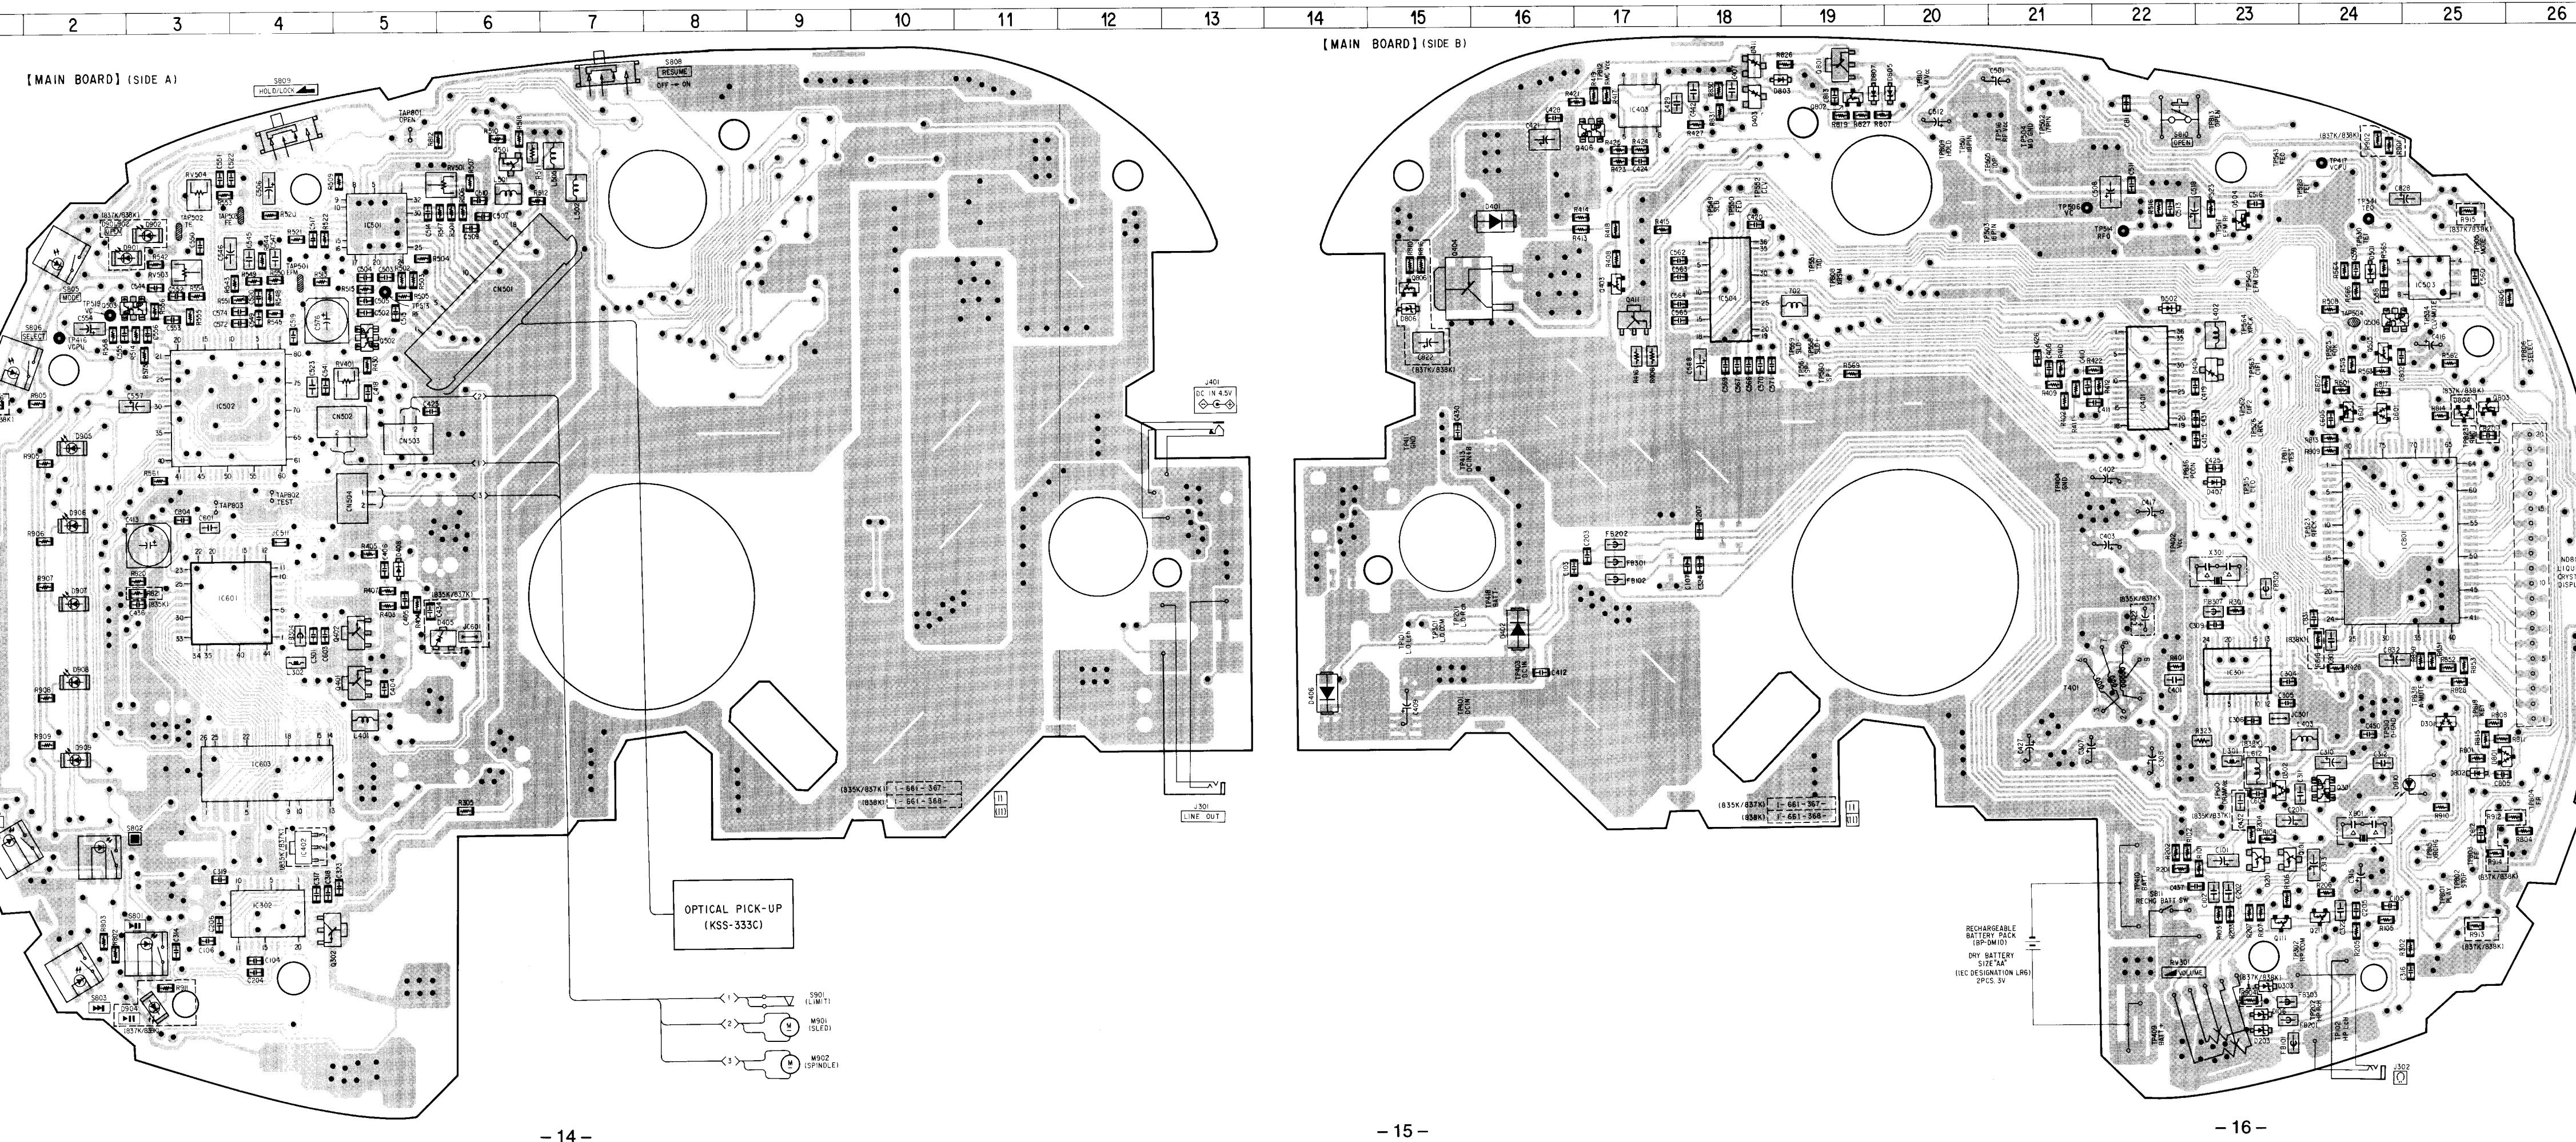
**6-1. PRINTED WIRING BOARD**


## 6-2. SCHEMATIC DIAGRAM • See pages 21 to 24 for IC Block Diagrams.

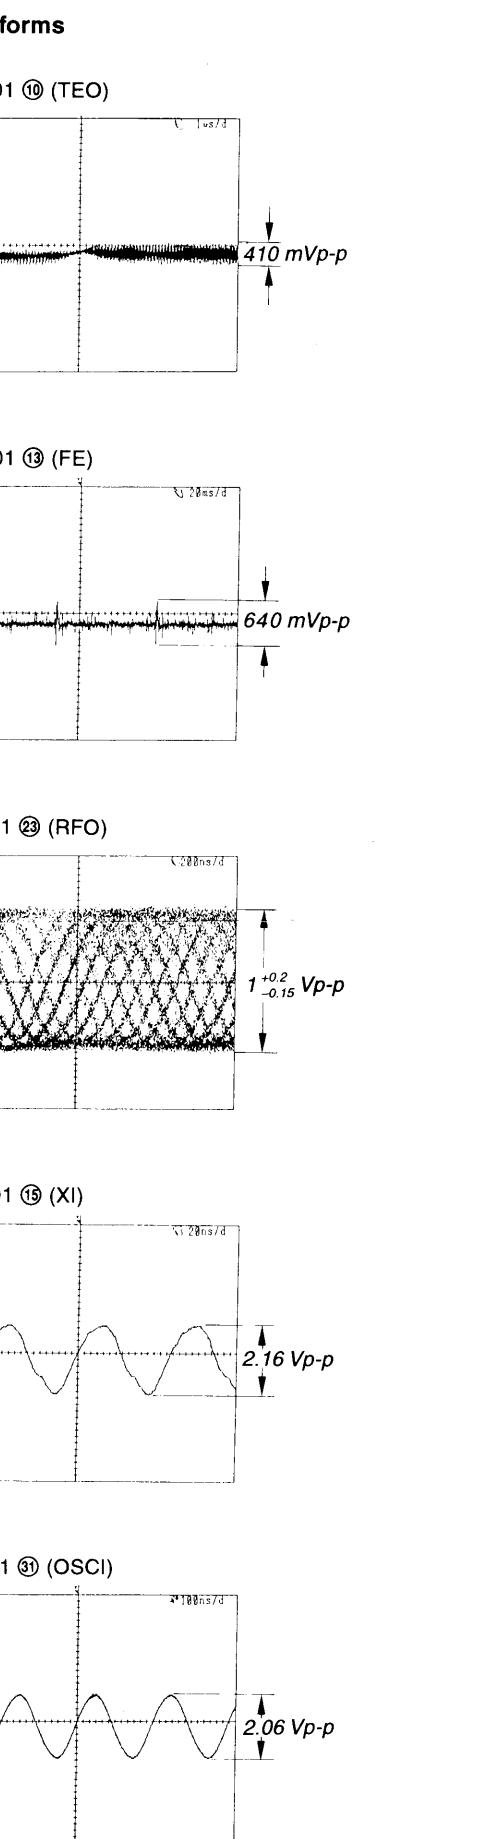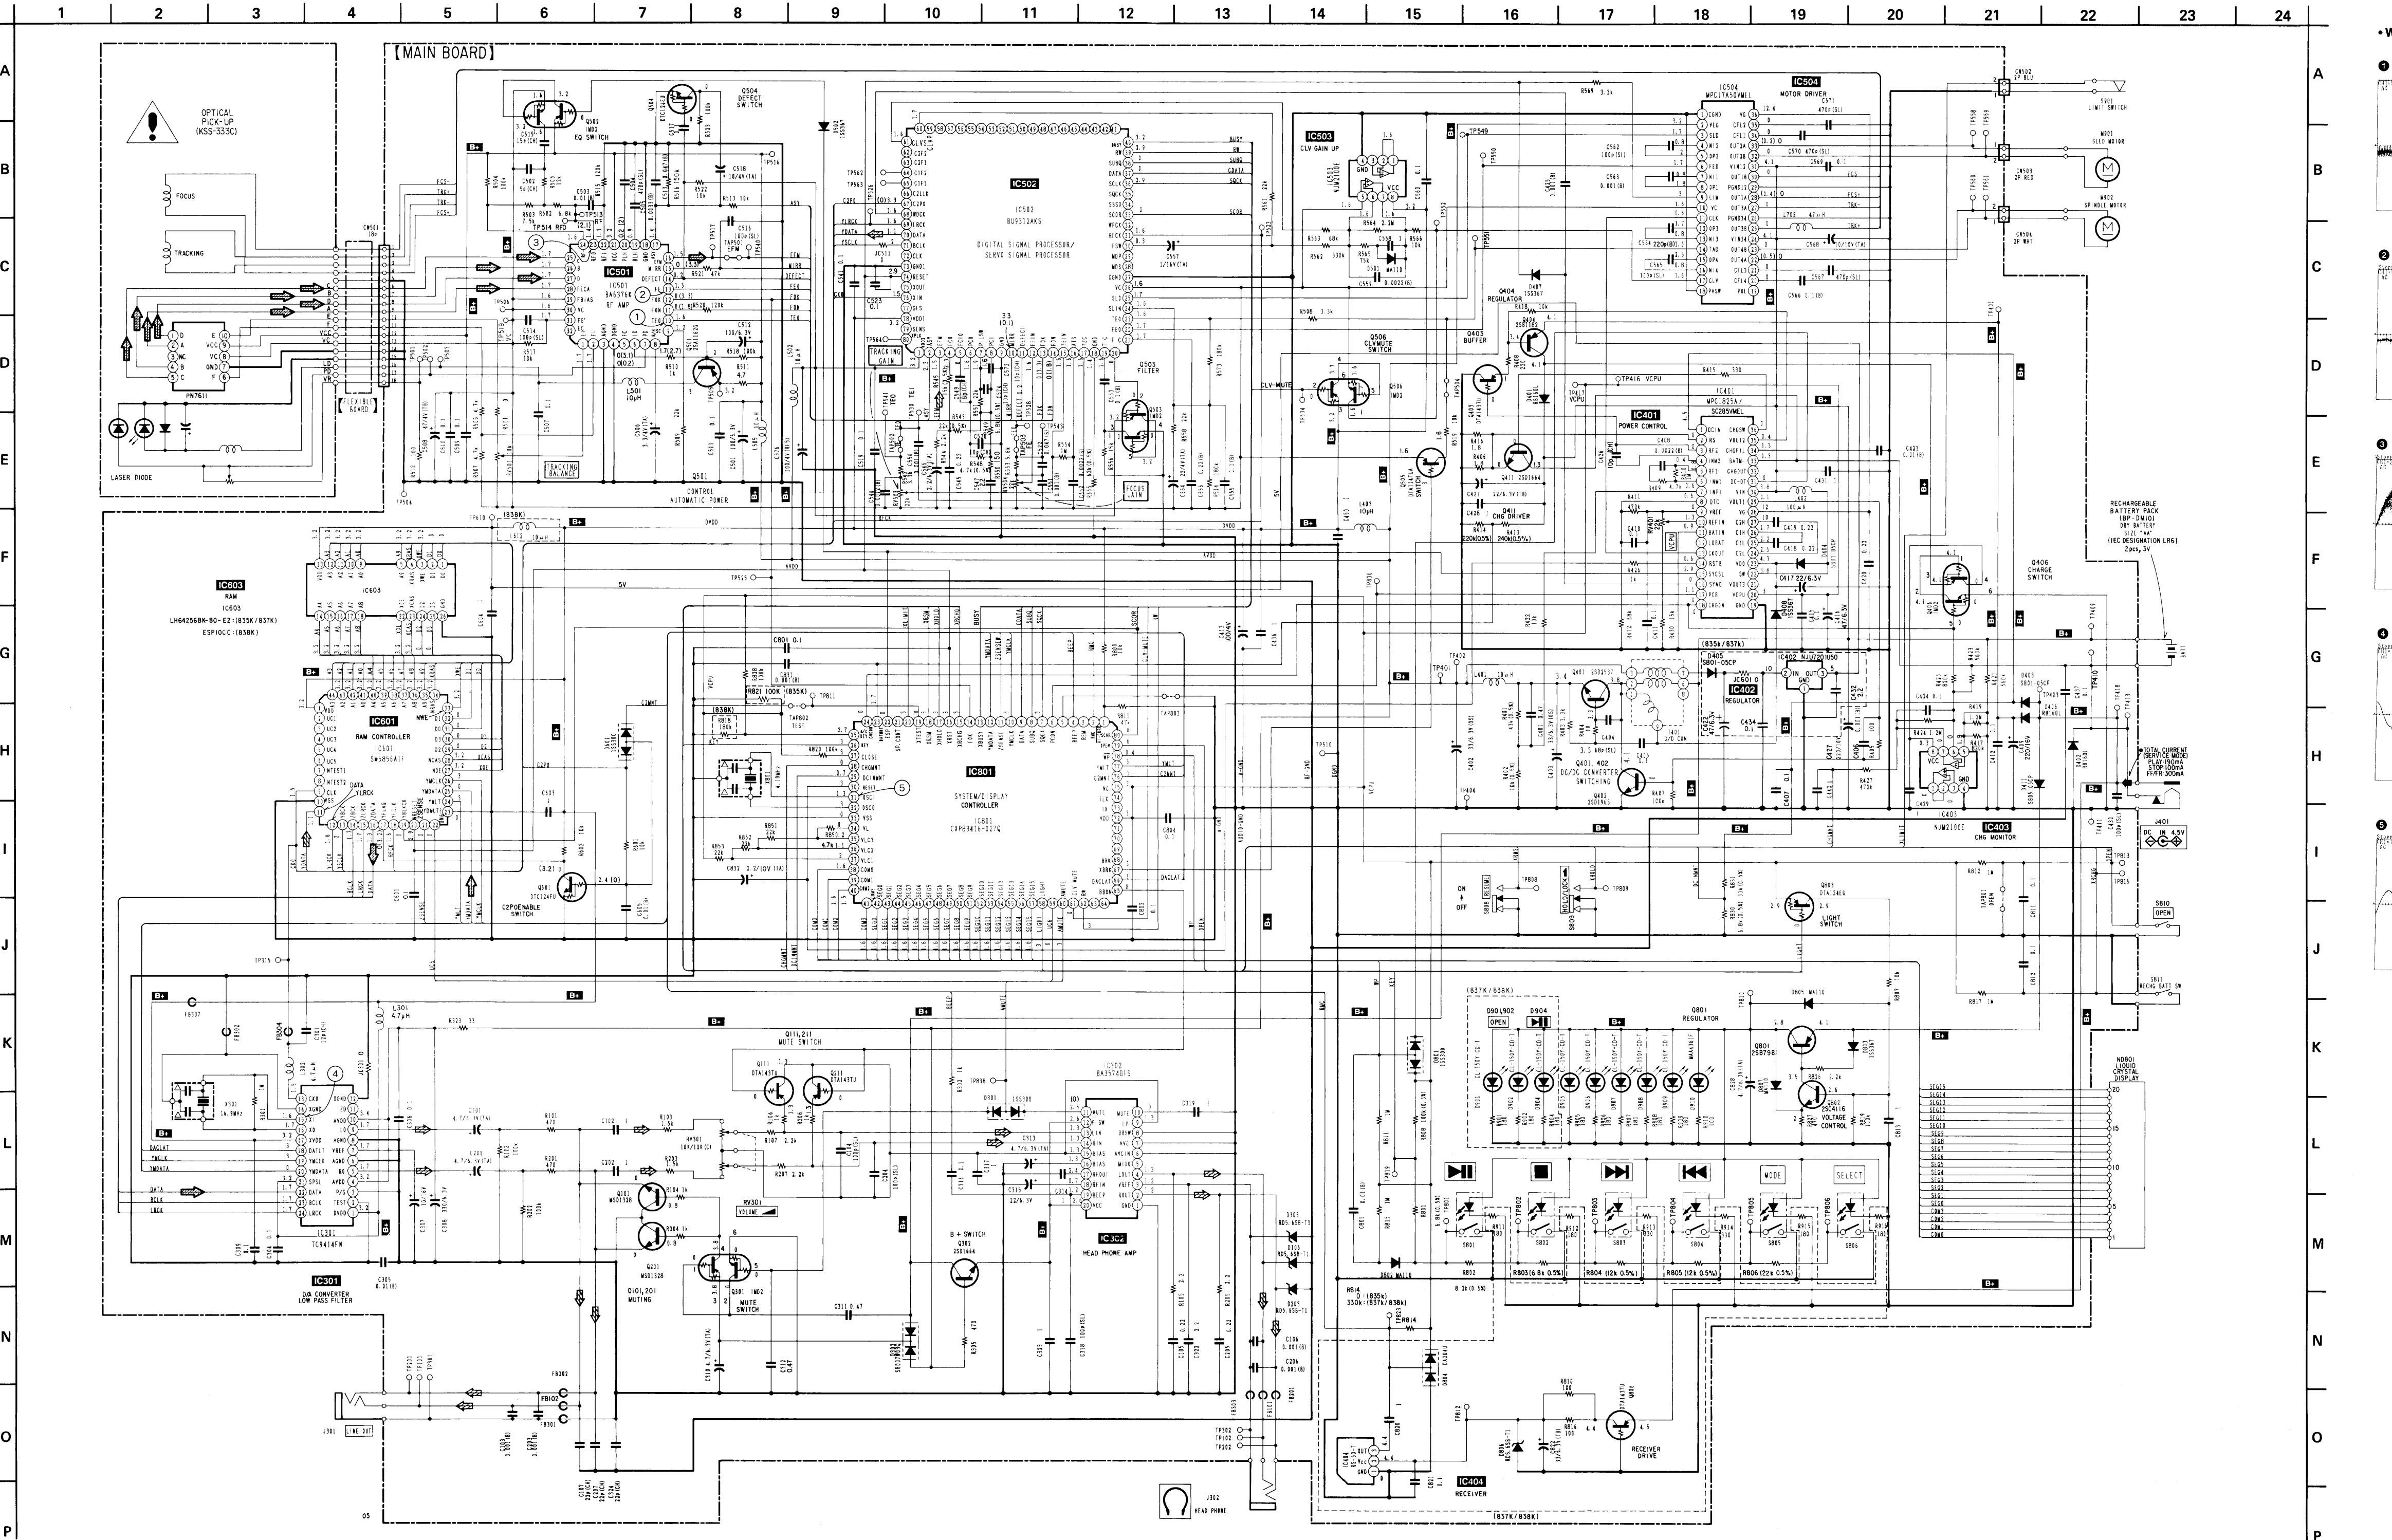


• IC Block Diagrams


**IC301 TC9414FNL**

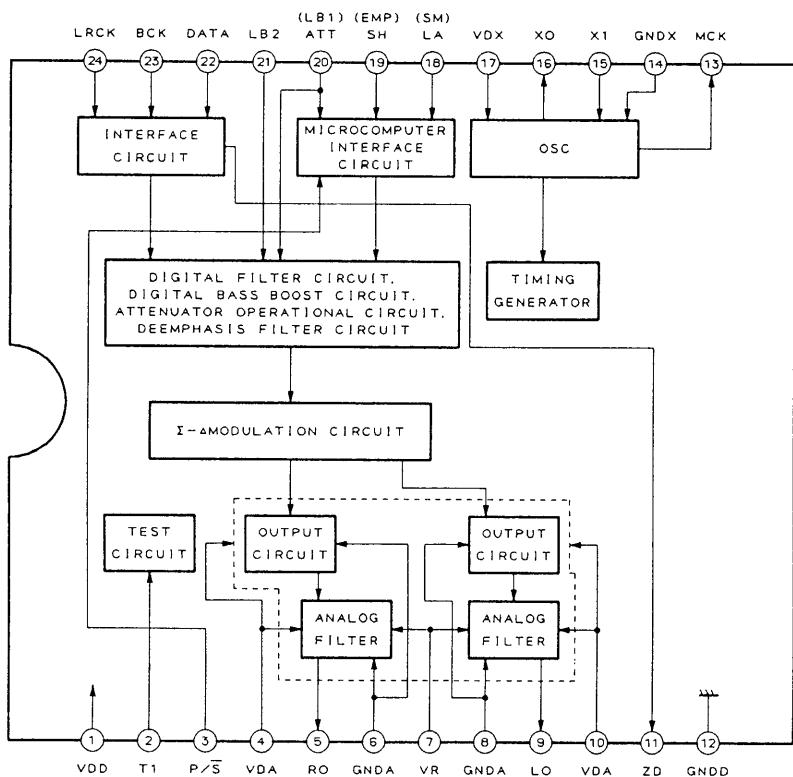


**IC302 BA3574BFS-TI**

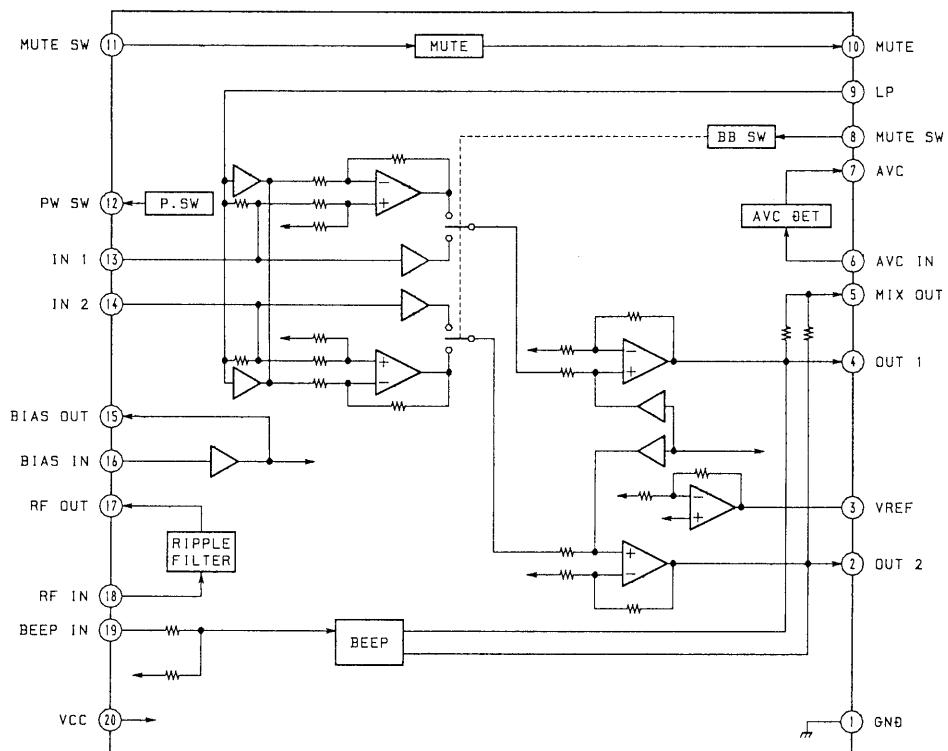


## IC401 MPC1825A/SC285VMEL

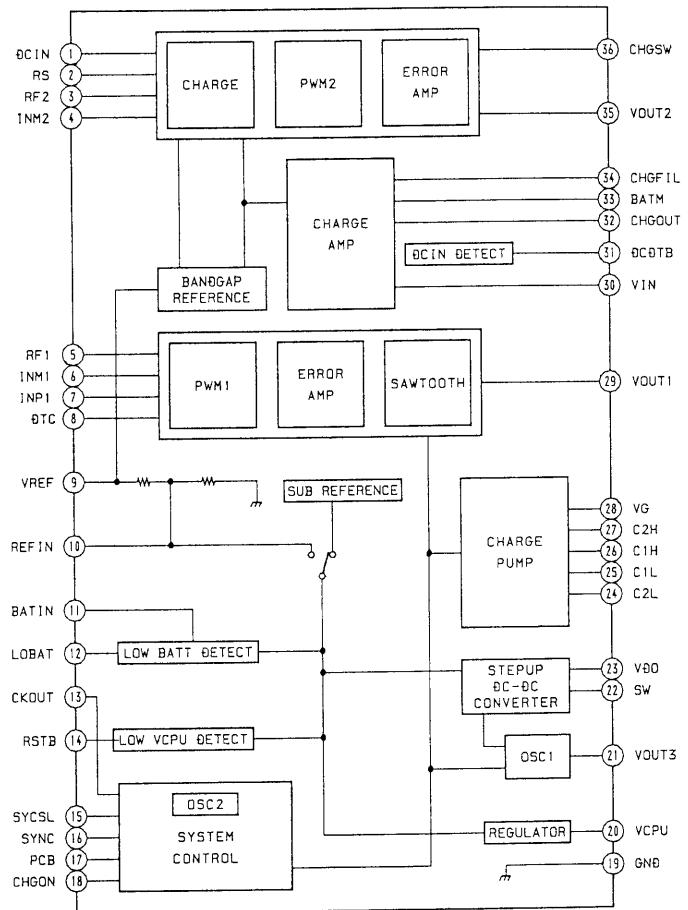


## IC501 BA6376K

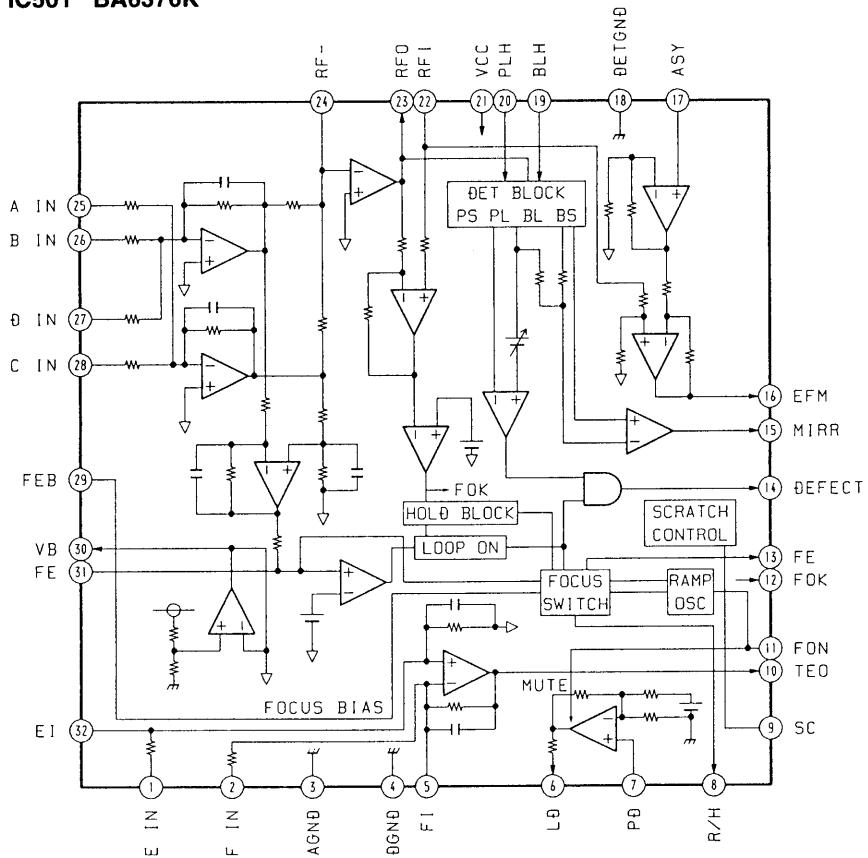


## IC601 SM5856A1F

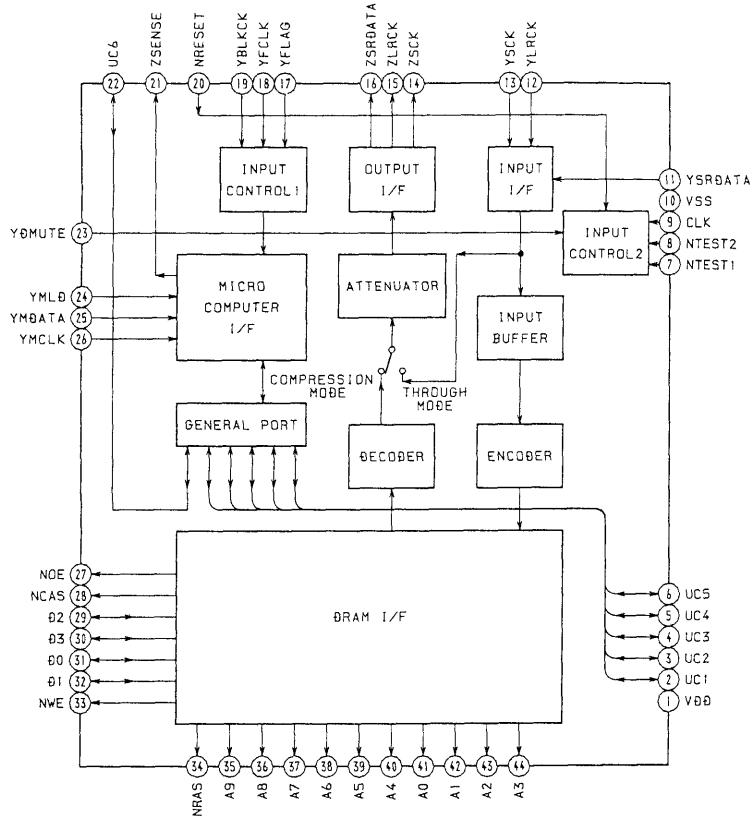

## IC502 BU9312AKS

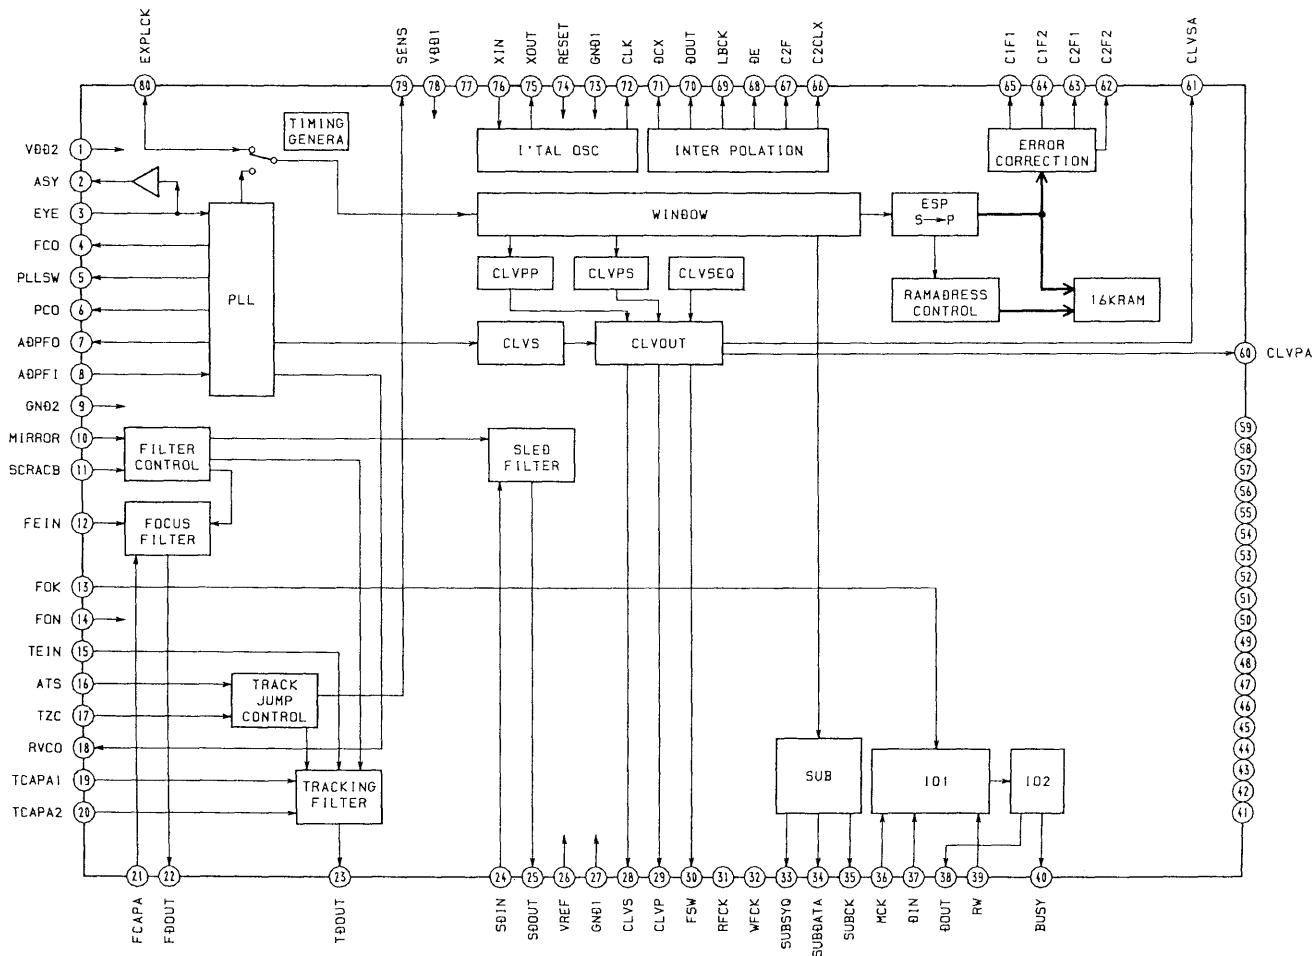

**IC504 MPC17A50VMEL**

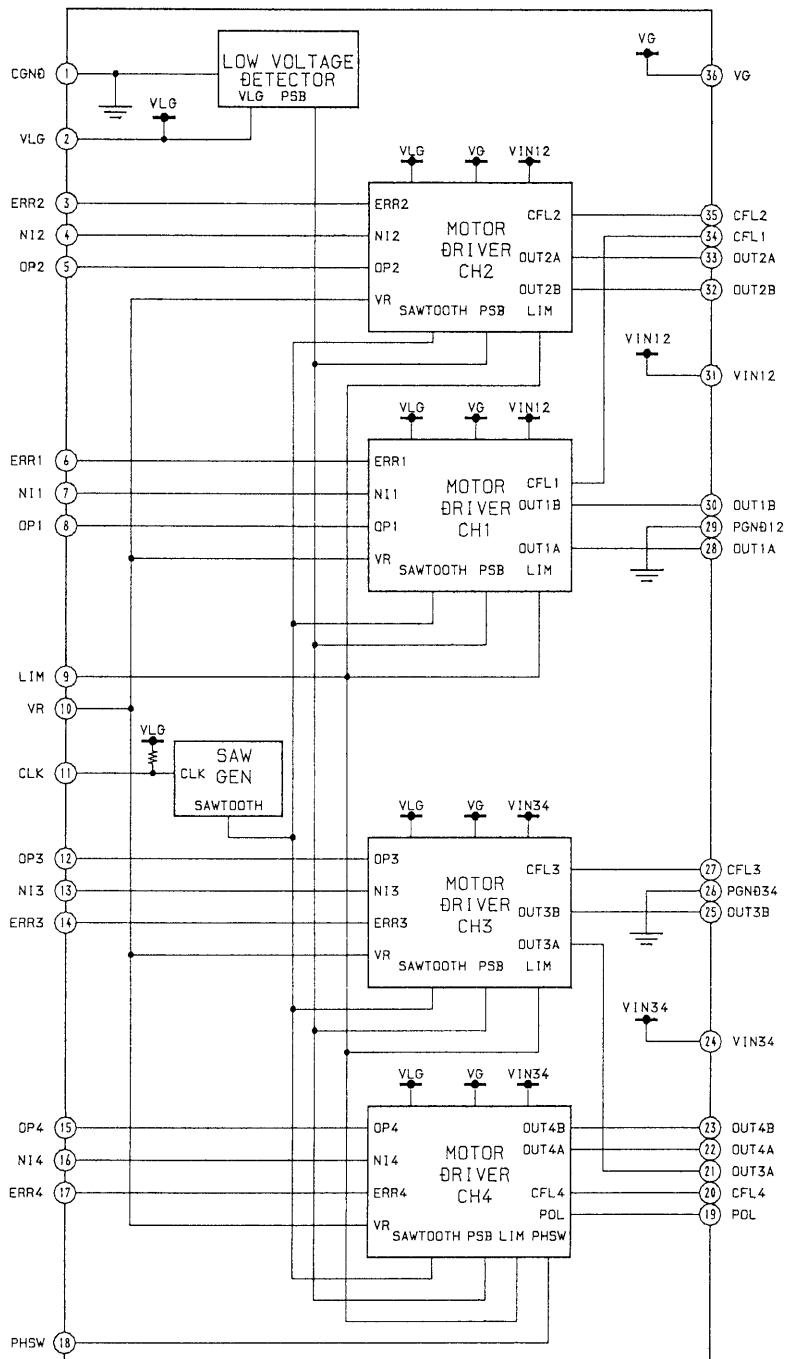

**6-3. IC PIN FUNCTION DESCRIPTION**  
**MAIN BOARD IC801 CXP83416-027 (SYSTEM/DISPLAY CONTROLLER)**

Pin No.	Pin Name	I/O	Function
1	HI-CURR	I	Overcurrent detection terminal (short detection)
2	RMC	I	Infrared remote control signal
3	REM	—	Not used
4	BEEP	O	Beep Sound Pulse output terminal
5		—	Not used
6	PCON	O	Power control output terminal “L”: Power ON, “H”: Power OFF
7	SQCK	O	Clock output signal to enter SUB-Q signal from IC502 (BU9312AKS)
8	SUBQ	I	SUB-Q signal input terminal (from IC502 BU9312AKS)
9	DATA	O	Serial Data output terminal
10	YMCLK	O	Clock signal output terminal to read serial data
11	ZSENSE	I	IC601 (SM5856A1F) internal status serial input terminal
12	YMDATA	O	Serial data output terminal
13	XBUSY	I	BUSY signal input terminal “L”: Track jumping, “H”: Sarvo loop ON
14	FOK	I	Focus OK signal input terminal “H”: OK, “L”: NG
15	XRCHG	I	Rechargeable battery detection terminal “L”: Rechargeable battery present, “H”: No rechargeable battery
16	XRST	O	Reset signal output terminal
17	XHOLD	I	Hold switch input terminal “L”: HOLD ON, “H”: HOLD OFF
18	XRSM	I	RESUME switch input terminal “L”: RESUME ON, “H”: RESUME OFF
19	XTEST	I	TEST mode at “L”, when the system is reset
20	XLIMIT	I	Input terminal of MD inside track sensor (S901) “L”: Inside track
21	SP. CONT	—	Not used
22	ESP	I	ESP SWITCH (Q502) control terminal “L”: ESP SWITCH OFF, “H”: ESP SWITCH ON
23	BATMNT	I	Rechargeable batterydry cell detection terminal
24	CHGON	I	Charging on input terminal
25	a/c. KEY	I	Not used (fixed at “H”)
26	KEY	I	A/D input of ►■, ■, ►►, ▲, MODE and SELECT switches
27	CLOSE	I	DRAM SELECT (H: 4M 1/2 VCPU: 1M)
28	CHGMNT	I	A/D input terminal for charging voltage monitor
29	DCINMNT	I	A/D input terminal for DC IN voltage detection Also used for DC IN detection
30	RESET	I	System reset input terminal System is reset at “L”
31	OSCI	I	X801 (4.19MHz) Clock oscillator input terminal
32	OSCO	O	X801 (4.19MHz) Clock oscillator output terminal
33	VSS	—	Ground terminal
34	VL	—	LCD bias resistor current control terminal (Cut off at standby)
35	VLC3	—	LCD bias power supply terminal
36	VLC2	—	
37	VLC1	—	
38	COM0	O	LCD common signal output terminal
39	COM1	O	
40	COM2	O	

Pin No.	Pin Name	I/O	Function
41	COM3	O	LCD common signal output terminal
42	SEG0	O	
43	SEG1	O	
44	SEG2	O	
45	SEG3	O	
46	SEG4	O	
47	SEG5	O	
48	SEG6	O	
49	SEG7	O	
50	SEG8	O	
51	SEG9	O	
52	SEG10	O	
53	SEG11	O	
54	SEG12	O	
55	SEG13	O	
56	SEG14	O	
57	SEG15	O	
58	LIGHT	O	Light ON/OFF “H”: ON, “L”: OFF
59		—	Not used
60	AMUTE	O	Analog mute control output terminal “H”: Mute
61	CLV MUTE	O	CLV Mute control output terminal “H”: Mute
62	RW	O	Read/Write switching signal output terminal “L”: Read, “H”: Write
63		—	Not used
64		—	Not used
65	BBON	O	DBB control signal output
66	DACLAT	O	CPU serial data input latch signal output
67	XBRK	O	Outputs tracking brake signal “L”: Brake
68	BRK	—	Not used
69		—	Not used
70		—	Not used
71		—	Not used
72	VDD	—	Power supply terminal (+3 V)
73	TX	—	Not used
74	TEX	—	Not used
75	NC	—	Connected to High
76	C2MNT	O	C2PO signal control output terminal “L”: Stop, “H”: Searching
77	YMLT	O	CPU serial data input latch signal output terminal “L”: Latch
78	WP	I	Input terminal to reset the system stop status The stop status is reset with the falling edge of input signal
79	OPEN	I	OPEN switch (S810) input terminal The stop status is reset with the falling edge of input signal “L”: CLOSE, “H”: OPEN
80	SCOR	I	Sub code sync SO+S1 input terminal

## SECTION 7 EXPLODED VIEWS

**NOTE:**

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts Example: KNOB, BALANCE (WHITE) . . . (RED)

↑      ↑

Parts Color   Cabinet's Color

• Abbreviation


AUS: Australian

- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of the electrical parts list.

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety.  
Replace only with part number specified.


Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

### (1) CABINET SECTION-1

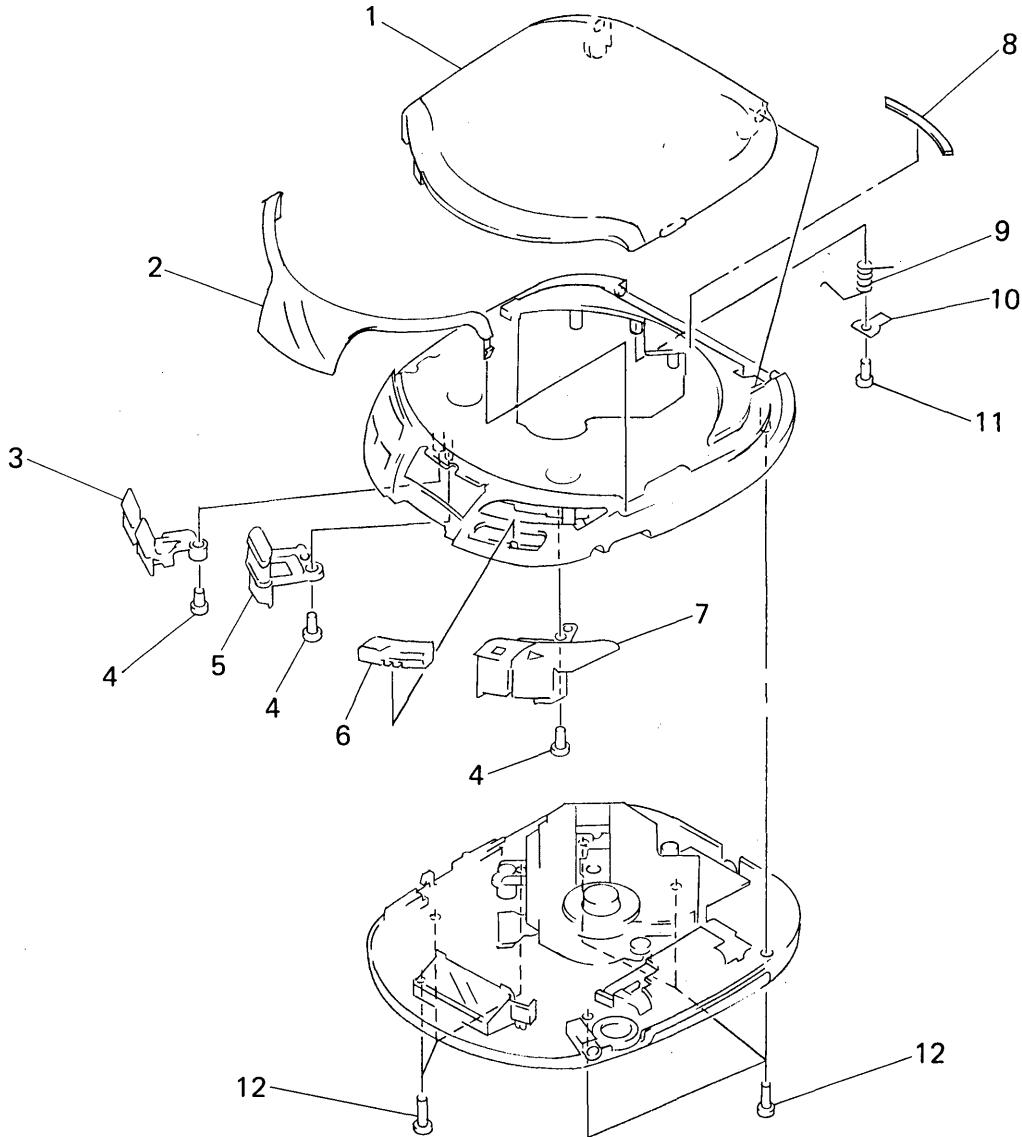

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark	
1	4-981-215-01	LID, UPPER (835K)		5	4-977-055-01	BUTTON (OPEN/CLAW)		
1	4-981-215-11	LID, UPPER (837K)		6	4-977-036-01	BUTTON (FF. FR) ( $\blacktriangleleft$ , $\triangleright$ )		
1	4-981-215-21	LID, UPPER (838K)		7	4-977-035-01	BUTTON (PLAY. STOP) ( $\blacksquare$ , $\triangleright\triangleright$ )		
2	4-977-039-51	WINDOW (LCD. REMOTE CONTROL) (835K)		*	8	4-976-350-01	CUSHION	
2	4-977-039-61	WINDOW (LCD. REMOTE CONTROL) (837K)		9	4-977-041-01	SPRING, TORSION		
2	4-977-039-71	WINDOW (LCD. REMOTE CONTROL) (838K)		10	4-977-049-01	WASHER		
3	4-977-037-01	BUTTON (MODE-SELECT)		11	4-980-966-01	SCREW (2X10)		
4	3-374-079-11	SCREW (1.7X5), TAPPING		12	4-977-029-01	SCREW (2X14)		


**(2) CABINET SECTION-2**

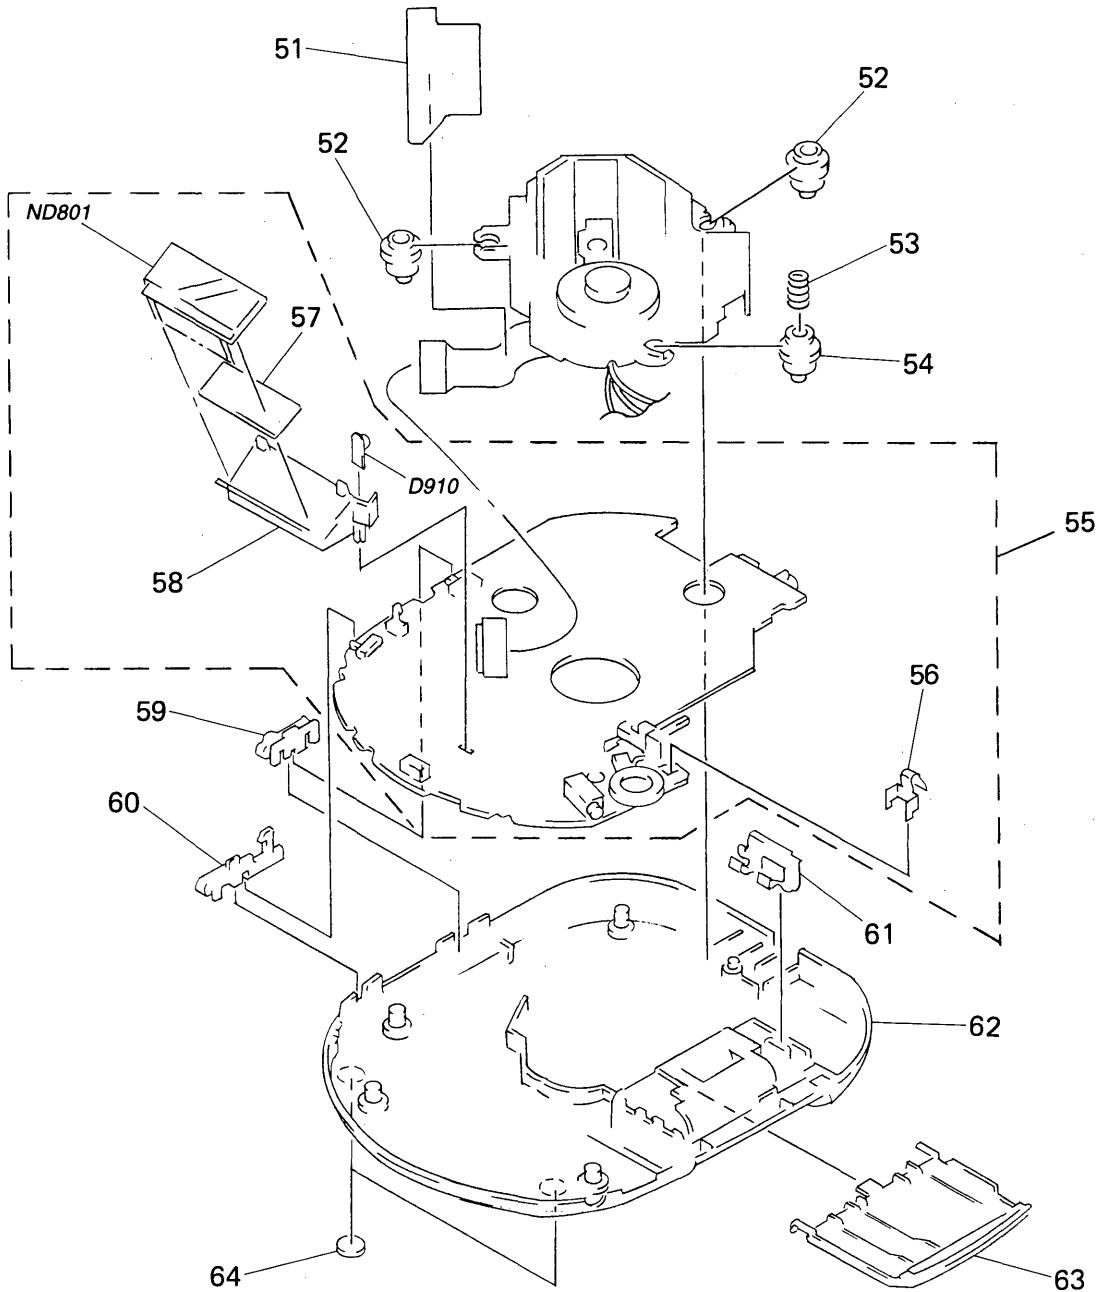

Ref. No.	Part No.	Description	Remark
51	4-956-818-01	RETAINER, FLEXIBLE	
52	4-976-275-01	INSULATOR	
53	4-978-806-01	SPRING, COMPRESSION	
54	4-975-762-01	INSULATOR	
55	A-3293-110-A	MAIN BOARD, COMPLETE (835K)	
55	A-3293-111-A	MAIN BOARD, COMPLETE (837K)	
55	A-3293-112-A	MAIN BOARD, COMPLETE (838K)	
56	4-959-421-01	TERMINAL BOARD (+), BATTERY	
57	4-977-043-01	ILLUMINATOR (LCD)	
58	4-977-033-01	HOLDER (LCD)	

Ref. No.	Part No.	Description	Remark
59	4-977-027-01	KNOB (RESUME)	
60	4-977-028-01	KNOB (HOLD)	
61	4-978-000-02	PLATE (RELAY), BATTERY TERMINAL	
62	4-982-025-01	CABINET (LOWER) (835K)	
62	4-982-025-11	CABINET (LOWER) (837K)	
62	4-982-025-21	CABINET (LOWER) (838K)	
63	4-977-026-01	LID, BATTERY CASE	
64	4-962-025-01	FOOT, RUBBER	
D910	8-719-055-21	DIODE MAA4361F	
ND801	1-810-995-11	DISPLAY PANEL, LIQUID CRYSTAL	

**(3) OPTICAL PICK-UP BLOCK SECTION  
(KSM-333CAN)**

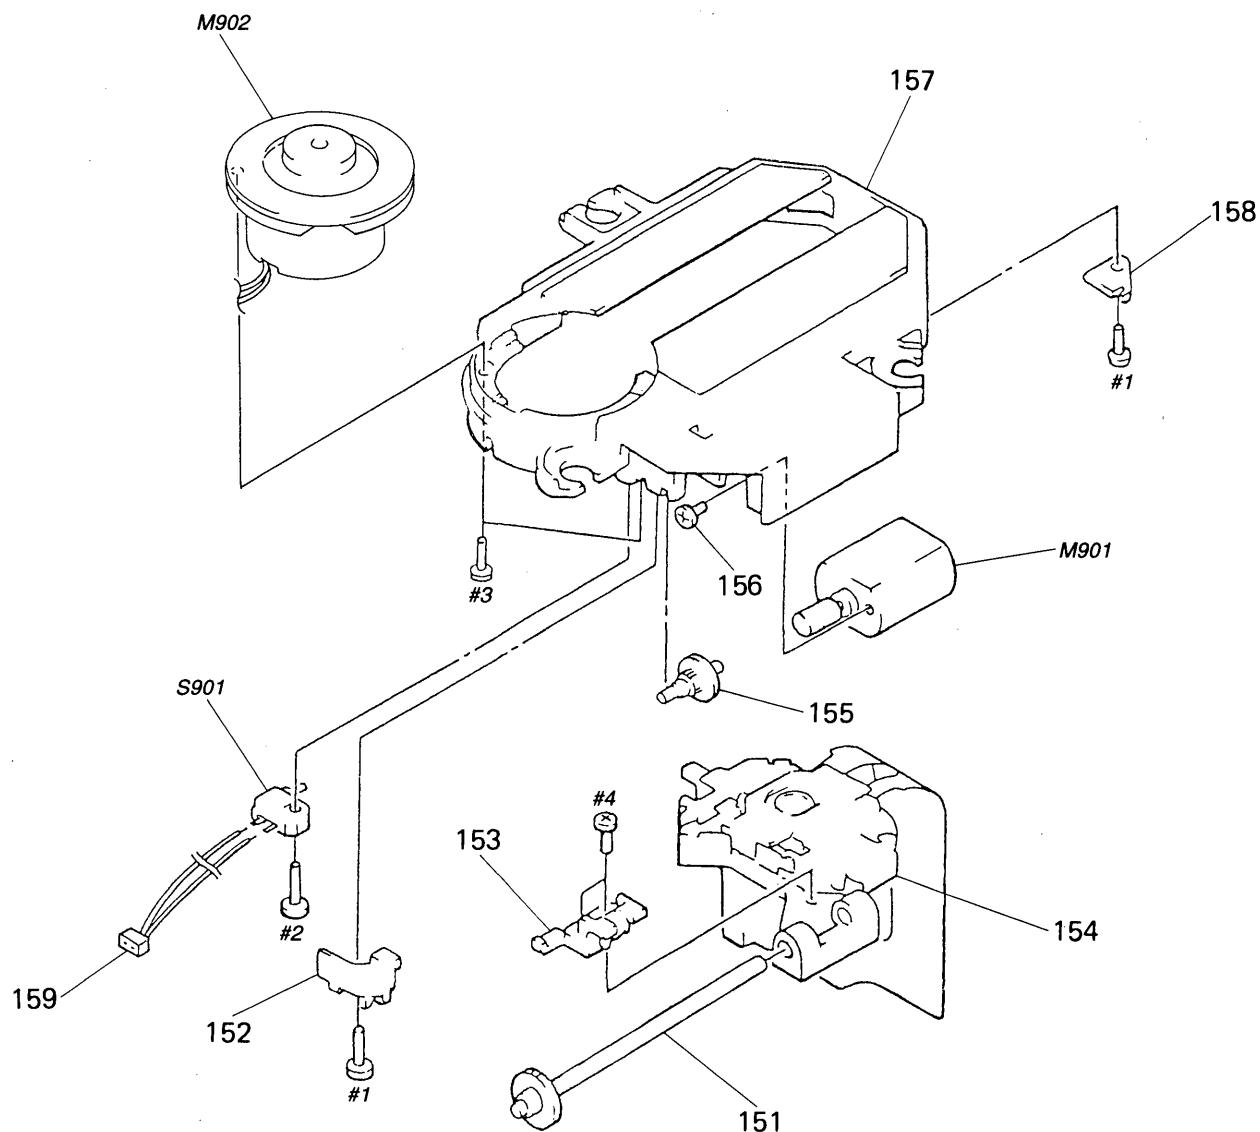

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

Ref. No.	Part No.	Description	Remark
151	X-2625-483-1	SCREW ASSY, SLED	
152	2-625-412-02	SPRING, SLED	
153	2-625-414-02	RACK	
△154	8-848-462-11	OPTICAL PICK-UP KSS-333C	
155	2-625-410-01	GEAR (B)	
156	3-732-988-01	SCREW (M2X2.5)	

Ref. No.	Part No.	Description	Remark
157	2-625-415-05	CHASSIS, MD	
158	2-625-411-01	RETAINER, SHAFT	
159	1-948-418-21	HARNESS	
M901	X-2625-171-2	MOTOR ASSY, SLED	
M902	X-2625-485-1	MOTOR ASSY, T. T. (SPINDLE)	
S901	1-570-771-11	SWITCH (LIMIT)	

## MAIN

# SECTION 8

## ELECTRICAL PARTS LIST

## NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS  
All resistors are in ohms.  
METAL: Metal-film resistor.  
METAL OXIDE: Metal oxide-film resistor.  
F: nonflammable
- Abbreviation  
AUS : Australian

- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS  
In each case, u: $\mu$ , for example:  
uA... :  $\mu$ A. uPA... :  $\mu$ PA...  
uPB... :  $\mu$ PB. uPC... :  $\mu$ PC. uPD... :  $\mu$ PD...
- CAPACITORS  
uF:  $\mu$ F
- COILS  
uH:  $\mu$ H

When indicating parts by reference number, please include the board.

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité.

Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark	
	A-3293-110-A	MAIN BOARD, COMPLETE (835K)		C316	1-164-360-11	CERAMIC CHIP	0.1uF	
	A-3293-111-A	MAIN BOARD, COMPLETE (837K)		C317	1-115-156-11	CERAMIC CHIP	1uF	
	A-3293-112-A	MAIN BOARD, COMPLETE (838K)		C318	1-162-953-11	CERAMIC CHIP	100PF	
*****								
	4-959-421-01	TERMINAL BOARD (+), BATTERY		C319	1-115-156-11	CERAMIC CHIP	1uF	
	4-977-033-01	HOLDER (LCD)		C322	1-164-505-11	CERAMIC CHIP	2.2uF	
	4-977-043-01	ILLUMINATOR (LCD)		C323	1-115-156-11	CERAMIC CHIP	1uF	
< CAPACITOR >								
C101	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	C402	1-115-310-11 ELECT(SOLID)	33uF
C102	1-164-346-11	CERAMIC CHIP	1uF		16V	C403	1-115-310-11 ELECT(SOLID)	33uF
C103	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C404	1-162-951-11 CERAMIC CHIP	68PF
C104	1-162-953-11	CERAMIC CHIP	100PF	5%	50V	C405	1-164-360-11 CERAMIC CHIP	0.1uF
C105	1-165-128-11	CERAMIC CHIP	0.22uF		16V	C406	1-162-964-11 CERAMIC CHIP	0.001uF
C106	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C407	1-163-038-00 CERAMIC CHIP	0.1uF
C107	1-162-919-11	CERAMIC CHIP	22PF	5%	50V	C408	1-162-966-11 CERAMIC CHIP	0.0022uF
C201	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	C409	1-128-499-11 ELECT	220uF
C202	1-164-346-11	CERAMIC CHIP	1uF		16V	C410	1-164-360-11 CERAMIC CHIP	0.1uF
C203	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C411	1-164-360-11 CERAMIC CHIP	0.1uF
C204	1-162-953-11	CERAMIC CHIP	100PF	5%	50V	C412	1-164-360-11 CERAMIC CHIP	0.1uF
C205	1-165-128-11	CERAMIC CHIP	0.22uF		16V	C413	1-126-209-11 ELECT CHIP	100uF
C206	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C415	1-164-360-11 CERAMIC CHIP	0.1uF
C207	1-162-919-11	CERAMIC CHIP	22PF	5%	50V	C416	1-126-154-11 ELECT	47uF
C301	1-162-916-11	CERAMIC CHIP	12PF	5%	50V	C417	1-126-153-11 ELECT	22uF
C304	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C418	1-165-128-11 CERAMIC CHIP	0.22uF
C305	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C419	1-165-128-11 CERAMIC CHIP	0.22uF
C306	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C420	1-165-128-11 CERAMIC CHIP	0.22uF
C307	1-126-157-11	ELECT	10uF	20%	16V	C421	1-104-852-11 TANTAL. CHIP	22uF
C308	1-128-057-11	ELECT	330uF	20%	6.3V	C422	1-126-154-11 ELECT	47uF
C309	1-164-360-11	CERAMIC CHIP	0.1uF		16V	C423	1-162-970-11 CERAMIC CHIP	0.01uF
C310	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	C424	1-164-360-11 CERAMIC CHIP	0.1uF
C311	1-164-005-11	CERAMIC CHIP	0.47uF		25V	C425	1-162-964-11 CERAMIC CHIP	0.001uF
C312	1-164-005-11	CERAMIC CHIP	0.47uF		25V	C426	1-162-915-11 CERAMIC CHIP	10PF
C313	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	C427	1-128-241-11 ELECT	220uF
C314	1-115-156-11	CERAMIC CHIP	1uF		10V	C428	1-115-156-11 CERAMIC CHIP	1uF
C315	1-126-153-11	ELECT	22uF	20%	6.3V	C429	1-164-346-11 CERAMIC CHIP	1uF
						C430	1-162-953-11 CERAMIC CHIP	100PF
						C431	1-115-156-11 CERAMIC CHIP	1uF
						C432	1-164-505-11 CERAMIC CHIP	2.2uF
								(835K/837K)

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark			
C434	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (835K/837K)		C566	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C436	1-115-156-11	CERAMIC CHIP	1uF		10V		C567	1-164-362-11	CERAMIC CHIP	470PF	5%	50V
C437	1-164-360-11	CERAMIC CHIP	0.1uF		16V		C568	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C442	1-164-346-11	CERAMIC CHIP	1uF		16V		C569	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C450	1-115-156-11	CERAMIC CHIP	1uF		10V		C570	1-164-362-11	CERAMIC CHIP	470PF	5%	50V
C501	1-124-584-00	ELECT	100uF	20%	10V		C571	1-164-362-11	CERAMIC CHIP	470PF	5%	50V
C502	1-162-910-11	CERAMIC CHIP	5PF	0.25PF	50V		C572	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C503	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		C574	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C504	1-164-362-11	CERAMIC CHIP	470PF	5%	50V		C576	1-126-209-11	ELECT CHIP	100uF	20%	4V
C505	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V		C601	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C506	1-135-180-21	TANTALUM CHIP	3.3uF	20%	6.3V		C603	1-115-156-11	CERAMIC CHIP	1uF		10V
C507	1-164-360-11	CERAMIC CHIP	0.1uF		16V		C604	1-115-156-11	CERAMIC CHIP	1uF		10V
C508	1-104-908-11	TANTAL. CHIP	47uF	20%	4V		C605	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C509	1-164-360-11	CERAMIC CHIP	0.1uF		16V		C801	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C510	1-164-360-11	CERAMIC CHIP	0.1uF		16V		C802	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C511	1-164-360-11	CERAMIC CHIP	0.1uF		16V		C804	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C512	1-124-584-00	ELECT	100uF	20%	10V		C805	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C513	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V		C811	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C514	1-162-953-11	CERAMIC CHIP	100PF	5%	50V		C812	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C515	1-162-917-11	CERAMIC CHIP	15PF	5%	50V		C813	1-115-156-11	CERAMIC CHIP	1uF		10V
C516	1-162-953-11	CERAMIC CHIP	100PF	5%	50V		C820	1-115-156-11	CERAMIC CHIP	1uF		10V (837K/838K)
C517	1-164-360-11	CERAMIC CHIP	0.1uF		16V		C821	1-164-360-11	CERAMIC CHIP	0.1uF		16V (837K/838K)
C518	1-135-201-11	TANTALUM CHIP	10uF	20%	4V		C822	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V (837K/838K)
C519	1-164-360-11	CERAMIC CHIP	0.1uF		16V		C828	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C520	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V		C831	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C522	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V		C832	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C523	1-163-038-00	CERAMIC CHIP	0.1uF		25V							
C541	1-164-360-11	CERAMIC CHIP	0.1uF		16V							
C544	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V							
C545	1-164-222-11	CERAMIC CHIP	0.22uF		25V							
C546	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V							
C547	1-164-505-11	CERAMIC CHIP	2.2uF		16V							
C549	1-162-913-11	CERAMIC CHIP	8PF	0.5PF	50V							
C550	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V							
C551	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V							
C552	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V							
C553	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V							
C554	1-104-847-11	TANTAL. CHIP	22uF	20%	4V		D106	8-719-158-15	DIODE	RD5.6S-B		
C555	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		D203	8-719-158-15	DIODE	RD5.6S-B		
C556	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V		D301	8-719-024-81	DIODE	1SS300-TE85L		
C557	1-135-091-00	TANTALUM CHIP	1uF	20%	16V		D302	8-719-988-78	DIODE	SB007W03Q		
C558	1-115-156-11	CERAMIC CHIP	1uF		10V		D303	8-719-158-15	DIODE	RD5.6S-B		
C559	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		D401	8-719-048-98	DIODE	RB160L-40TE25		
C560	1-164-360-11	CERAMIC CHIP	0.1uF		16V		D402	8-719-048-98	DIODE	RB160L-40TE25		
C562	1-162-953-11	CERAMIC CHIP	100PF	5%	50V		D403	8-719-938-72	DIODE	SB01-05CP		
C563	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		D404	8-719-938-72	DIODE	SB01-05CP		
C564	1-162-960-11	CERAMIC CHIP	220PF	10%	50V		D405	8-719-938-72	DIODE	SB01-05CP (835K/837K)		
C565	1-162-953-11	CERAMIC CHIP	100PF	5%	50V		D406	8-719-048-98	DIODE	RB160L-40TE25		

# MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
D407	8-719-049-09	DIODE	1SS367-T3SONY				
D408	8-719-049-09	DIODE	1SS367-T3SONY				
D411	8-719-938-75	DIODE	SB05-05CP				
D501	8-719-404-46	DIODE	MA110				
D502	8-719-049-09	DIODE	1SS367-T3SONY				
D601	8-719-024-81	DIODE	1SS300-TE85L				
D801	8-719-024-81	DIODE	1SS300-TE85L				
D802	8-719-404-46	DIODE	MA110				
D803	8-719-049-09	DIODE	1SS367-T3SONY				
D804	8-719-941-23	DIODE	DA204U (837K/838K)				
D805	8-719-404-46	DIODE	MA110				
D806	8-719-158-15	DIODE	RD5.6S-B (837K/838K)				
D807	8-719-404-46	DIODE	MA110				
D901	8-719-987-41	LED	CL-150Y-CD (OPEN) (837K/838K)				
D902	8-719-987-41	LED	CL-150Y-CD (OPEN) (837K/838K)				
D904	8-719-987-41	LED	CL-150Y-CD (▶) (837K/838K)				
D905	8-719-987-41	LED	CL-150Y-CD				
D906	8-719-987-41	LED	CL-150Y-CD				
D907	8-719-987-41	LED	CL-150Y-CD				
D908	8-719-987-41	LED	CL-150Y-CD				
D909	8-719-987-41	LED	CL-150Y-CD				
D910	8-719-055-21	LED	MAA4361F				
< FERRITE BEAD >				< COIL >			
FB101	1-500-245-11	BEAD, FERRITE (CHIP)		L301	1-412-002-31	INDUCTOR CHIP	4.7uH
FB102	1-500-245-11	BEAD, FERRITE (CHIP)		L302	1-412-002-31	INDUCTOR CHIP	4.7uH
FB201	1-500-245-11	BEAD, FERRITE (CHIP)		L401	1-414-398-11	INDUCTOR	10uH
FB202	1-500-245-11	BEAD, FERRITE (CHIP)		L402	1-414-404-11	INDUCTOR	100uH
FB301	1-500-245-11	BEAD, FERRITE (CHIP)		L403	1-414-398-11	INDUCTOR	10uH
FB302	1-414-233-21	INDUCTOR, FERRITE BEAD		L501	1-414-398-11	INDUCTOR	10uH
FB303	1-414-233-21	INDUCTOR, FERRITE BEAD		L502	1-414-398-11	INDUCTOR	10uH
FB304	1-550-907-21	BEAD, FERRITE (CHIP)		L505	1-414-398-11	INDUCTOR	10uH
FB307	1-550-907-21	BEAD, FERRITE (CHIP)		L612	1-414-398-11	INDUCTOR	10uH (838K)
< IC >				L702	1-414-402-11	INDUCTOR	47uH
IC301	8-759-351-67	IC	TC9414FNE1	< FLUORECENT INDICATOR >			
IC302	8-759-386-50	IC	BA3574BFS-T1	ND801	1-810-995-11	DISPLAY PANEL, LIQUID CRYSTAL	
IC401	8-759-373-57	IC	MPC1825A/SC285VME1	< TRANSISTOR >			
IC402	8-759-711-38	IC	NJU7201U50 (835K/837K)	Q101	8-729-010-40	TRANSISTOR	MSD1328-ST1
IC403	8-759-293-74	IC	NJM2100E	Q111	8-729-924-04	TRANSISTOR	DTA143TU
IC404	8-759-177-23	IC	RS-50-T (837K/838K)	Q201	8-729-010-40	TRANSISTOR	MSD1328-ST1
IC501	8-759-335-59	IC	BA6376K	Q211	8-729-924-04	TRANSISTOR	DTA143TU
IC502	8-759-394-55	IC	BU9312AKS	Q301	8-729-907-39	TRANSISTOR	IMD2
IC503	8-759-293-74	IC	NJM2100E	Q302	8-729-920-85	TRANSISTOR	2SD1664-QR
IC504	8-759-326-66	IC	MPC17A50VME1	Q401	8-729-031-11	TRANSISTOR	2SD2537-T100VW
IC601	8-759-351-65	IC	SM5856A1F	Q402	8-729-923-36	TRANSISTOR	2SD1963-Q.R
IC603	8-759-342-73	IC	LH64256BK-80 (835K/837K)	Q403	8-729-924-04	TRANSISTOR	DTA143TU
				Q404	8-729-921-93	TRANSISTOR	2SB1182F5-QR
				Q406	8-729-907-39	TRANSISTOR	IMD2
				Q411	8-729-920-85	TRANSISTOR	2SD1664-QR
				Q501	8-729-216-22	TRANSISTOR	2SA1162-G
				Q502	8-729-907-39	TRANSISTOR	IMD2
				Q503	8-729-907-39	TRANSISTOR	IMD2
				Q504	8-729-029-06	TRANSISTOR	DTC124EUA-T106
				Q505	8-729-028-74	TRANSISTOR	DTA114TUA-T106
				Q506	8-729-907-39	TRANSISTOR	IMD2
				Q601	8-729-029-06	TRANSISTOR	DTC124EUA-T106

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
Q801	8-729-101-07	TRANSISTOR	2SB798-DL	R426	1-216-821-11	METAL CHIP	1K 5% 1/16W
Q802	8-729-231-74	TRANSISTOR	2SC4116-GL	R427	1-216-853-11	METAL CHIP	470K 5% 1/16W
Q803	8-729-028-83	TRANSISTOR	DTA124EUA-T106	R430	1-216-835-11	METAL CHIP	15K 5% 1/16W
Q806	8-729-924-04	TRANSISTOR	DTA143TU (837K/838K)	R501	1-216-864-11	METAL CHIP	0 5% 1/16W
< RESISTOR >				R502	1-216-831-11	METAL CHIP	6.8K 5% 1/16W
R101	1-216-817-11	METAL CHIP	470 5% 1/16W	R503	1-218-344-11	METAL GLAZE	7.5K 5% 1/16W
R102	1-216-845-11	METAL CHIP	100K 5% 1/16W	R504	1-216-845-11	METAL CHIP	100K 5% 1/16W
R103	1-216-823-11	METAL CHIP	1.5K 5% 1/16W	R505	1-216-834-11	METAL CHIP	12K 5% 1/16W
R104	1-216-821-11	METAL CHIP	1K 5% 1/16W	R506	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R105	1-216-789-11	METAL CHIP	2.2 5% 1/16W	R507	1-216-829-11	METAL CHIP	4.7K 5% 1/16W
R106	1-216-821-11	METAL CHIP	1K 5% 1/16W	R508	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
R107	1-216-825-11	METAL CHIP	2.2K 5% 1/16W	R509	1-216-837-11	METAL CHIP	22K 5% 1/16W
R201	1-216-817-11	METAL CHIP	470 5% 1/16W	R510	1-216-821-11	METAL CHIP	1K 5% 1/16W
R202	1-216-845-11	METAL CHIP	100K 5% 1/16W	R511	1-216-308-00	METAL CHIP	4.7 5% 1/10W
R203	1-216-823-11	METAL CHIP	1.5K 5% 1/16W	R512	1-216-809-11	METAL CHIP	100 5% 1/16W
R204	1-216-821-11	METAL CHIP	1K 5% 1/16W	R513	1-216-833-11	METAL CHIP	10K 5% 1/16W
R205	1-216-789-11	METAL CHIP	2.2 5% 1/16W	R514	1-216-848-11	METAL CHIP	180K 5% 1/16W
R206	1-216-821-11	METAL CHIP	1K 5% 1/16W	R515	1-216-846-11	METAL CHIP	120K 5% 1/16W
R207	1-216-825-11	METAL CHIP	2.2K 5% 1/16W	R516	1-216-847-11	METAL CHIP	150K 5% 1/16W
R301	1-216-857-11	METAL CHIP	1M 5% 1/16W	R517	1-216-833-11	METAL CHIP	10K 5% 1/16W
R302	1-216-821-11	METAL CHIP	1K 5% 1/16W	R518	1-216-845-11	METAL CHIP	100K 5% 1/16W
R305	1-216-817-11	METAL CHIP	470 5% 1/16W	R519	1-216-833-11	METAL CHIP	10K 5% 1/16W
R323	1-216-013-00	METAL CHIP	33 5% 1/10W	R520	1-216-846-11	METAL CHIP	120K 5% 1/16W
R401	1-218-886-11	METAL CHIP	43K 0.50% 1/16W	R521	1-216-841-11	METAL CHIP	47K 5% 1/16W
R402	1-218-716-11	METAL CHIP	10K 0.50% 1/16W	R522	1-216-833-11	METAL CHIP	10K 5% 1/16W
R403	1-216-827-11	METAL CHIP	3.3K 5% 1/16W	R523	1-216-845-11	METAL CHIP	100K 5% 1/16W
R404	1-216-797-11	METAL CHIP	10 5% 1/16W	R542	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
R405	1-216-809-11	METAL CHIP	100 5% 1/16W	R543	1-218-724-11	METAL CHIP	22K 0.50% 1/16W
R406	1-217-907-11	METAL GLAZE	1.8 5% 1/10W	R544	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
R407	1-216-845-11	METAL CHIP	100K 5% 1/16W	R545	1-218-720-11	METAL CHIP	15K 0.50% 1/16W
R408	1-216-813-11	METAL CHIP	220 5% 1/16W	R545	1-218-875-11	METAL CHIP	15K 0.50% 1/16W
R409	1-216-829-11	METAL CHIP	4.7K 5% 1/16W	R548	1-218-708-11	METAL CHIP	4.7K 0.50% 1/16W
R410	1-216-857-11	METAL CHIP	1M 5% 1/16W	R549	1-218-867-11	METAL CHIP	6.8K 0.50% 1/16W
R411	1-216-853-11	METAL CHIP	470K 5% 1/16W	R550	1-216-811-11	METAL CHIP	150 5% 1/16W
R412	1-216-843-11	METAL CHIP	68K 5% 1/16W	R551	1-216-837-11	METAL CHIP	22K 5% 1/16W
R413	1-218-749-11	METAL CHIP	240K 0.50% 1/16W	R553	1-216-830-11	METAL CHIP	5.6K 5% 1/16W
R414	1-218-748-11	METAL CHIP	220K 0.50% 1/16W	R554	1-216-857-11	METAL CHIP	1M 5% 1/16W
R415	1-216-815-11	METAL CHIP	330 5% 1/16W	R555	1-218-735-11	METAL CHIP	62K 0.50% 1/16W
R416	1-217-907-11	METAL GLAZE	1.8 5% 1/10W	R556	1-216-835-11	METAL CHIP	15K 5% 1/16W
R417	1-216-856-11	METAL CHIP	820K 5% 1/16W	R558	1-216-837-11	METAL CHIP	22K 5% 1/16W
R418	1-216-833-11	METAL CHIP	10K 5% 1/16W	R561	1-216-837-11	METAL CHIP	22K 5% 1/16W
R419	1-216-858-11	METAL GLAZE	1.2M 5% 1/16W	R562	1-216-851-11	METAL CHIP	330K 5% 1/16W
R421	1-216-854-11	METAL CHIP	560K 5% 1/16W	R563	1-216-843-11	METAL CHIP	68K 5% 1/16W
R422	1-216-833-11	METAL CHIP	10K 5% 1/16W	R564	1-216-861-11	METAL CHIP	2.2M 5% 1/16W
R423	1-216-854-11	METAL CHIP	560K 5% 1/16W	R565	1-218-296-11	METAL GLAZE	75K 5% 1/16W
R424	1-216-858-11	METAL GLAZE	1.2M 5% 1/16W	R566	1-216-833-11	METAL CHIP	10K 5% 1/16W
R425	1-216-856-11	METAL CHIP	820K 5% 1/16W	R569	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
				R573	1-216-848-11	METAL CHIP	180K 5% 1/16W

## MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark					
R601	1-216-833-11	METAL CHIP	10K	5%	1/16W	R911	1-216-812-11	METAL CHIP	180	5%	1/16W (837K/838K)			
R602	1-216-833-11	METAL CHIP	10K	5%	1/16W	R912	1-216-812-11	METAL CHIP	180	5%	1/16W (837K/838K)			
R801	1-218-867-11	METAL CHIP	6.8K	0.50%	1/16W	R913	1-216-815-11	METAL CHIP	330	5%	1/16W (837K/838K)			
R802	1-218-714-11	METAL CHIP	8.2K	0.50%	1/16W	R914	1-216-815-11	METAL CHIP	330	5%	1/16W (837K/838K)			
R803	1-218-867-11	METAL CHIP	6.8K	0.50%	1/16W	R915	1-216-812-11	METAL CHIP	180	5%	1/16W (837K/838K)			
R804	1-218-873-11	METAL CHIP	12K	0.50%	1/16W	R916	1-216-812-11	METAL CHIP	180	5%	1/16W (837K/838K)			
R805	1-218-873-11	METAL CHIP	12K	0.50%	1/16W	< VARIABLE RESISTOR >								
R806	1-218-724-11	METAL CHIP	22K	0.50%	1/16W	RV301	1-223-469-11	RES, VAR, CARBON 10K/10K (▲VOLUME)						
R807	1-216-833-11	METAL CHIP	10K	5%	1/16W	RV401	1-223-578-11	RES, ADJ, METAL GLAZE 22K						
R808	1-218-740-11	METAL CHIP	100K	0.50%	1/16W	RV501	1-223-695-11	RES, ADJ, METAL GLAZE 10K						
R809	1-216-833-11	METAL CHIP	10K	5%	1/16W	RV503	1-223-578-11	RES, ADJ, METAL GLAZE 22K						
R810	1-216-809-11	METAL CHIP	100	5%	1/16W (837K/838K)	RV504	1-223-578-11	RES, ADJ, METAL GLAZE 22K						
R811	1-216-857-11	METAL CHIP	1M	5%	1/16W	< SWITCH >								
R812	1-216-857-11	METAL CHIP	1M	5%	1/16W	S801	1-762-472-11	SWITCH (►II)						
R813	1-216-841-11	METAL CHIP	47K	5%	1/16W	S802	1-762-472-11	SWITCH (■)						
R814	1-216-864-11	METAL CHIP	0	5%	1/16W (835K)	S803	1-762-471-11	SWITCH (►►)						
R814	1-216-851-11	METAL CHIP	330K	5%	1/16W (837K/838K)	S804	1-762-472-11	SWITCH (    )						
R815	1-216-857-11	METAL CHIP	1M	5%	1/16W	S805	1-762-471-11	SWITCH (MODE)						
R816	1-216-809-11	METAL CHIP	100	5%	1/16W (837K/838K)	S806	1-762-471-11	SWITCH (SELECT)						
R817	1-216-857-11	METAL CHIP	1M	5%	1/16W	S808	1-572-922-11	SWITCH, SLIDE (RESUME)						
R818	1-216-848-11	METAL CHIP	180K	5%	1/16W (838K)	S809	1-572-922-11	SWITCH, SLIDE (HOLD/LOCK▲)						
R819	1-216-845-11	METAL CHIP	100K	5%	1/16W	S810	1-570-953-11	SWITCH, PUSH (1 KEY) (OPEN)						
R820	1-216-845-11	METAL CHIP	100K	5%	1/16W	S811	1-572-126-21	SWITCH, PUSH (1 KEY) (RECHG BATT SW)						
R821	1-216-845-11	METAL CHIP	100K	5%	1/16W (835K)	< TRANSFORMER >								
R826	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	T401	1-427-958-11	TRANSFORMER, DC-DC CONVERTER						
R827	1-216-817-11	METAL CHIP	470	5%	1/16W	< VIBRATOR >								
R828	1-216-845-11	METAL CHIP	100K	5%	1/16W	X301	1-760-307-11	VIBRATOR, CERAMIC (16.934MHz)						
R830	1-218-867-11	METAL CHIP	6.8K	0.50%	1/16W	X801	1-760-641-21	VIBRATOR, CERAMIC (4.19MHz)						
R831	1-218-883-11	METAL CHIP	33K	0.50%	1/16W	*****								
R850	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	MISCELLANEOUS								
R851	1-216-837-11	METAL CHIP	22K	5%	1/16W	*****								
R852	1-216-837-11	METAL CHIP	22K	5%	1/16W	△154	8-848-462-11	OPTICAL PICK-UP KSS-333C						
R853	1-216-837-11	METAL CHIP	22K	5%	1/16W	159	1-948-418-21	HARNESS						
R901	1-216-812-11	METAL CHIP	180	5%	1/16W (837K/838K)	M901	X-2625-171-2	MOTOR ASSY, SLED						
R902	1-216-812-11	METAL CHIP	180	5%	1/16W (837K/838K)	M902	X-2625-485-1	MOTOR ASSY, T. T. (SPINDLE)						
R904	1-216-812-11	METAL CHIP	180	5%	1/16W (837K/838K)	S901	1-570-771-11	SWITCH (LIMIT)						
R905	1-216-812-11	METAL CHIP	180	5%	1/16W	*****								
R906	1-216-812-11	METAL CHIP	180	5%	1/16W									
R907	1-216-812-11	METAL CHIP	180	5%	1/16W									
R908	1-216-812-11	METAL CHIP	180	5%	1/16W									
R909	1-216-812-11	METAL CHIP	180	5%	1/16W									
R910	1-216-809-11	METAL CHIP	100	5%	1/16W									

The components identified by mark ▲ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

\*\*\*\*\*  
**HARDWARE LIST**  
\*\*\*\*\*

- #1 7-685-104-19 SCREW (2X6), TAPPING (B)
- #2 7-685-105-19 SCREW (2X8), TAPPING (B)
- #3 7-627-852-17 +P 1.7X4
- #4 7-627-852-18 SCREW, PRECISION +P 1.7X4 TYPE3

\*\*\*\*\*  
**ACCESSORIES & PACKING MATERIALS**  
\*\*\*\*\*

- △ 1-467-007-21 ADAPTOR, AC (AC-E455) (838K:AUS)
- △ 1-467-009-11 ADAPTOR, AC (AC-E455) (835K:US, Canadian/  
837K/838K:US, Canadian, E)
- △ 1-473-116-33 ADAPTOR, AC (AC-E455D)  
(835K:AEP/838K:AEP)
- △ 1-473-572-11 ADAPTOR, AC (AC-E455) (835K:UK)  
1-532-433-11 FUSE, GLASS TUBE (1A/125V)  
(for DCC-E2455)
  
- \* 1-751-419-11 CORD, CONNECTION (RCA PIN/PHONO PLUG)
- \* 2-120-526-21 TUBE, SPIRAL
- 3-856-464-12 MANUAL, INSTRUCTION (SPANISH)  
(835K:Canadian, AEP/837K:E/838K:AEP, E)
- 3-856-464-22 MANUAL, INSTRUCTION (ENGLISH)
- 3-856-464-32 MANUAL, INSTRUCTION (FRENCH) (835K:AEP/  
837K:Canadian/838K:Canadian, AEP)
  
- 3-856-464-42 MANUAL, INSTRUCTION (DUTCH)  
(835K:AEP/838K:AEP)
- 3-856-464-52 MANUAL, INSTRUCTION (SWEDISH)  
(835K:AEP/838K:AEP)
- 3-856-464-62 MANUAL, INSTRUCTION (PORTUGUESE)  
(835K:AEP/838K:AEP)
- 3-856-464-72 MANUAL, INSTRUCTION (GERMAN)  
(835K:AEP/838K:AEP)
- 3-856-464-82 MANUAL, INSTRUCTION (ITALIAN)  
(835K:AEP/838K:AEP)
  
- \* 4-916-258-21 TAPE, MAGIC (SMALL)
- \* 4-916-258-31 TAPE, MAGIC (BIG)
- \* 4-957-330-11 HOLDER, BATTERY (for RM-DM9) (837K/838K)
- \* 4-983-794-01 INDIVIDUAL CARTON (838K:US, E)
- \* 4-983-796-01 INDIVIDUAL CARTON (837K:US, E)
  
- \* 4-983-798-01 INDIVIDUAL CARTON (835K:US, UK)
- \* 4-983-823-01 INDIVIDUAL CARTON (838K:Canadian, AEP)
- \* 4-983-826-01 INDIVIDUAL CARTON (838K:AUS)
- \* 4-983-828-01 INDIVIDUAL CARTON (837K:Canadian)
- \* 4-983-830-01 INDIVIDUAL CARTON (835K:Canadian, AEP)
  
- 8-916-813-90 CORD, CAR BATTERY DCC-E2455

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

- 8-951-802-90 REMOTE CONTROL, WIRELESS RM-DM9  
(837K/838K)
- 8-951-804-92 CD ACCESSORY CPA-7//C1
- 8-953-538-90 HEADPHONE MDR-E741//K3 SET  
(835K:Canadian, AEP/837K:Canadian/  
838K:Canadian, AEP)

The components identified by mark <b>△</b> or dotted line with mark <b>△</b> are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque <b>△</b> sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	---



# D-835K/837K/838K

**SONY.**

## SERVICE MANUAL

US Model  
Canadian Model

D-835K/837K/838K

AEP Model

D-835K/838K

UK Model

D-835K

E Model

D-837K/838K

Australian Model

D-838K

## SUPPLEMENT-1

File this supplement with the service manual.


Subject: Addition of service part

(RPC-97009)

### EXPLODED VIEWS (Page 27)

#### (1) CABINET SECTION-1

◀ : Addition Portion

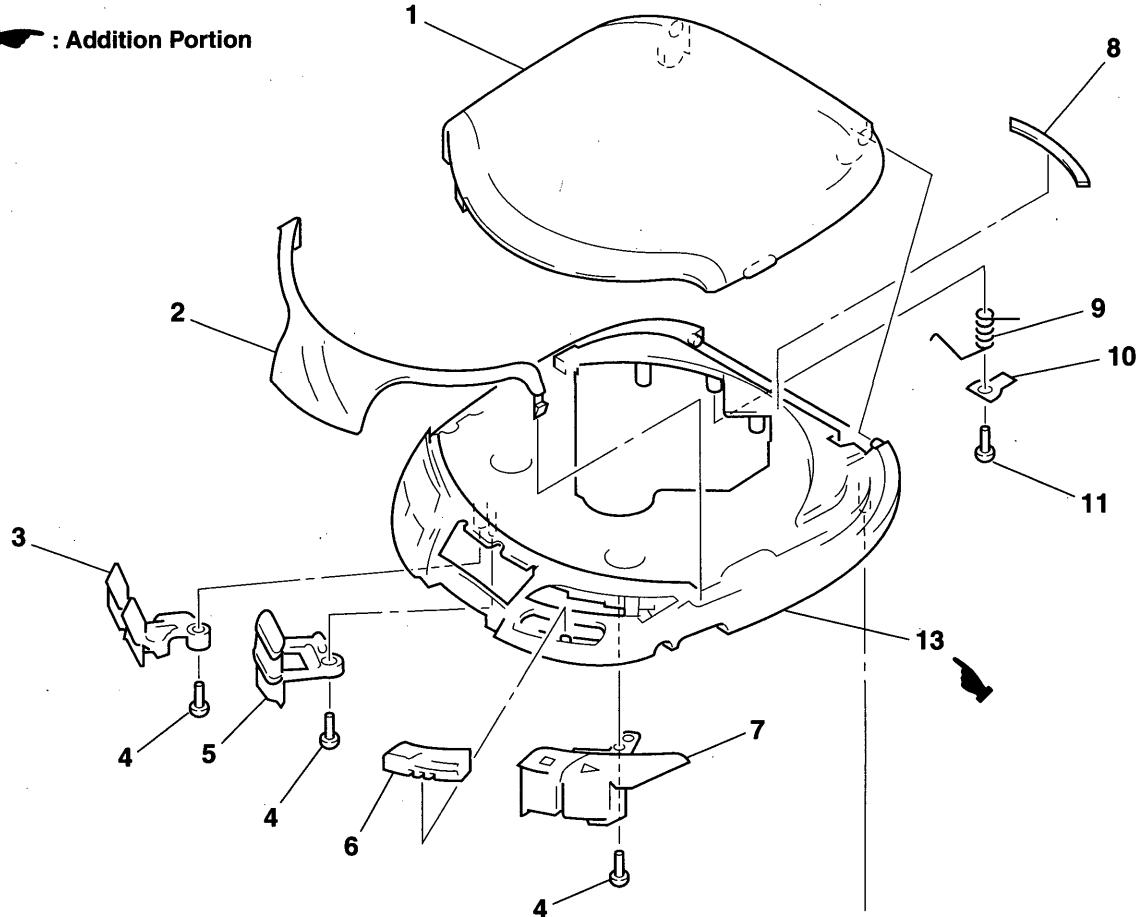

Ref. No.	Part No.	Description	Remark
13	X-4946-488-1	CABINET (UPPER) ASSY	